YAMAHA

PARTS CATALOGUE

YZ250FY (5XCR) CANADA
YZ250F (5XCS) EUROPE
YZ250F (5XCT) JAPAN
YZ250FY (5XCU) OCEANIA,SOUTH AFRICA

1H5XC-100E1

( )

YAMAHA
GENUINE
Parts & Accessories

YZ250FY/YZ250F
PARTS CATALOGUE

1st edition, June 2008

FOREWORD

This Parts Catalogue is related to the parts for the model(s) on the cover page. When you are ordering replacement parts, please refer to this Parts Catalogue and quote both part numbers and part names correctly.

1. Modifications or additions which have been made after the issue of the Parts Catalogue will be announced in the Parts News.
   It is advisable that you make the necessary corrections to the Parts Catalogue according to the Parts News.

2. Abbreviations
   The following abbreviations are used in this Parts Catalogue.

   "UR" Use specified parts number.
   "UN" Use as many as needed.
   "AP" Alternate Parts
   "LM" Locally Made (Parts need to be ordered locally)
   "F#" Frame No. (Applicable machine No.)
   "O/S" Over Size

3. The number of components for assembly
   - Parts, which are to be supplied in an assembly, are listed with a dot (.) in front of the part name as shown below.
   - The numeral appearing to the right of each component part indicates the quantity of parts for each assembly unit.

PART NO.	DESCRIPTION	Q'TY	REMARKS
2F5–83310–60	FRONT FLASHER LIGHT ASSY	2	
115–83311–60	.BULB (6V–18W)	1	

4. Applicable colours of graphics are represented in the "REMARKS" as shown below.


PART NO.	DESCRIPTION	Q'TY	REMARKS
2N4–24110–00–X5	FUEL TANK COMP.	2	MXR
3J1–24240–10	.GRAPHIC, FUEL TANK	1	FOR MXR

5. Note that the illustrations for reference in finding parts numbers are not to be used for assembling. When assembling, please use the applicable service manual.


6. The asterisk (*) before a reference number indicates modified items after the first edition.

7. Applicable Serial No.

Engine Serial No.

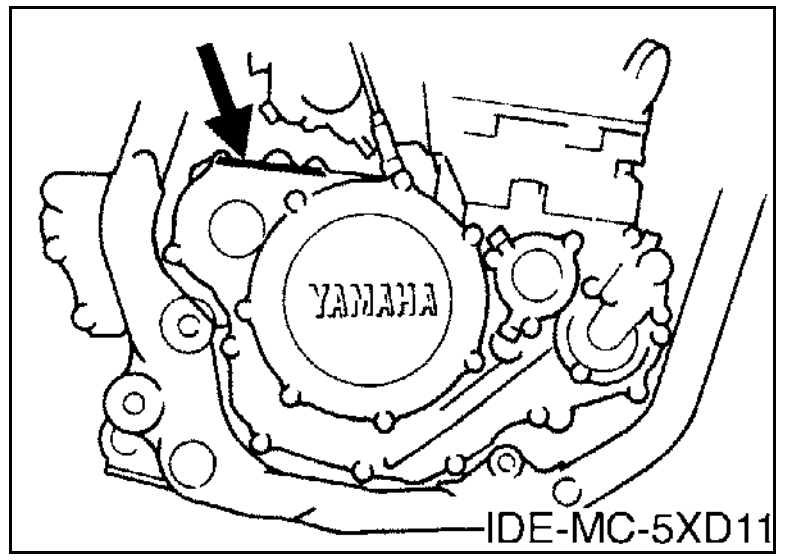

Frame Serial No.

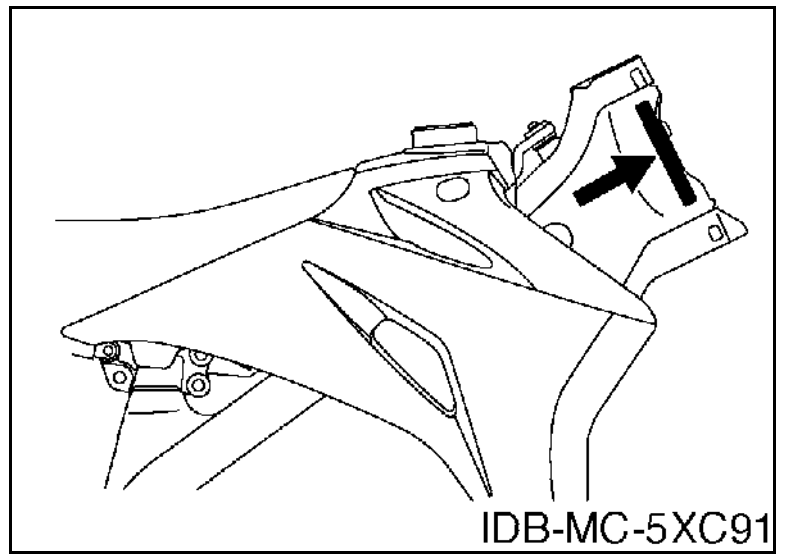

8. Applicable Colour Code (The (*) mark shows Model colour.)

Abbreviation	Colour Name	Colour Code
DPBSE(*)	DEEP PURPLISH BLUE SOLID E	0583
PWS1(*)	PURPLISH WHITE SOLID 1	0206

MODEL LABEL

(1) A label called “Model Label” is affixed in the location as indicated in (3) below.
When using this parts catalogue, please be sure to cross–reference the “model code – production code No.” in the catalogue with the “model code – production code No.” indicated on the Model Label affixed onto the product concerned.


(2) “Model Label” Indication

a	b
○ xxxx – xxx	
● x c	

a: Model Type Code
b: Production Code No.
c: Colouring Type

○ 4TW1–010
● A

(3) Model Label Affixing Location

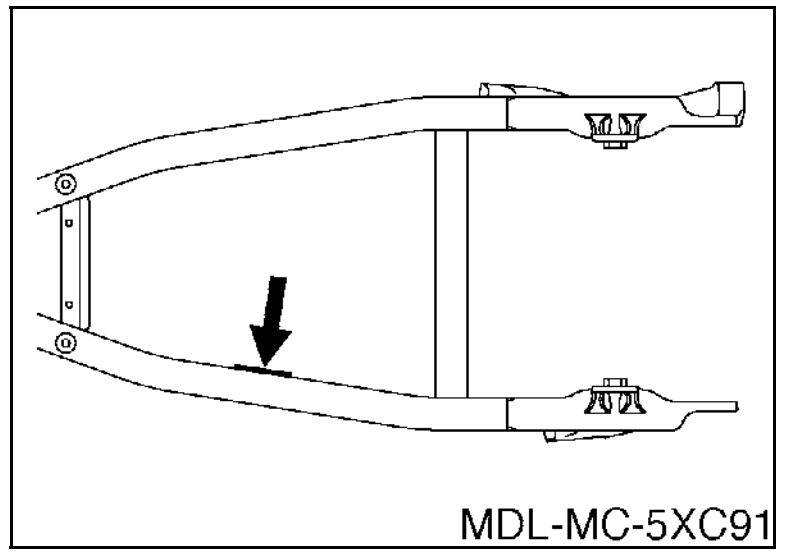

(4) Colouring Information

Model Code	Colouring Type Code	Colour Code	Colour Name	Abbreviation
5XCR	A	0583	DEEP PURPLISH BLUE SOLID E	DPBSE
	B	0206	PURPLISH WHITE SOLID 1	PWS1
5XCS	A	0583	DEEP PURPLISH BLUE SOLID E	DPBSE
	B	0206	PURPLISH WHITE SOLID 1	PWS1
5XCT	A	0583	DEEP PURPLISH BLUE SOLID E	DPBSE
	B	0206	PURPLISH WHITE SOLID 1	PWS1
5XCU	A	0583	DEEP PURPLISH BLUE SOLID E	DPBSE
	B	0206	PURPLISH WHITE SOLID 1	PWS1

(5) Model Code – Production Code Number of Model Listed in This Parts Catalogue


Model Code	Production Code No.	Country (destination)	Model Code	Production Code No.	Country (destination)
5XCR	020	CANADA			
5XCS	010	BELGIUM			
		FINLAND			
		FRANCE			
		GERMANY			
		GREECE			
		IRELAND			
		ITALY			
		PORTUGAL			
		SPAIN			
		SWEDEN			
		UNITED KINGDOM			
5XCT	010	JAPAN			
5XCU	010	AUSTRALIA			
		NEW ZEALAND			
		SOUTH AFRICA			

CONTENTS

ENGINE

CHASSIS


INDEX

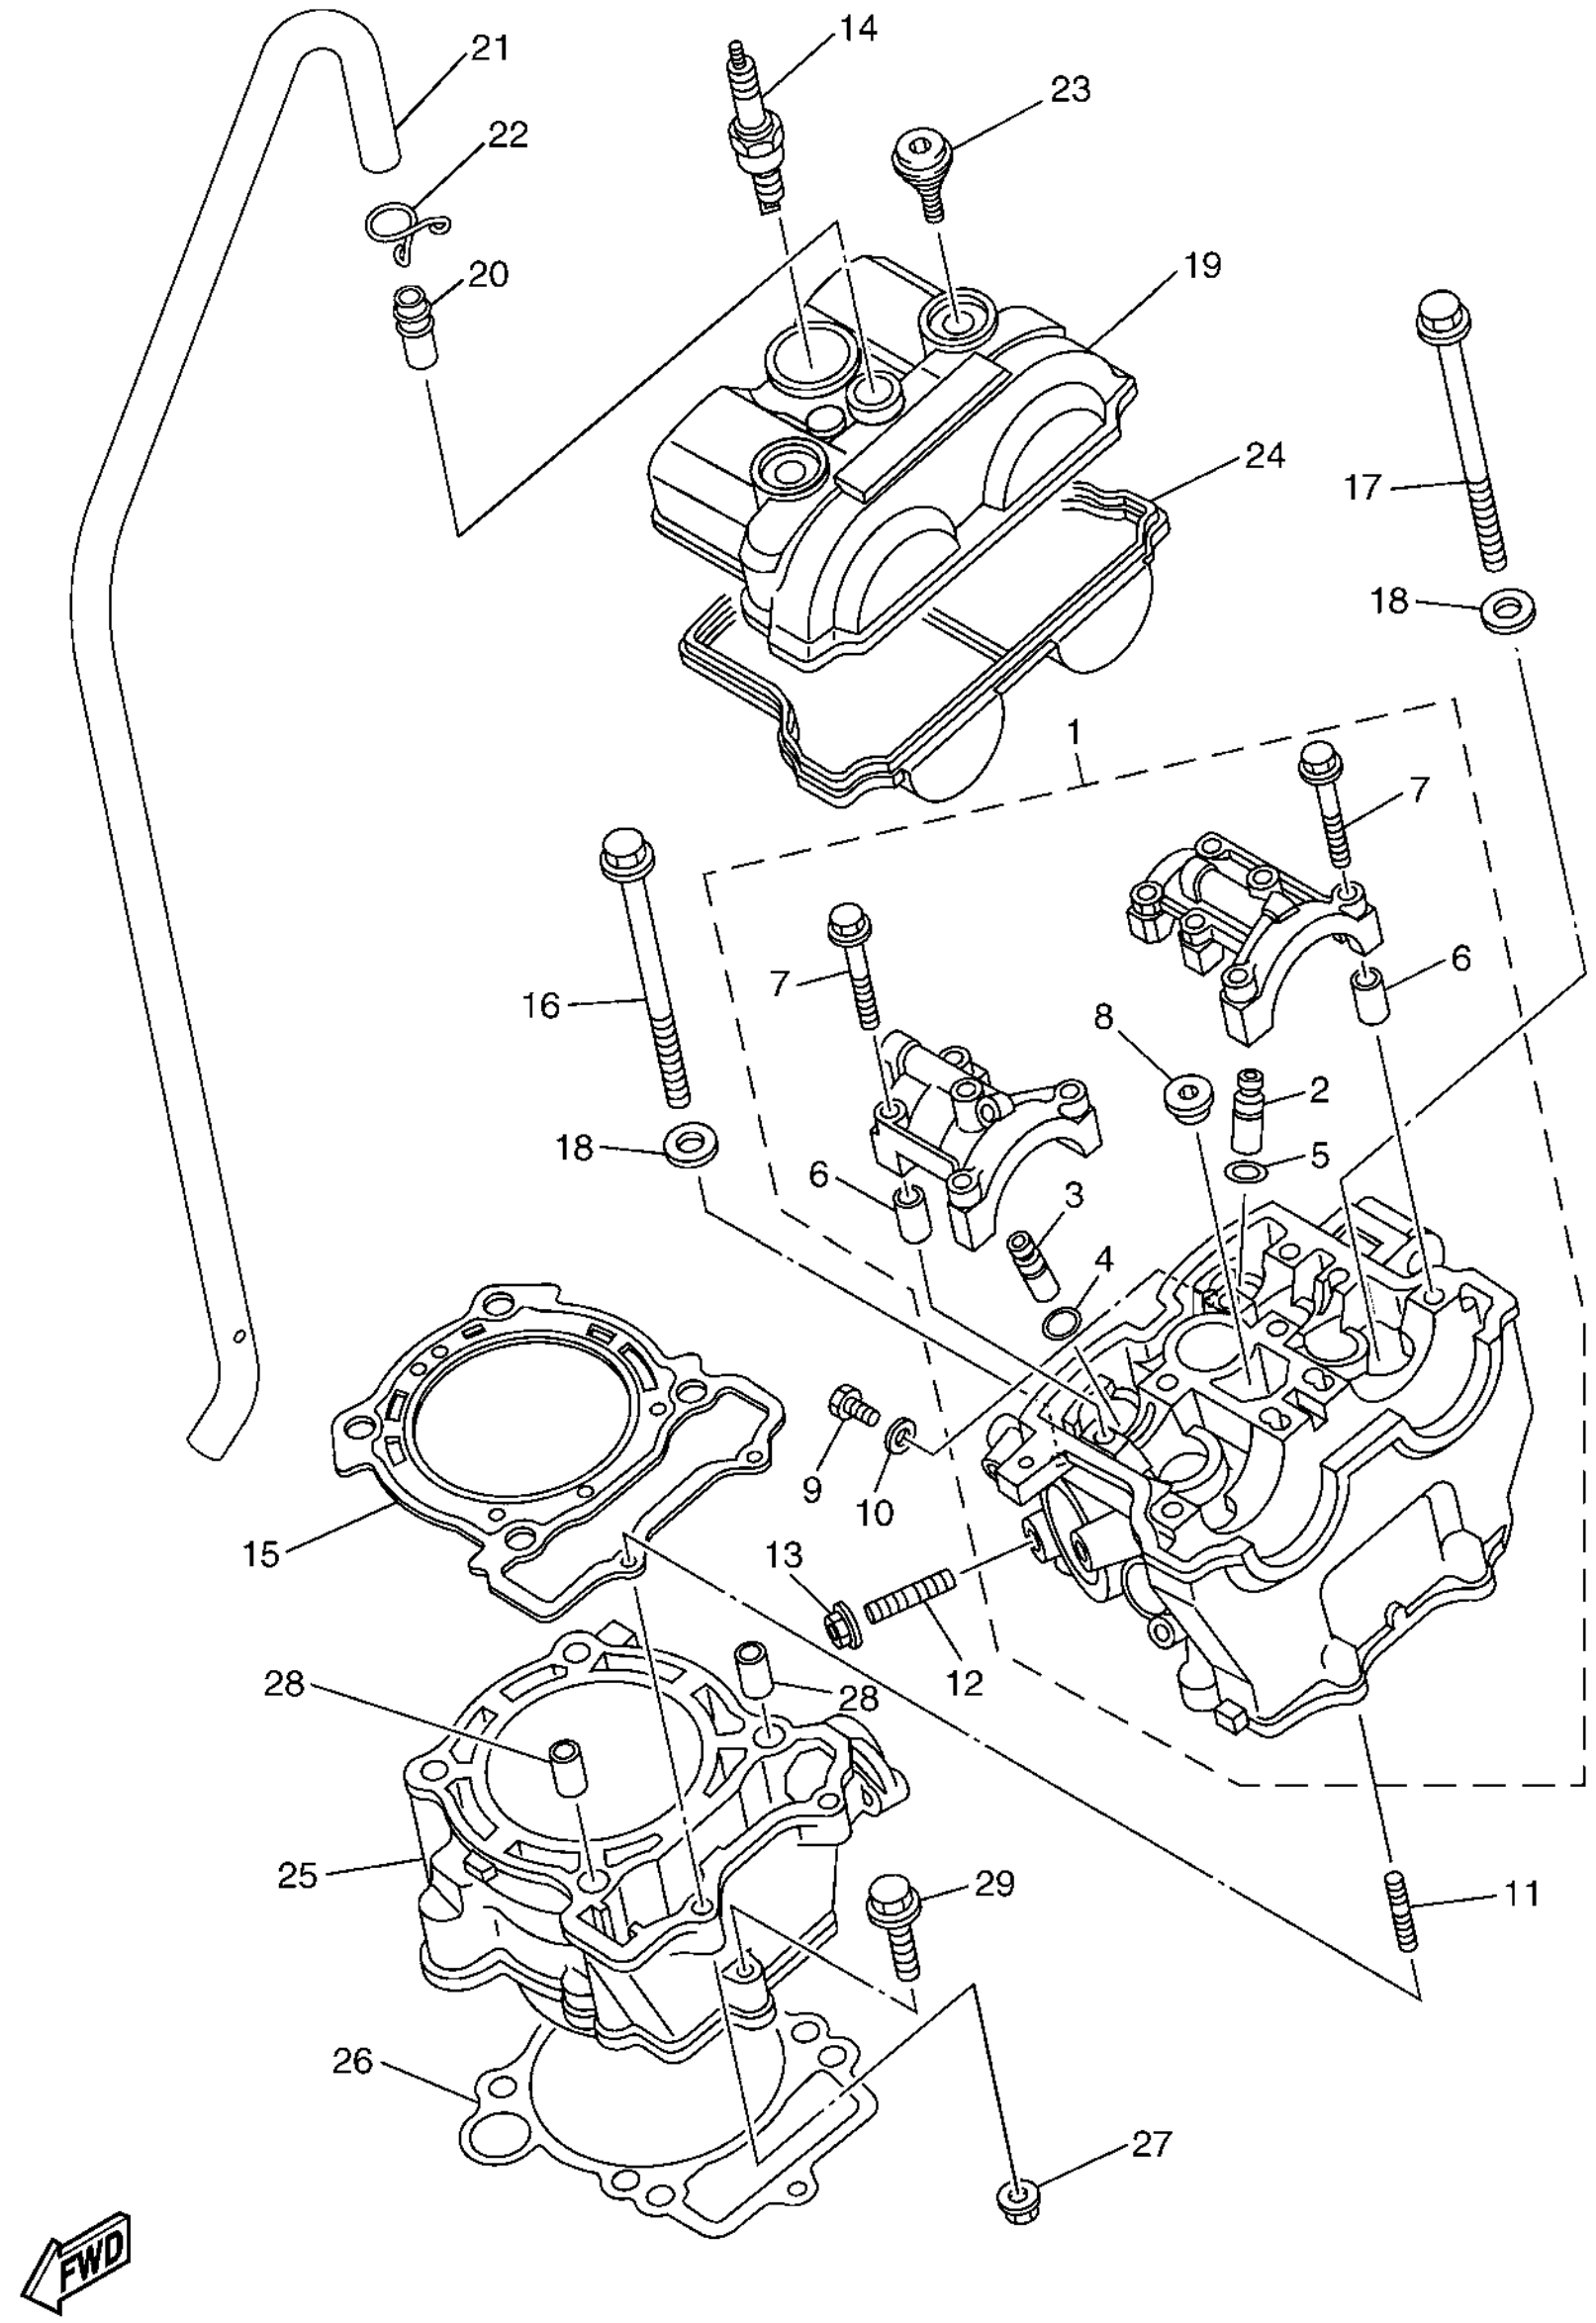

5XCG100-F010

FIG. 1 CYLINDER


REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5XC–11102–20	CYLINDER HEAD ASSY	1	1	1	1		
2	5NL–11133–10	.GUIDE, VALVE 1	3	3	3	3		
3	5NL–11134–10	.GUIDE, VALVE 2	2	2	2	2		
4	93440–10153	.CIRCLIP	2	2	2	2		
5	93440–07149	.CIRCLIP	3	3	3	3		
6	91808–16023	.PIN, DOWEL	4	4	4	4		
7	90105–06027	.BOLT, FLANGE	10	10	10	10		
8	90340–12007	.PLUG, STRAIGHT SCREW	1	1	1	1		
9	95022–06010	BOLT, FLANGE	1	1	1	1		
10	90430–06014	GASKET	1	1	1	1		
11	90116–06038	BOLT, STUD	2	2	2	2		
12	95612–08620	BOLT, STUD	2	2	2	2		
13	95702–08500	NUT, WITH WASHER	2	2	2	2		
14	94701–00411	PLUG, SPARK (NGK R CR8E)	1	1		1		STD
	94703–00411	PLUG, SPARK (NGK R CR8E)			1			STD
	94701–00410	PLUG, SPARK (NGK R CR9E)	1	1		1		AP
	94703–00410	PLUG, SPARK (NGK R CR9E)			1			AP
15	5NL–11181–00	GASKET, CYLINDER HEAD 1	1	1	1	1		
16	90105–09004	BOLT, FLANGE	2	2	2	2		
17	90105–09002	BOLT, FLANGE	2	2	2	2		
18	90201–096J9	WASHER, PLATE	4	4	4	4		
19	5NL–11191–40	COVER, CYLINDER HEAD 1	1	1	1	1		
20	371–11167–01	PIPE, BREATHER 2	1	1	1	1		
21	5XC–11166–00	PIPE, BREATHER 1	1	1	1	1		
22	90467–140A4	CLIP	1	1	1	1		
23	5UM–1119E–00	BOLT, COVER HEAD	2	2	2	2		
24	5NL–11193–00	GASKET, HEAD COVER 1	1	1	1	1		

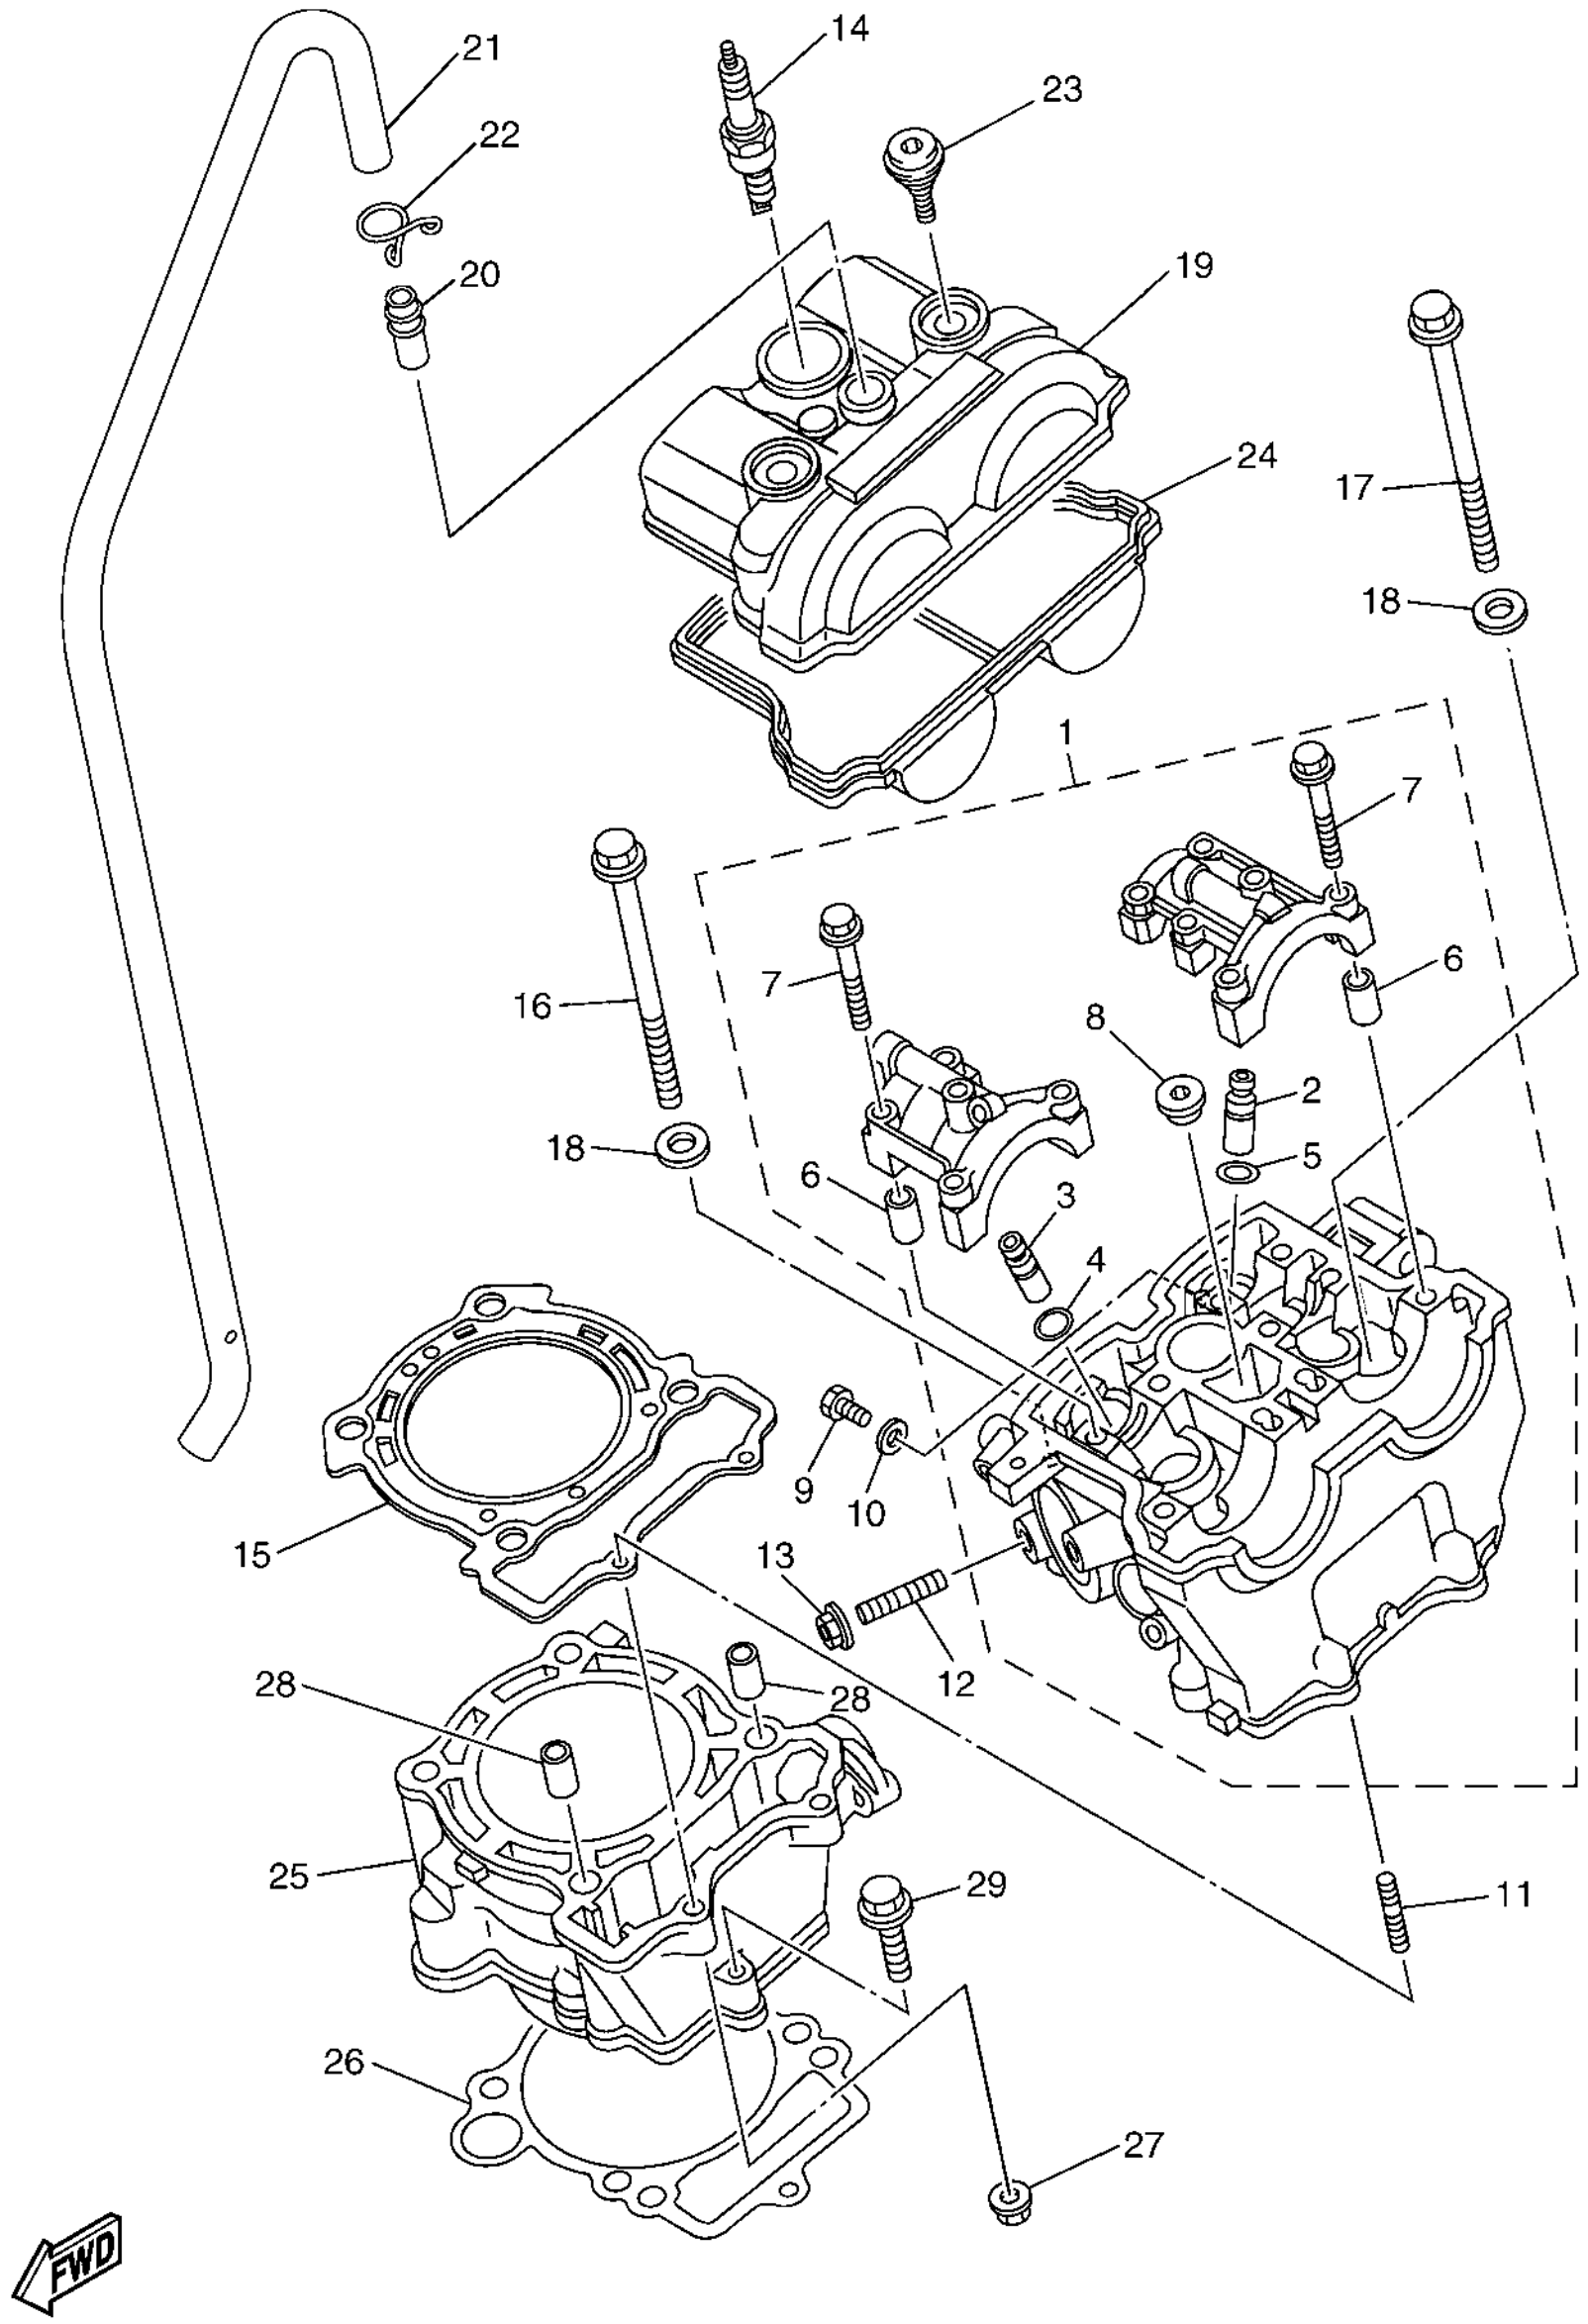

5XCG100-F010

FIG. 1 CYLINDER

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
25	5XC–11311–10	CYLINDER 1	1	1	1	1		
26	5NL–11351–00	GASKET, CYLINDER	1	1	1	1		
27	95702–06500	NUT, FLANGE	2	2	2	2		
28	93612–16254	PIN, DOWEL	2	2	2	2		
29	95022–06035	BOLT, FLANGE	1	1	1	1		

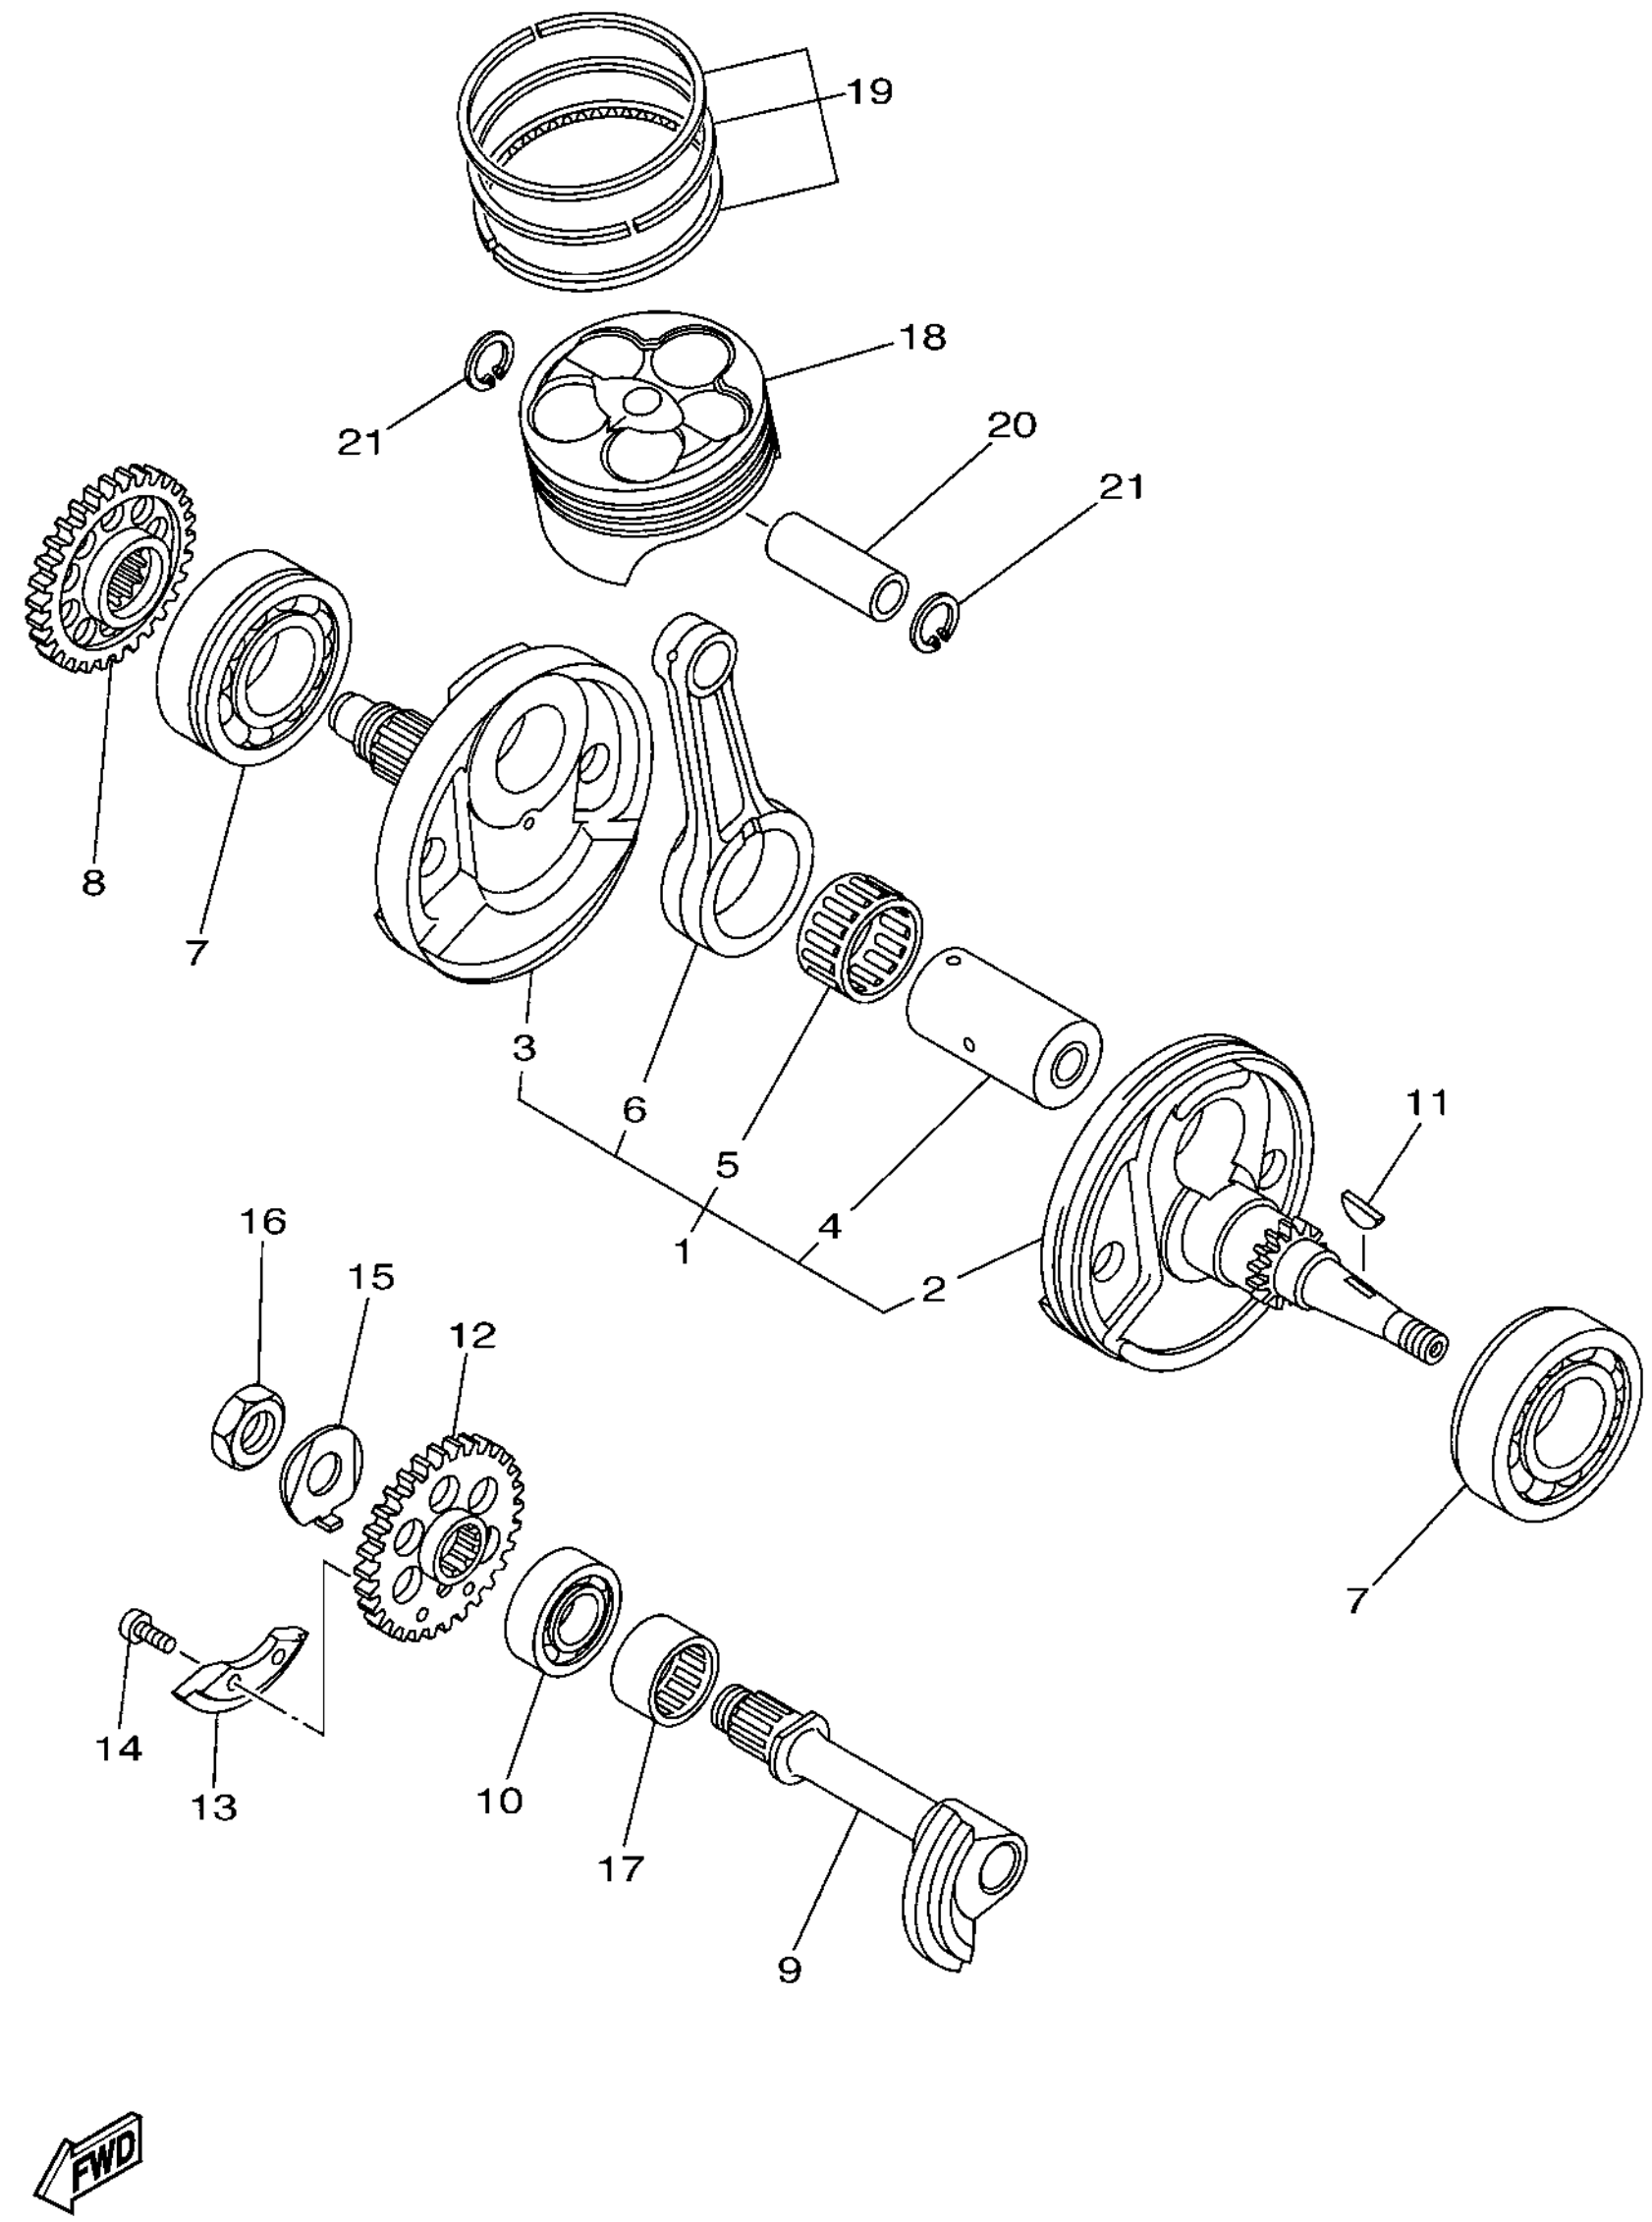

5XCL100-G020

FIG. 2 CRANKSHAFT & PISTON

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5XC–11400–20	CRANKSHAFT ASSY	1	1	1	1		
2	5UL–11412–20	.CRANK 1	1	1	1	1		
3	5UL–11422–10	.CRANK 2	1	1	1	1		
4	5XC–11681–00	.PIN, CRANK 1	1	1	1	1		
5	93310–63238	.BEARING	1	1	1	1		
6	5XC–11651–00	.ROD, CONNECTING	1	1	1	1		
7	93306–20648	BEARING	2	2	2	2		
8	5NL–11536–10	GEAR, DRIVE	1	1	1	1		
9	5NL–11455–00	SHAFT 1	1	1	1	1		
10	93306–20335	BEARING	1	1	1	1		
11	90280–03006	KEY, WOODRUFF	1	1	1	1		
12	5NL–11531–00	GEAR, BALANCE WEIGHT	1	1	1	1		
13	5NL–11454–00	WEIGHT 1	1	1	1	1		
14	90149–06084	SCREW	2	2	2	2		
15	90215–14204	WASHER, LOCK	1	1	1	1		
16	90170–14171	NUT	1	1	1	1		
17	93311–32261	BEARING	1	1	1	1		
18	5XC–11631–00	PISTON (STD)	1	1	1	1		
19	5NL–11603–00	PISTON RING SET (STD)	1	1	1	1		
20	5NL–11633–00	PIN, PISTON	1	1	1	1		
21	93420–16086	CIRCLIP	2	2	2	2		


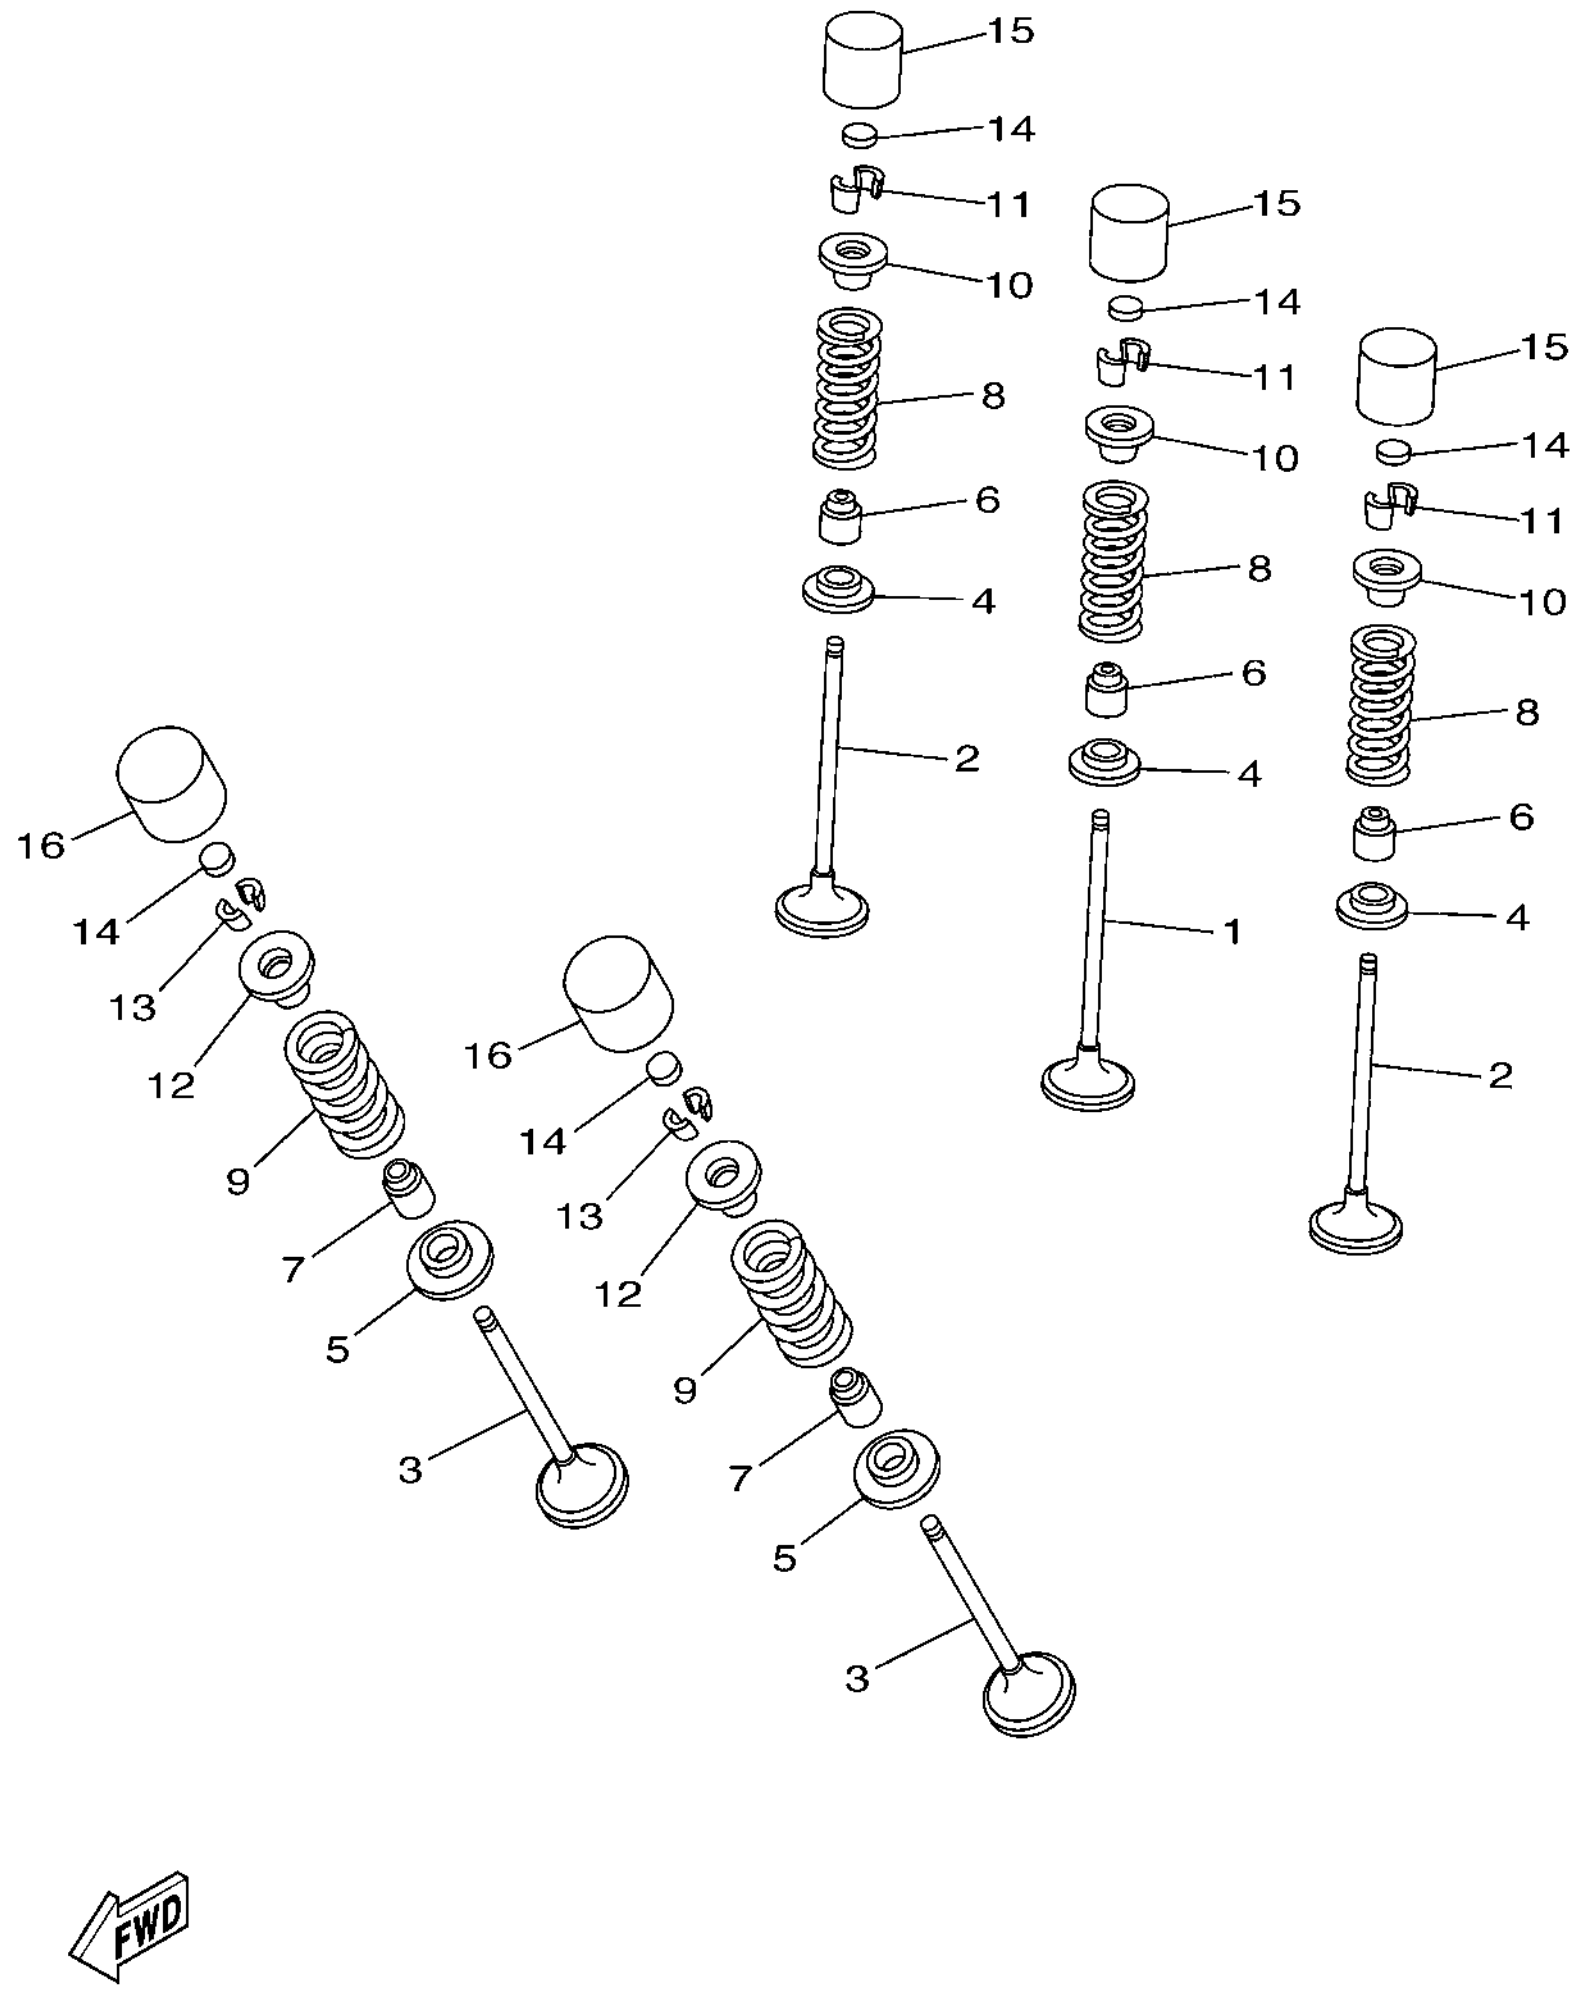


FIG. 3 VALVE

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5NL–12111–20	VALVE, INTAKE	1	1	1	1		
2	5NL–12112–20	VALVE, INTAKE 2	2	2	2	2		
3	5NL–12121–10	VALVE, EXHAUST	2	2	2	2		
4	5NL–12116–00	SEAT, VALVE SPRING	3	3	3	3		
5	3GM–12126–00	SEAT, VALVE SPRING 2	2	2	2	2		
6	4TV–12119–00	SEAL, VALVE STEM	3	3	3	3		
7	4SV–12119–00	SEAL, VALVE STEM	2	2	2	2		
8	5NL–12113–00	SPRING, VALVE INNER	3	3	3	3		
9	5NL–12114–00	SPRING, VALVE OUTER	2	2	2	2		
10	1HX–12117–00	RETAINER, VALVE SPRING	3	3	3	3		
11	1HX–12118–00	COTTER, VALVE	6	6	6	6		
12	1WG–12117–00	RETAINER, VALVE SPRING	2	2	2	2		
13	1WG–12118–00	COTTER, VALVE	4	4	4	4		
14	1HX–12168–00	PAD, ADJUSTING 2 (1.20)	5	5	5	5		UR
	1HX–12168–20	PAD, ADJUSTING 2 (1.25)	5	5	5	5		UR
	1HX–12168–40	PAD, ADJUSTING 2 (1.30)	5	5	5	5		UR
	1HX–12168–60	PAD, ADJUSTING 2 (1.35)	5	5	5	5		UR
	1HX–12168–80	PAD, ADJUSTING 2 (1.40)	5	5	5	5		UR
	1HX–12168–A0	PAD, ADJUSTING 2 (1.45)	5	5	5	5		UR
	1HX–12168–F0	PAD, ADJUSTING 2 (1.50)	5	5	5	5		UR
	1HX–12168–H1	PAD, ADJUSTING 2 (1.55)	5	5	5	5		UR
	1HX–12168–K1	PAD, ADJUSTING 2 (1.60)	5	5	5	5		UR
	1HX–12168–M1	PAD, ADJUSTING 2 (1.65)	5	5	5	5		UR
	1HX–12168–R1	PAD, ADJUSTING 2 (1.70)	5	5	5	5		UR
	1HX–12168–U1	PAD, ADJUSTING 2 (1.75)	5	5	5	5		UR
	1HX–12168–W1	PAD, ADJUSTING 2 (1.80)	5	5	5	5		UR
	1HX–12168–Y1	PAD, ADJUSTING 2 (1.85)	5	5	5	5		UR

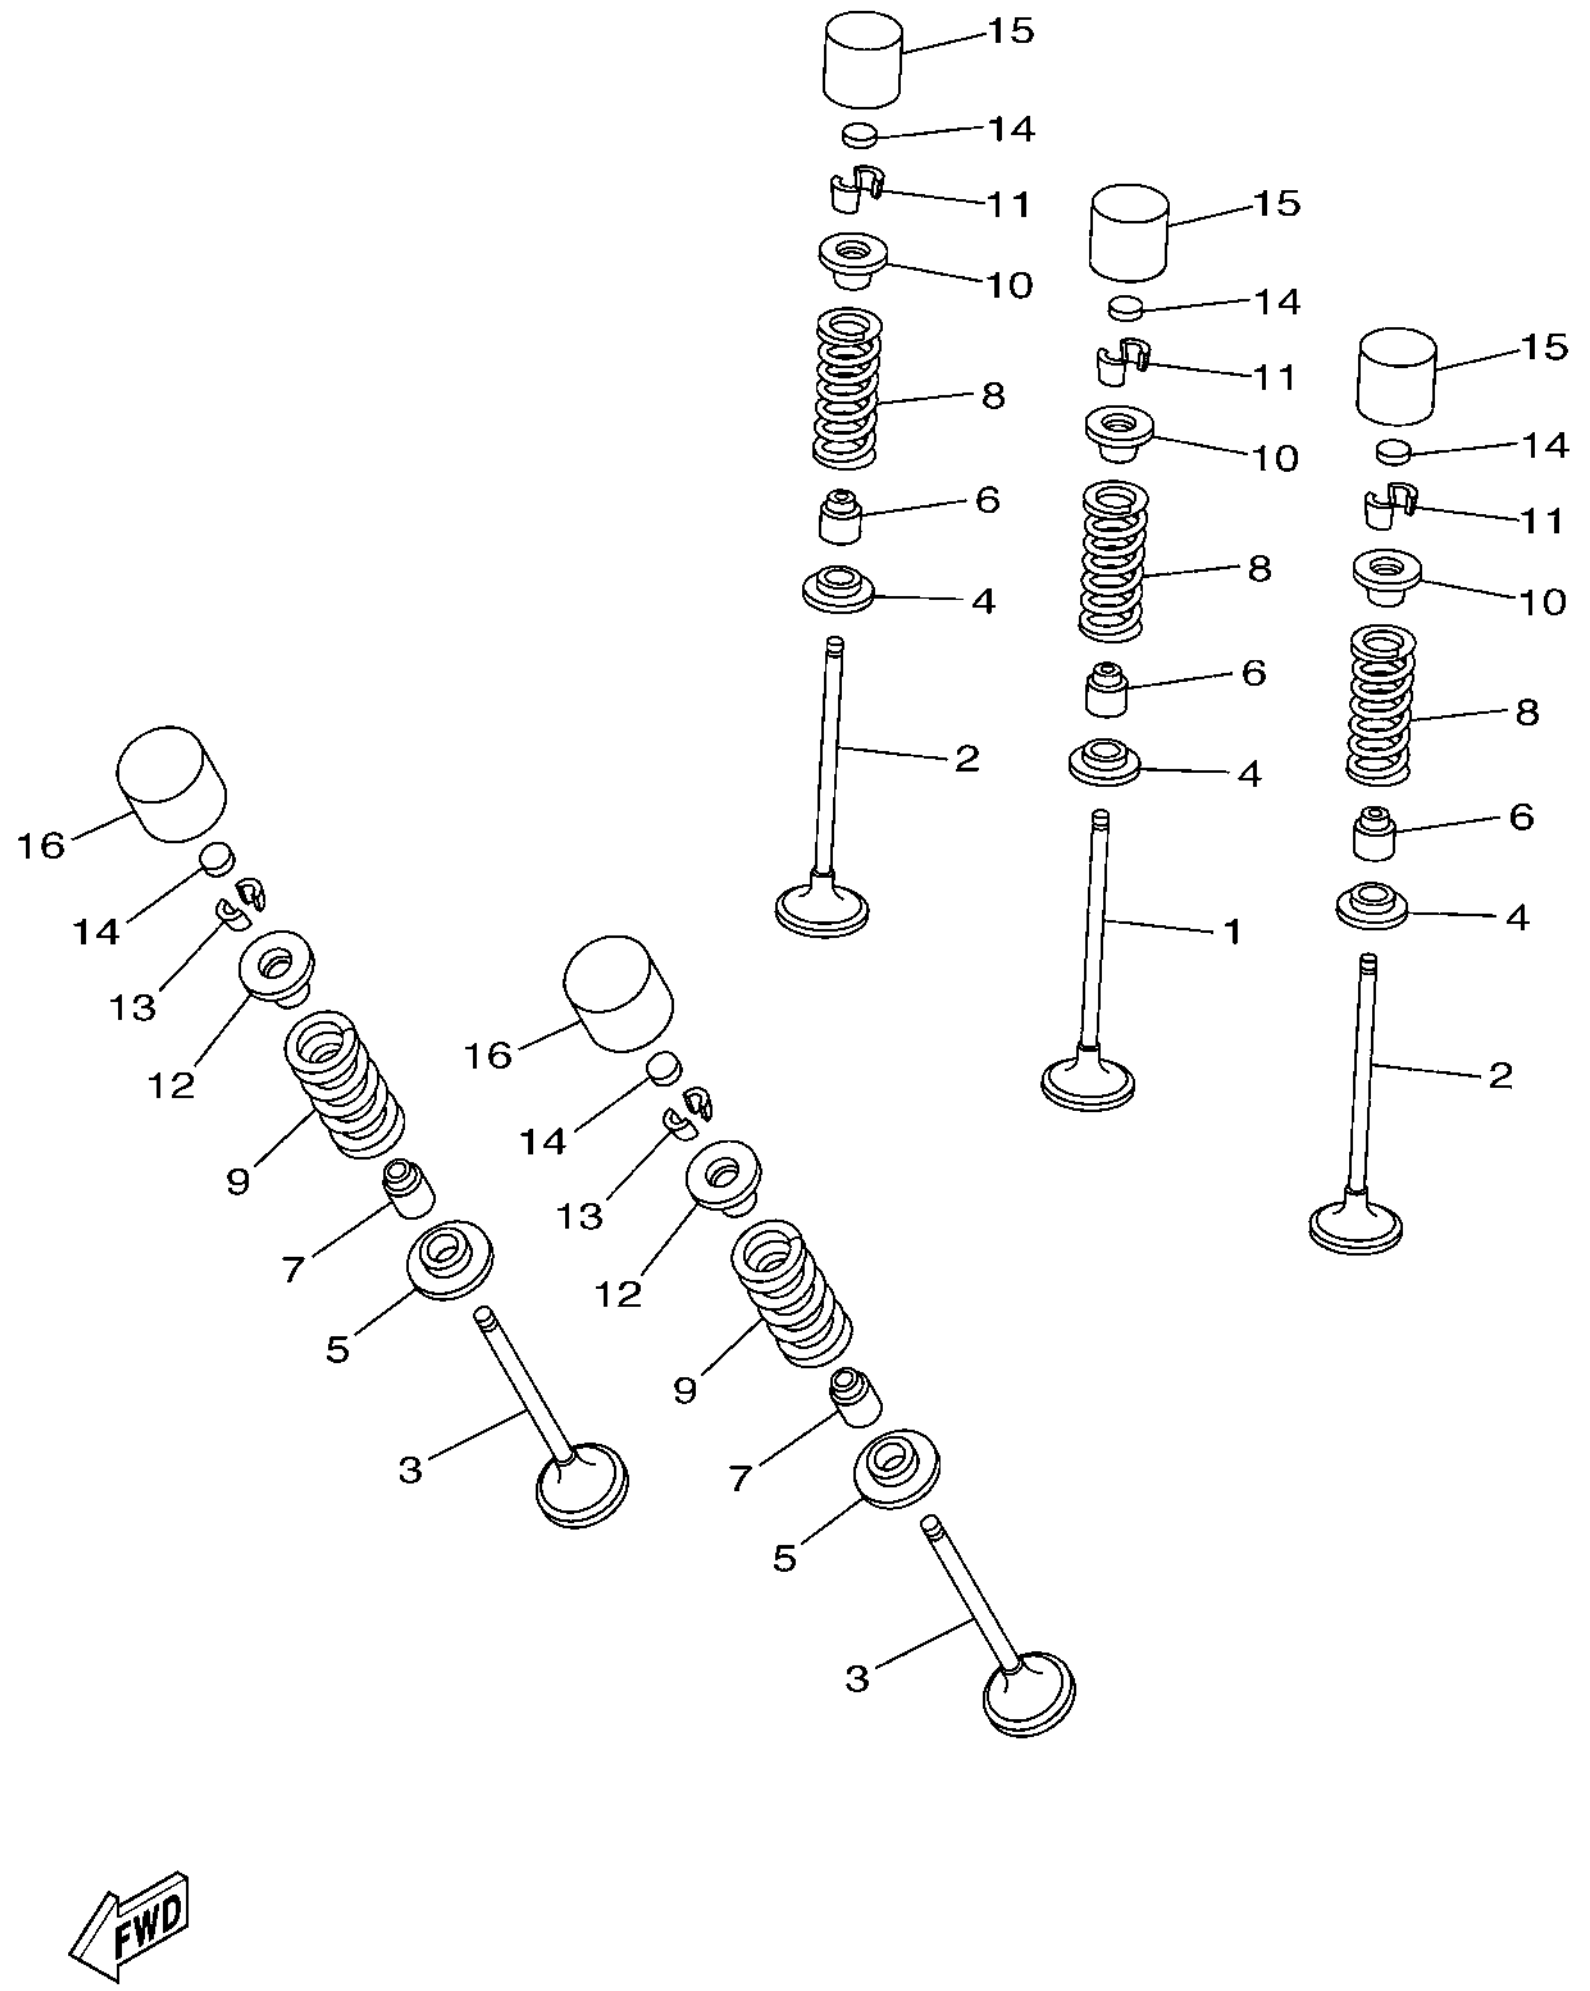

5NL1100-1030

FIG. 3 VALVE

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
14	1HX–12169–11	PAD, ADJUSTING 2 (1.90)	5	5	5	5		UR
	1HX–12169–31	PAD, ADJUSTING 2 (1.95)	5	5	5	5		UR
	1HX–12169–50	PAD, ADJUSTING 2 (2.00)	5	5	5	5		UR
	1HX–12169–70	PAD, ADJUSTING 2 (2.05)	5	5	5	5		UR
	1HX–12169–90	PAD, ADJUSTING 2 (2.10)	5	5	5	5		UR
	1HX–12169–E0	PAD, ADJUSTING 2 (2.15)	5	5	5	5		UR
	1HX–12169–G0	PAD, ADJUSTING 2 (2.20)	5	5	5	5		UR
	1HX–12169–J0	PAD, ADJUSTING 2 (2.25)	5	5	5	5		UR
	1HX–12169–L0	PAD, ADJUSTING 2 (2.30)	5	5	5	5		UR
	1HX–12169–N0	PAD, ADJUSTING 2 (2.35)	5	5	5	5		UR
	1HX–12169–T0	PAD, ADJUSTING 2 (2.40)	5	5	5	5		UR
15	3LN–12153–10	LIFTER, VALVE	3	3	3	3		YELLOW
16	3FV–12153–10	LIFTER, VALVE	2	2	2	2		YELLOW

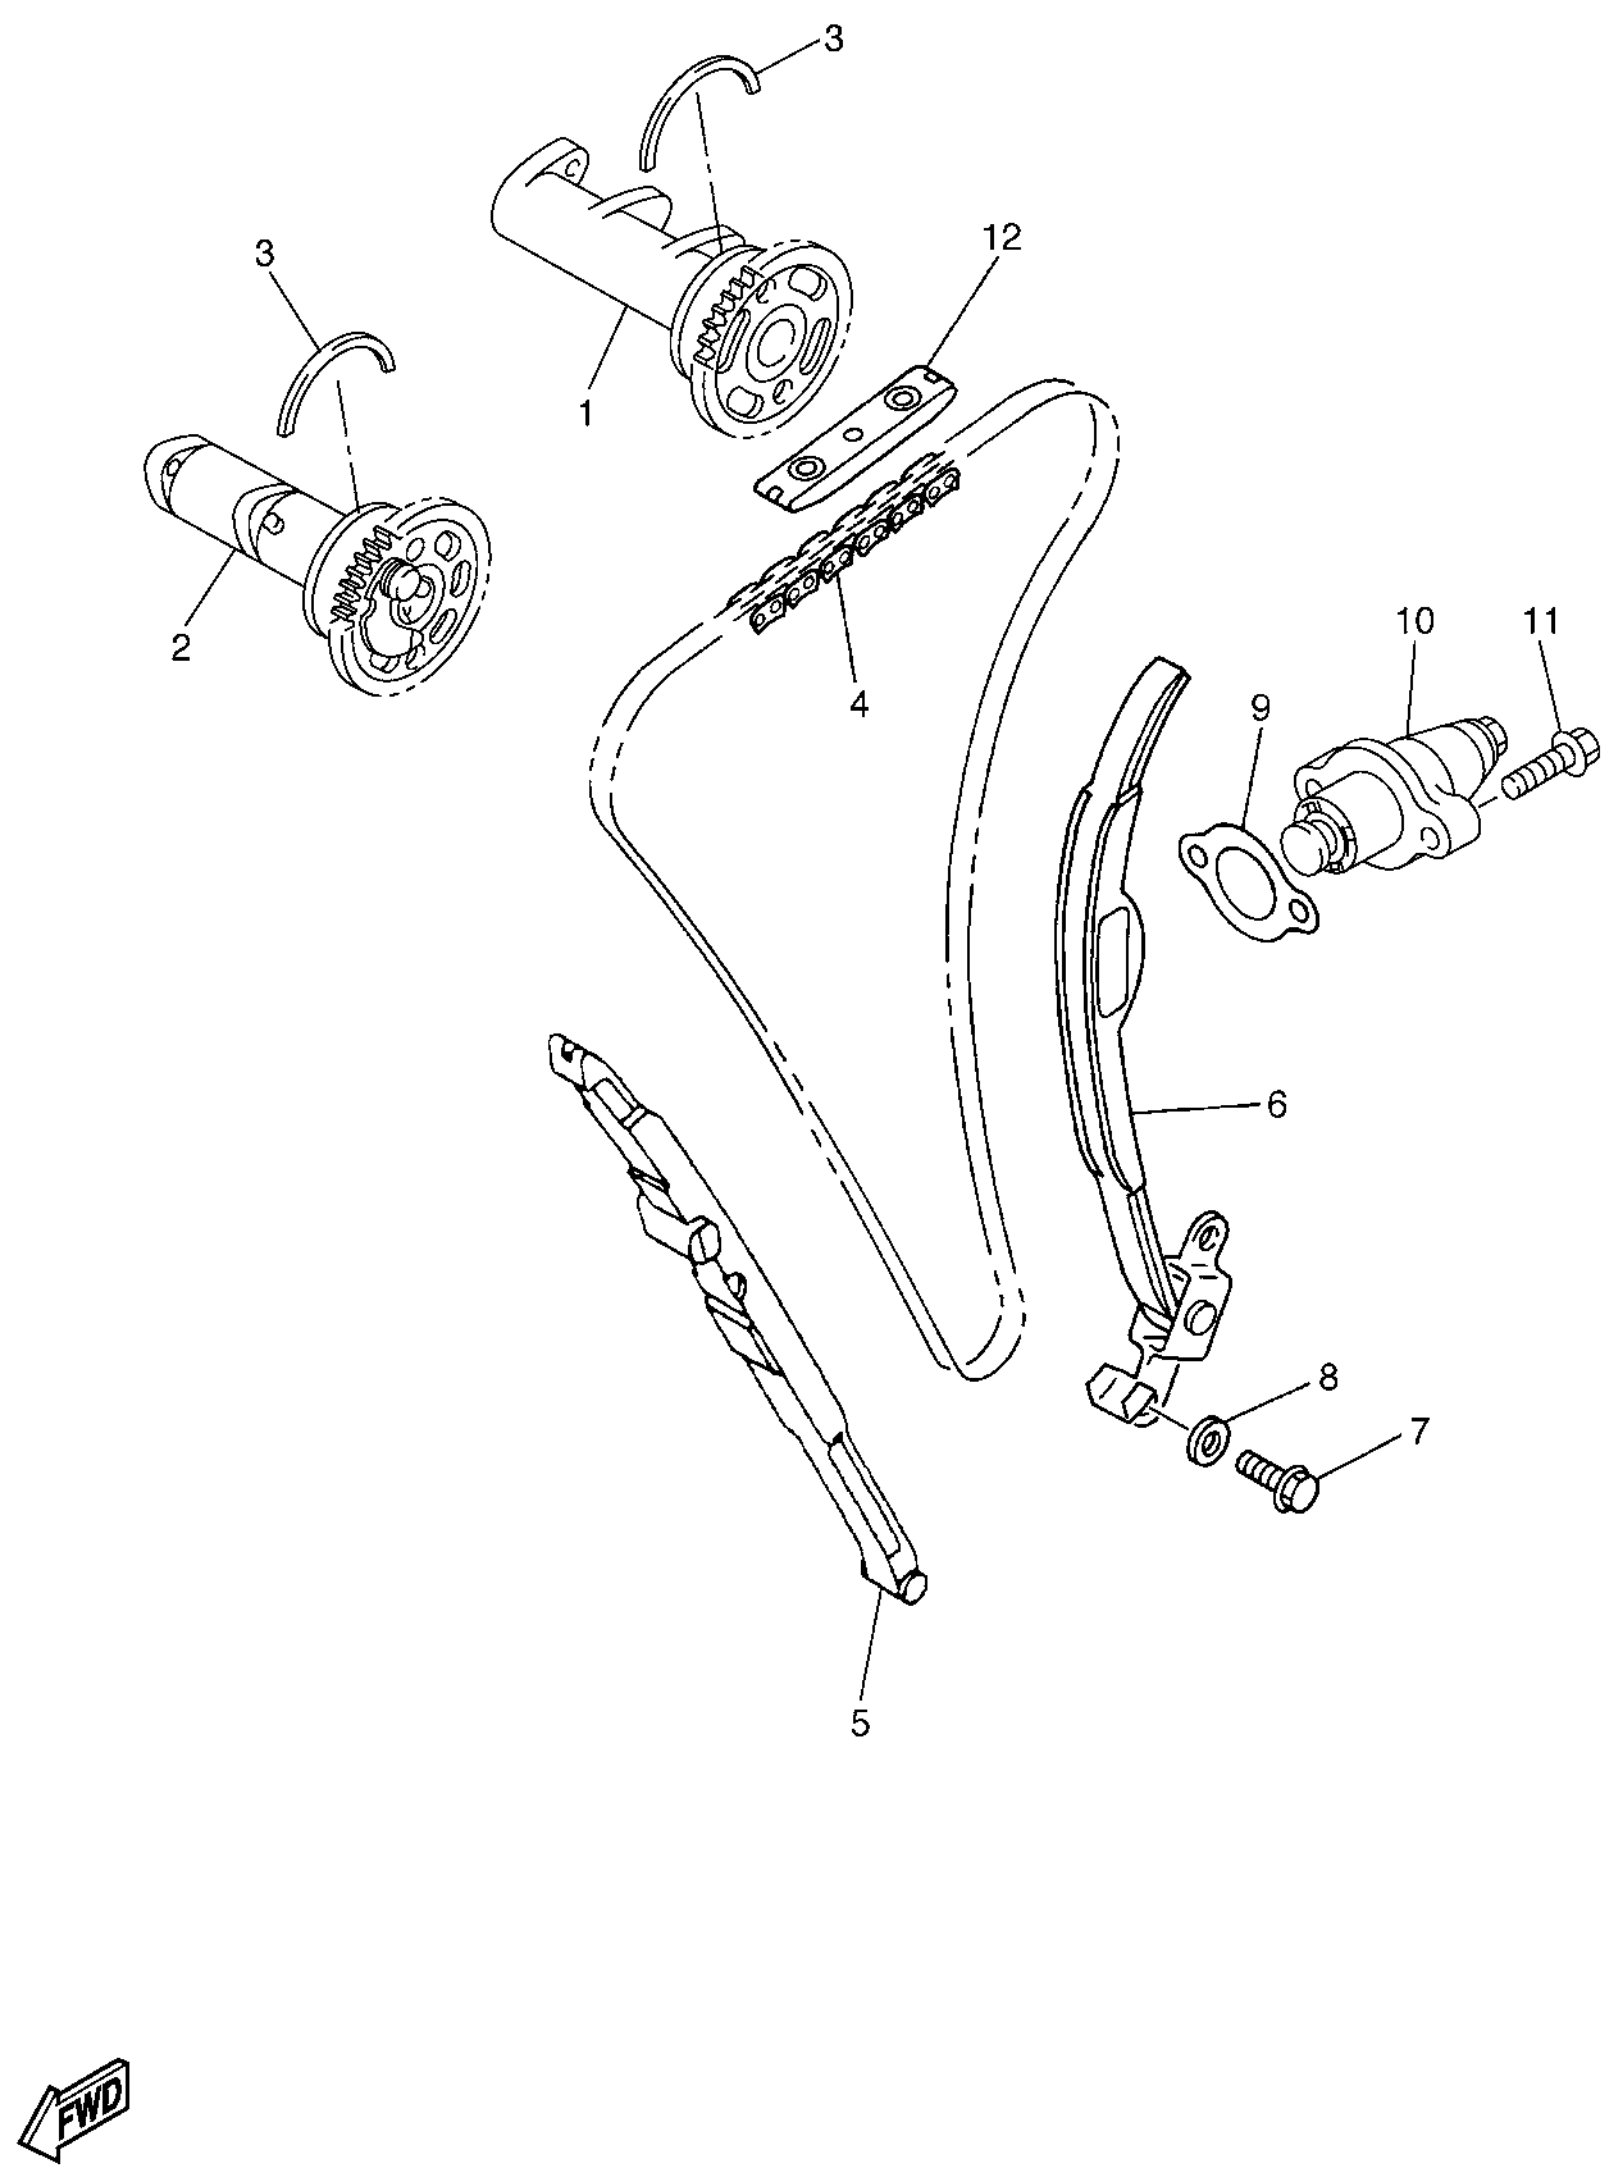


FIG. 4 CAMSHAFT & CHAIN

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5UL–12170–10	CAMSHAFT ASSY 1	1	1	1	1		
2	5UL–12180–10	CAMSHAFT ASSY 2	1	1	1	1		
3	93440–41178	CIRCLIP	2	2	2	2		
4	94591–53114	CHAIN	1	1	1	1		
5	5NL–12251–10	DAMPER, CHAIN 1	1	1	1	1		
6	5NL–12252–00	DAMPER, CHAIN 2	1	1	1	1		
7	97022–06016	BOLT	2	2	2	2		
8	92902–06600	WASHER, PLATE	2	2	2	2		
9	4FM–12213–00	GASKET, TENSIONER CASE	1	1	1	1		
10	5TA–12210–20	TENSIONER ASSY, CAM CHAIN	1	1	1	1		
11	95022–06025	BOLT, FLANGE	2	2	2	2		
12	5BE–12241–00	GUIDE, STOPPER 2	1	1	1	1		


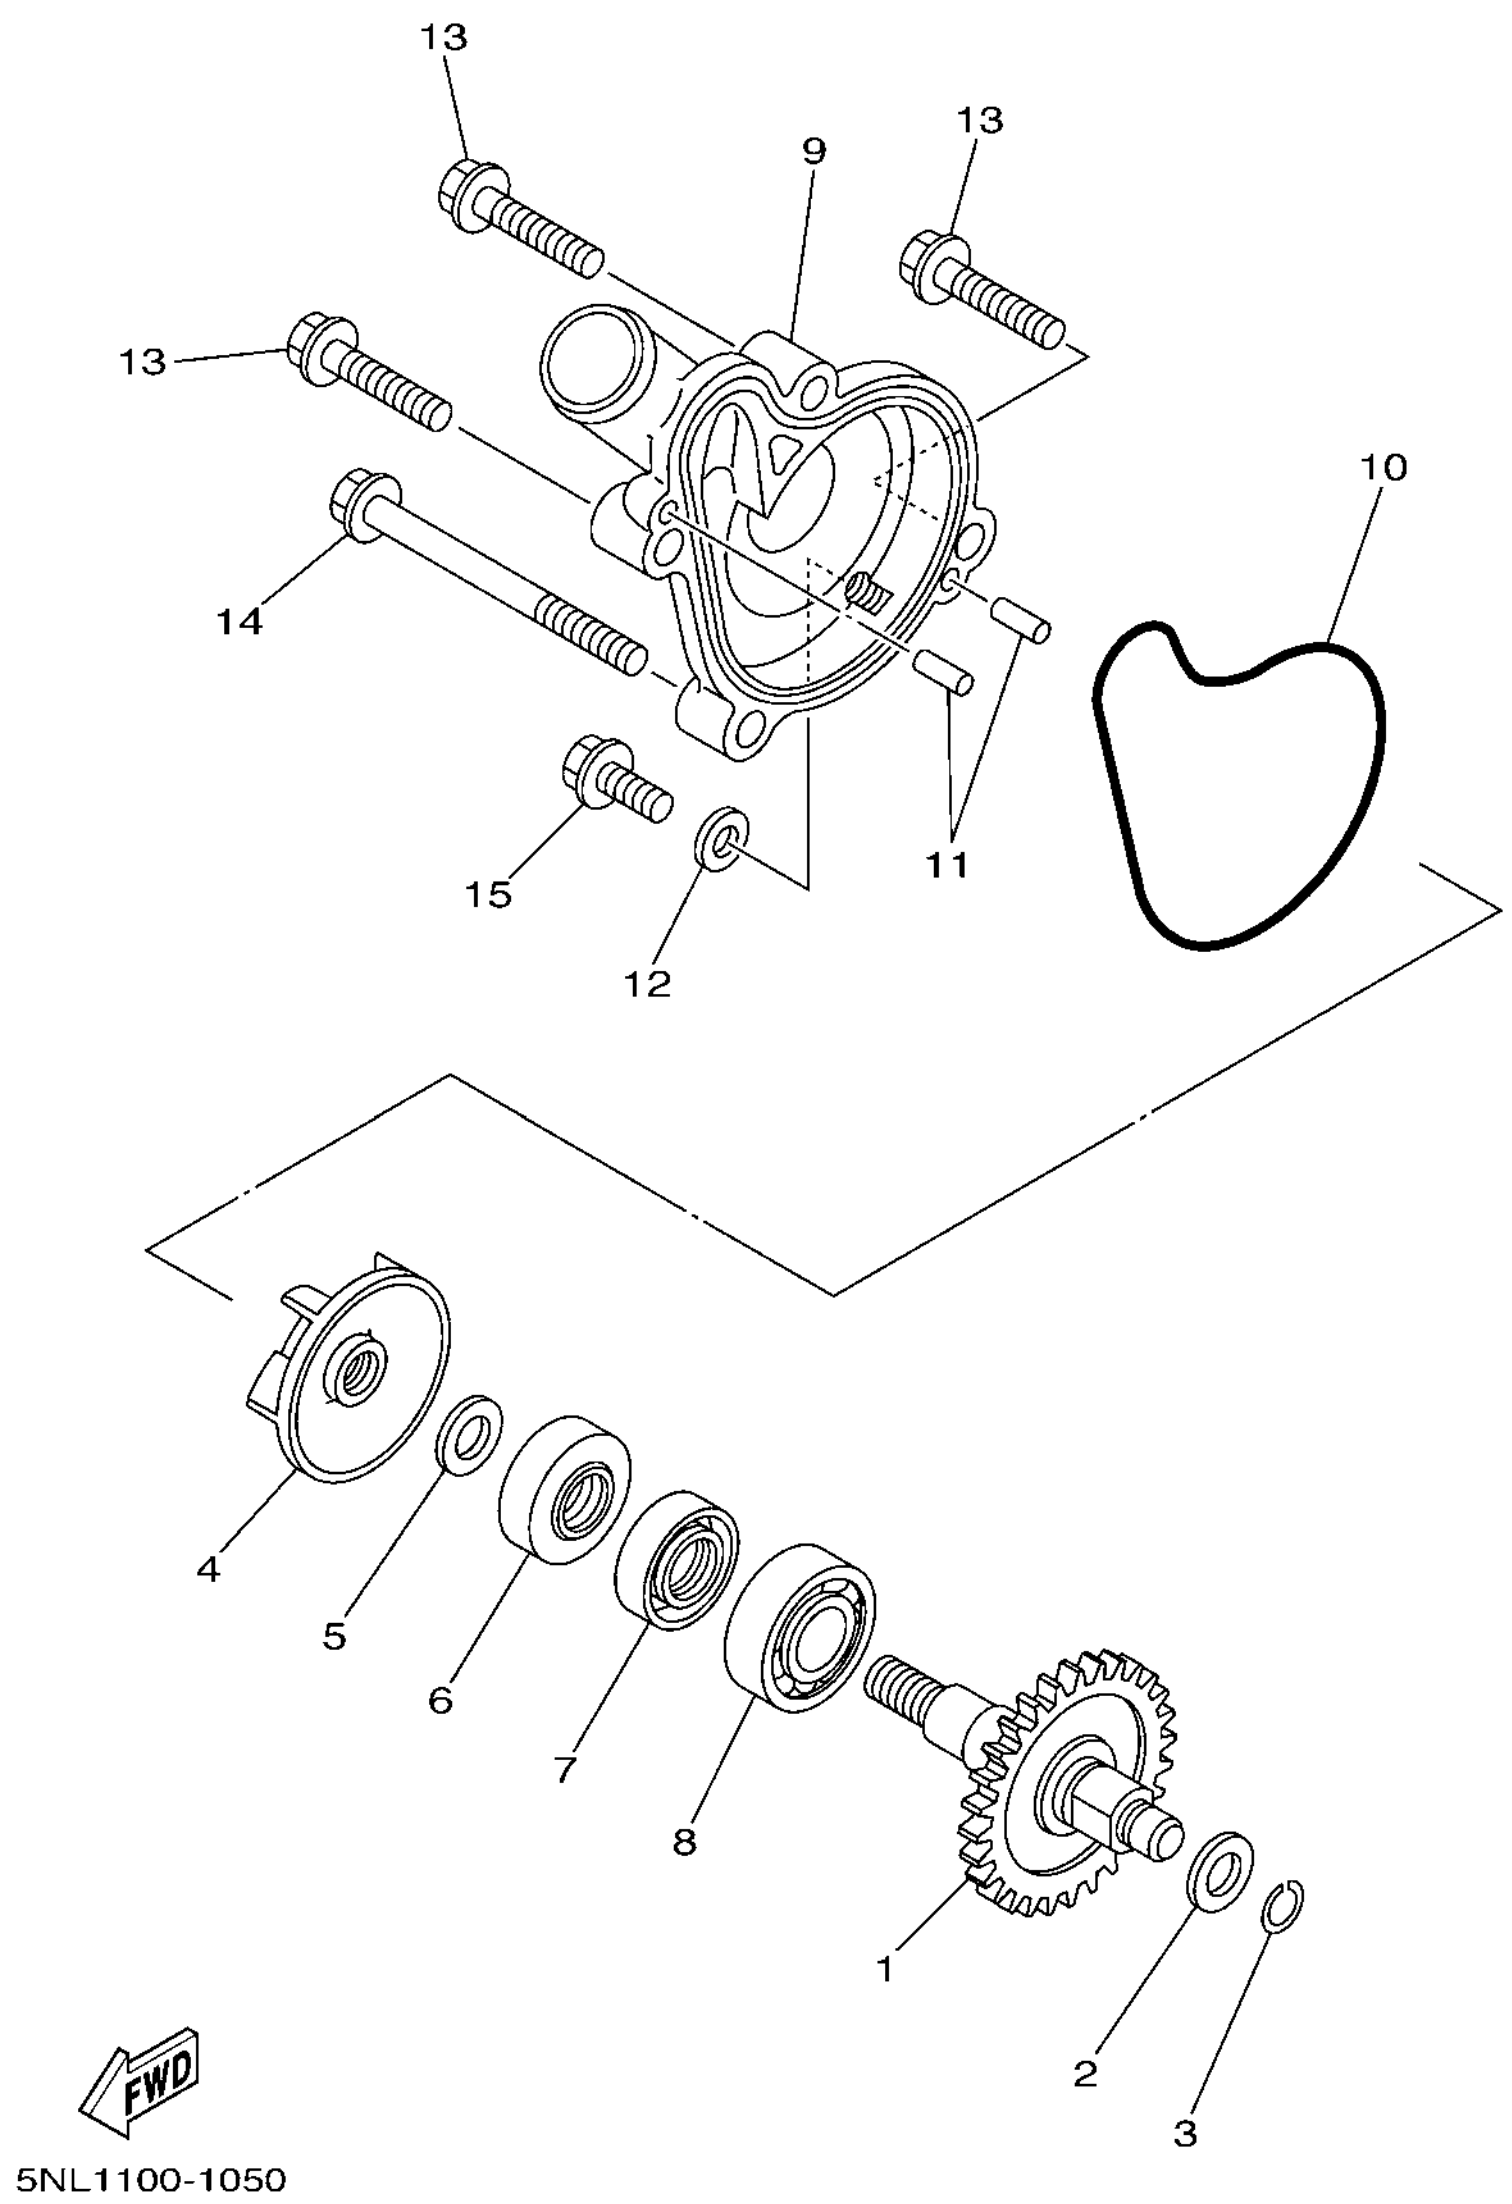


FIG. 5 WATER PUMP


REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5XC–12459–00	GEAR, IMPELLER SHAFT	1	1	1	1		
2	90201–08512	WASHER, PLATE	1	1	1	1		
3	93440–07182	CIRCLIP	1	1	1	1		
4	5DH–12451–00	IMPELLER, WATER PUMP	1	1	1	1		
5	90201–08512	WASHER, PLATE	1	1	1	1		
6	93109–11073	OIL SEAL	1	1	1	1		
7	93102–12106	OIL SEAL (SD 12-22-5 HS)	1	1	1	1		
8	93306–00105	BEARING	1	1	1	1		
9	5NL–12422–10	COVER, HOUSING	1	1	1	1		
10	5NL–12439–00	O-RING	1	1	1	1		
11	93604–10011	PIN, DOWEL	2	2	2	2		
12	90430–06014	GASKET	1	1	1	1		
13	95022–06025	BOLT, FLANGE	3	3	3	3		
14	95022–06065	BOLT, FLANGE	1	1	1	1		
15	95022–06012	BOLT, FLANGE	1	1	1	1		

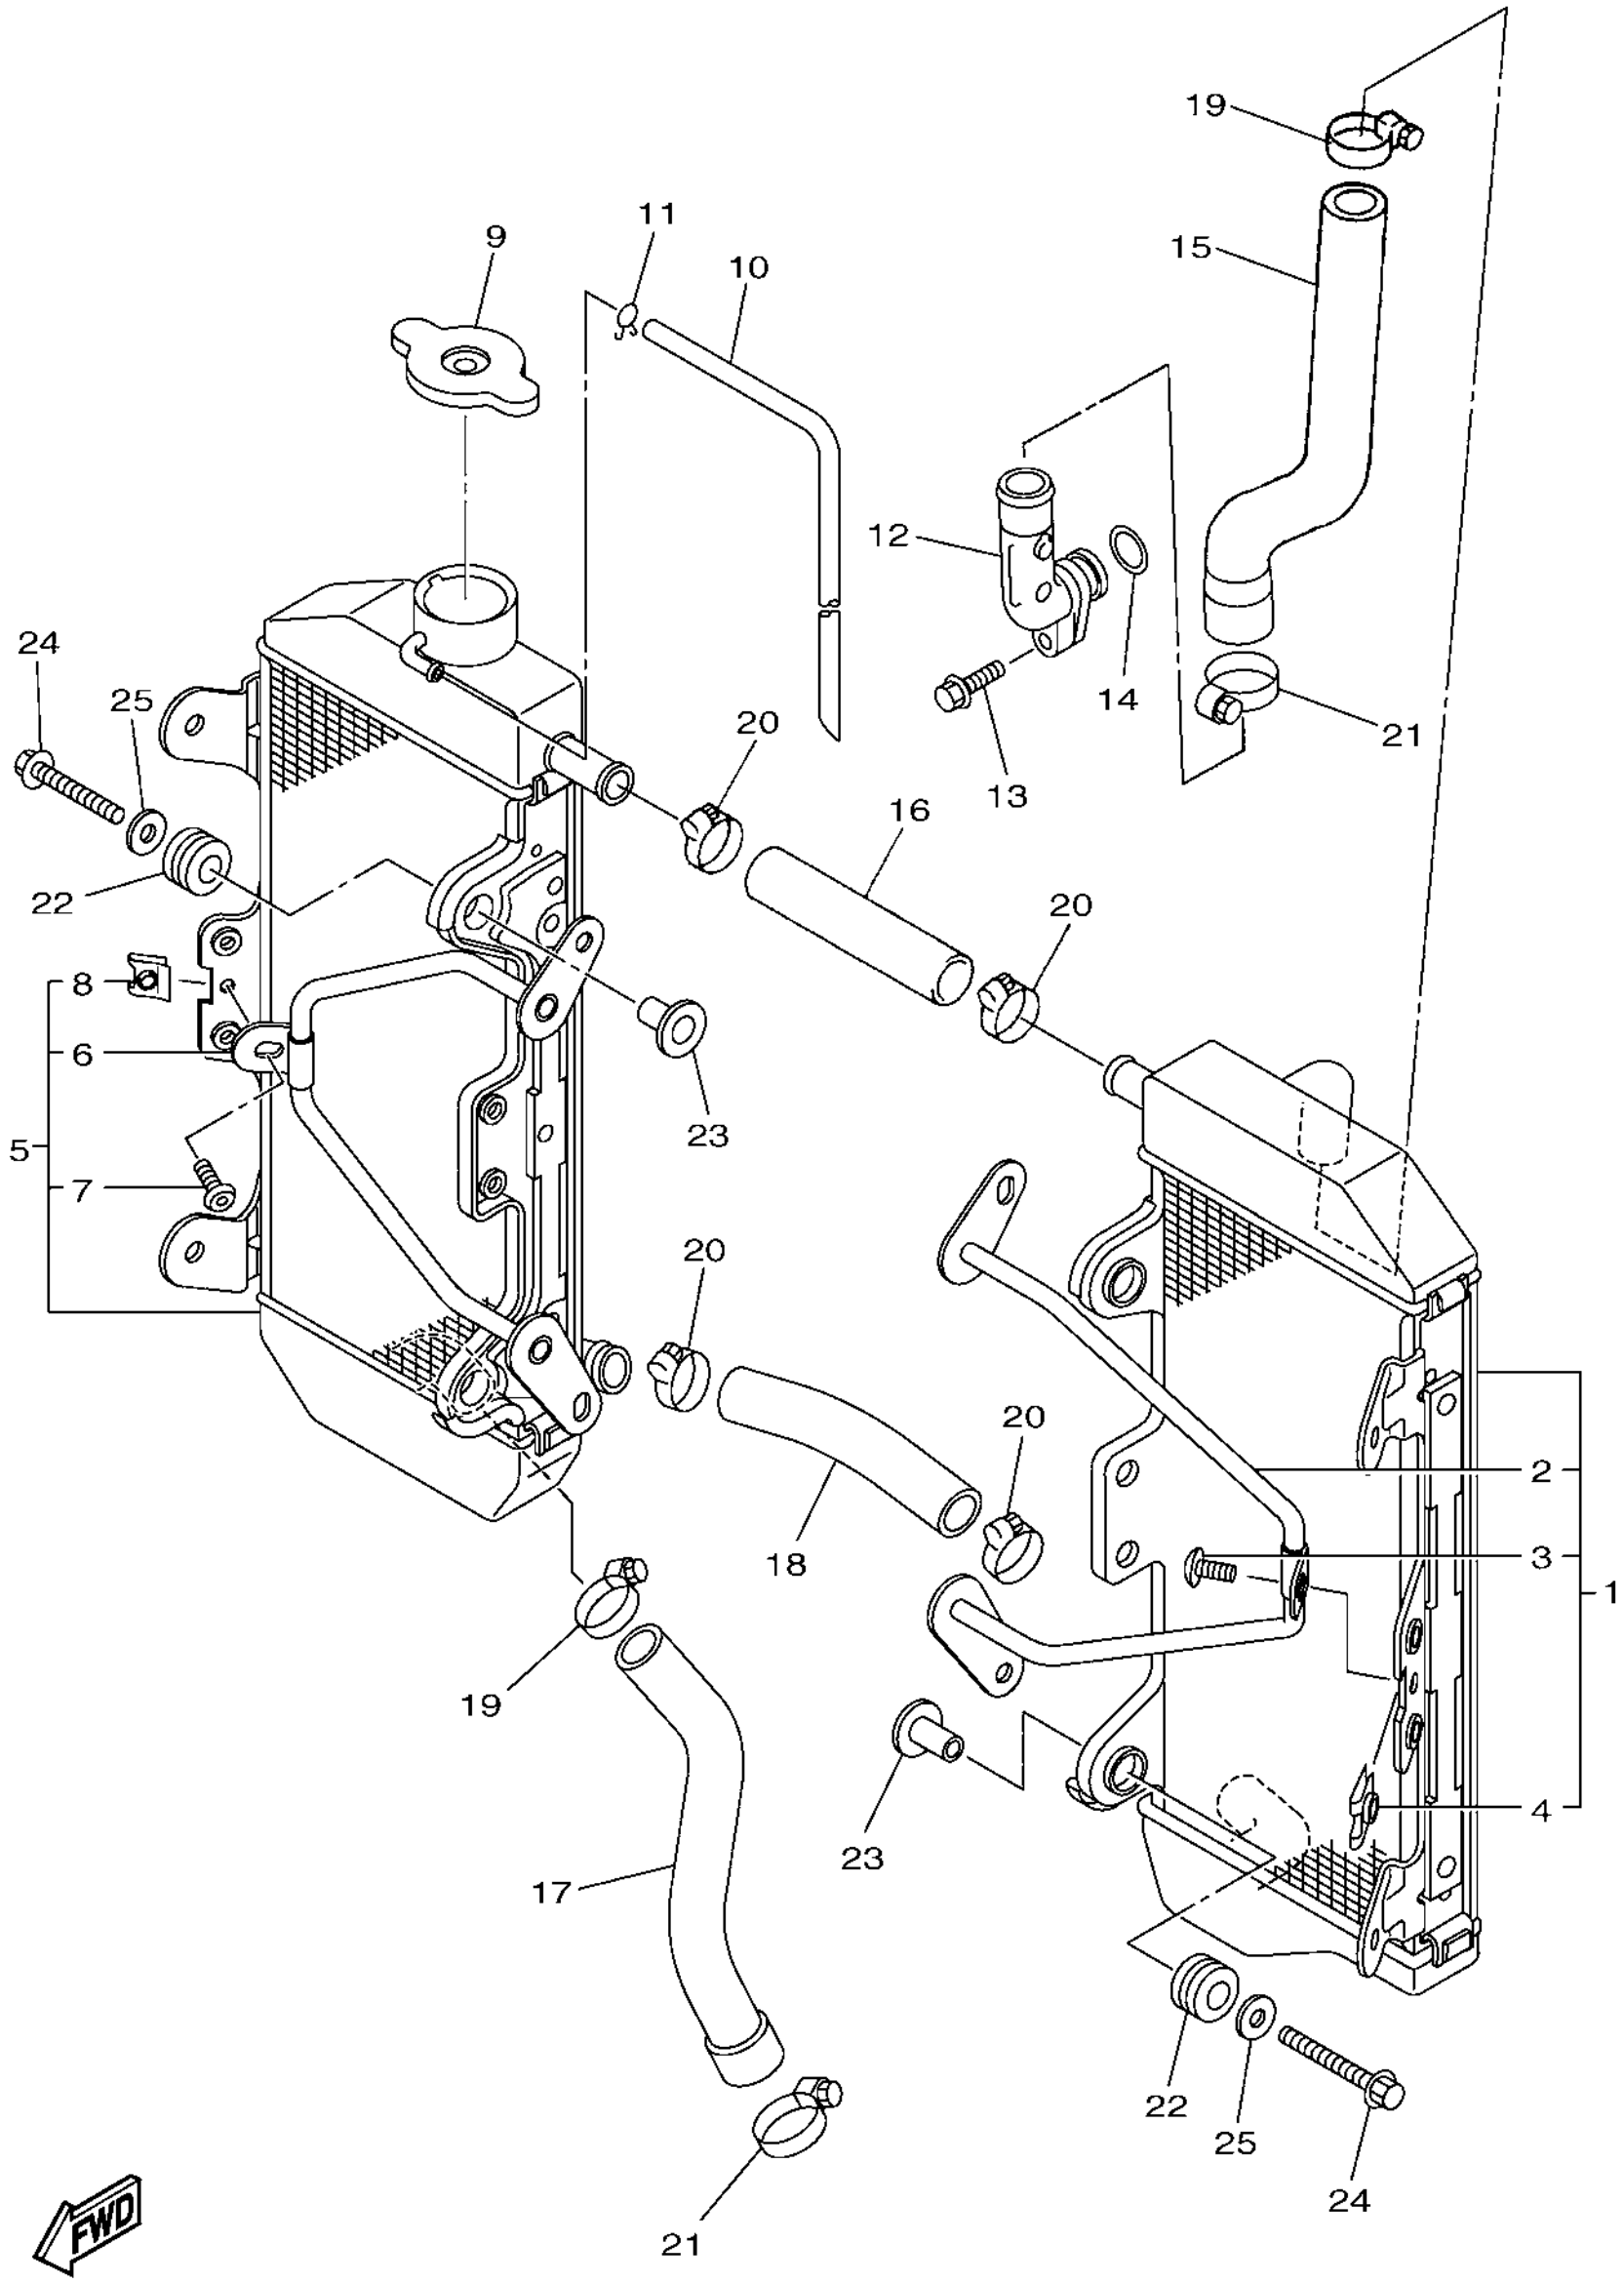

5XCG100-F060

FIG. 6 RADIATOR & HOSE


REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5XC–1240A–G0	RADIATOR ASSY	1	1	1	1		
2	2S2–12464–70	.STAY, RADIATOR	1	1	1	1		
3	92012–06010	.BOLT, BUTTON HEAD	3	3	3	3		
4	90183–060A6	.NUT, SPRING	1	1	1	1		
5	5XC–12461–G0	RADIATOR ASSY	1	1	1	1		
6	2S2–12464–70	.STAY, RADIATOR	1	1	1	1		
7	92012–06010	.BOLT, BUTTON HEAD	3	3	3	3		
8	90183–060A6	.NUT, SPRING	1	1	1	1		
9	22W–12462–00	CAP, RADIATOR	1	1	1	1		
10	91A20–05065	TUBE, FLEXIBLE VINYL	1	1	1	1		
11	90467–090A2	CLIP	1	1	1	1		
12	5XC–12481–G0	PIPE 1	1	1	1	1		
13	91312–06020	BOLT	1	1	1	1		
14	93210–16275	O-RING	1	1	1	1		
15	5XC–12576–G0	HOSE 1	1	1	1	1		
16	1C3–12482–00	PIPE 2	1	1	1	1		
17	5XC–12578–G0	HOSE 3	1	1	1	1		
18	5XC–12579–G0	HOSE 4	1	1	1	1		
19	90450–25001	HOSE CLAMP ASSY	2	2	2	2		
20	90450–22001	HOSE CLAMP ASSY	4	4	4	4		
21	90450–32003	HOSE CLAMP ASSY	2	2	2	2		
22	90480–15528	GROMMET	4	4	4	4		
23	90387–06065	COLLAR	4	4	4	4		
24	90105–06111	BOLT, FLANGE	4	4	4	4		
25	90201–06571	WASHER, PLATE	4	4	4	4		

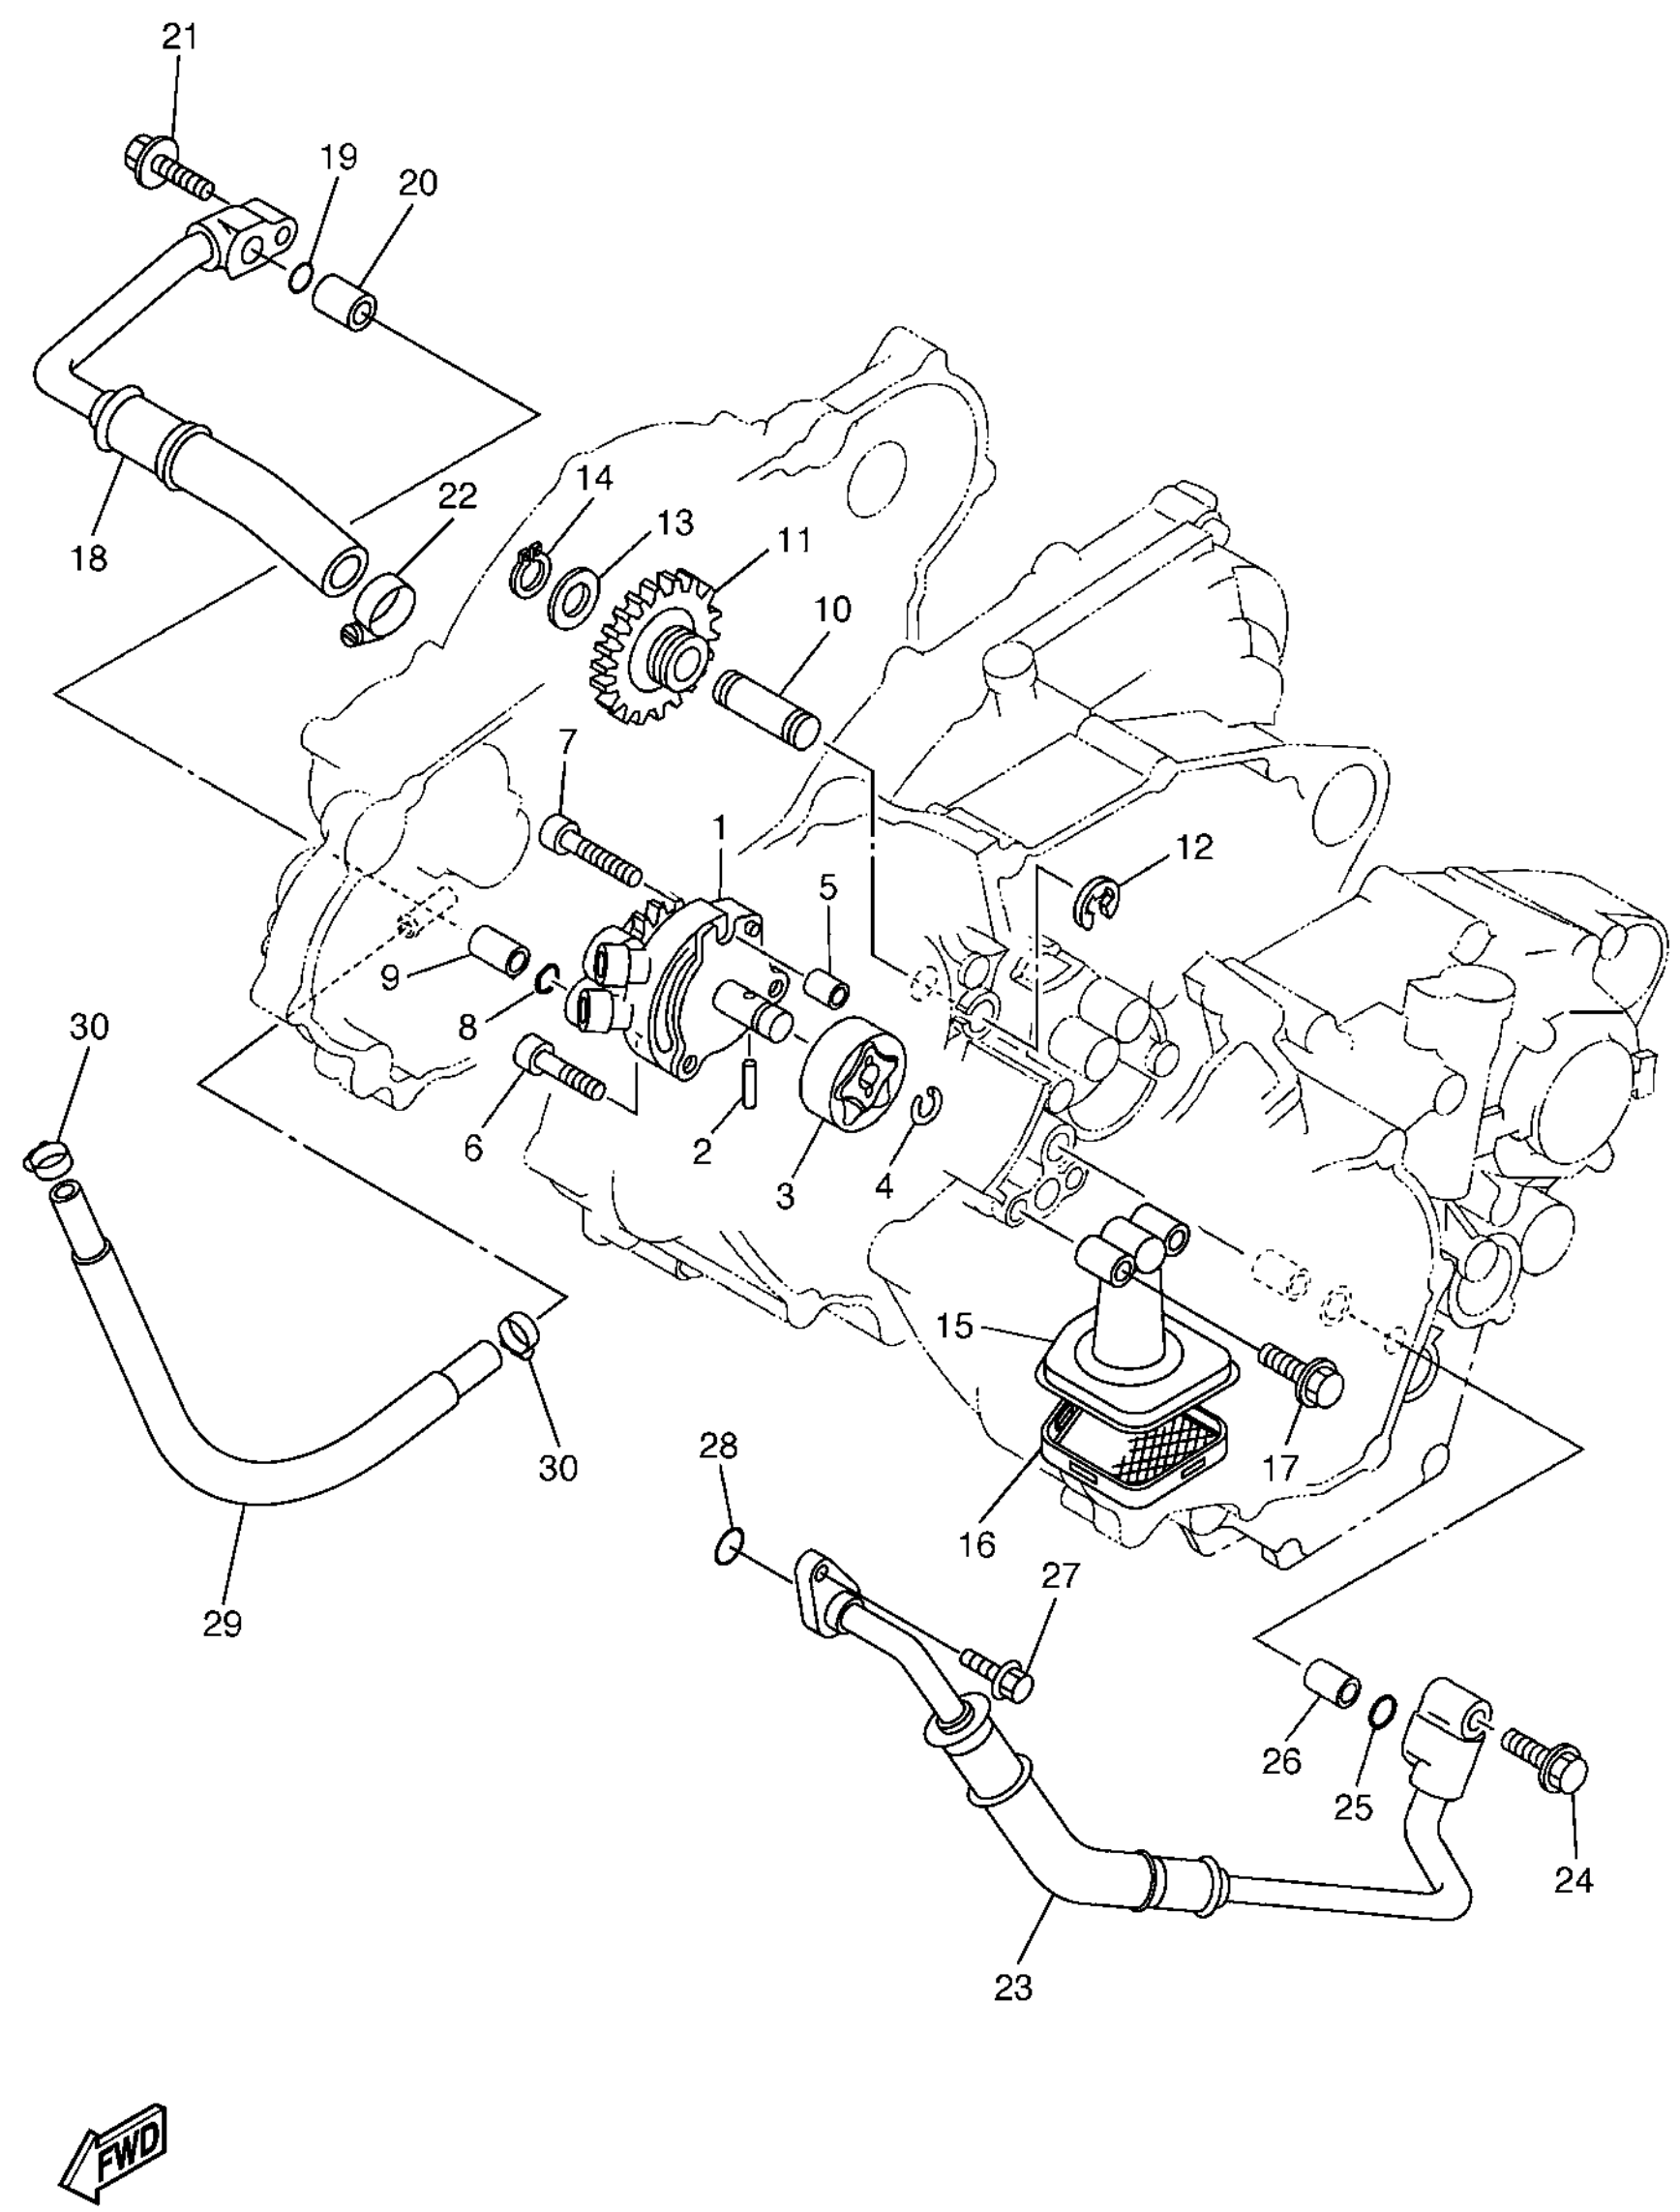

5XC9100-E070

FIG. 7 OIL PUMP


REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5SG–13300–01	OIL PUMP ASSY	1	1	1	1		
2	93603–16219	PIN, DOWEL	1	1	1	1		
3	5NL–13320–00	ROTOR ASSY 2	1	1	1	1		
4	93440–10153	CIRCLIP	1	1	1	1		
5	99530–08012	PIN, DOWEL	1	1	1	1		
6	91312–06025	BOLT	2	2	2	2		
7	91317–06030	BOLT	1	1	1	1		
8	93210–10197	O-RING	1	1	1	1		
9	99530–10114	PIN, DOWEL	1	1	1	1		
10	5BE–13342–00	SHAFT, IDLE GEAR	1	1	1	1		
11	5NL–13341–00	GEAR, OIL PUMP IDLE	1	1	1	1		
12	99001–08600	CIRCLIP	1	1	1	1		
13	90201–12166	WASHER, PLATE	1	1	1	1		
14	99009–12400	CIRCLIP	1	1	1	1		
15	5XC–13412–00	HOUSING, STRAINER	1	1	1	1		
16	5NL–13411–00	STRAINER, OIL	1	1	1	1		
17	95022–06025	BOLT, FLANGE	2	2	2	2		
18	5XC–13464–30	HOSE, OIL 1	1	1	1	1		
19	93210–10197	O-RING	1	1	1	1		
20	99530–10114	PIN, DOWEL	1	1	1	1		
21	95022–06025	BOLT, FLANGE	1	1	1	1		
22	90450–22001	HOSE CLAMP ASSY	1	1	1	1		
23	5XC–13465–30	HOSE, OIL 2	1	1	1	1		
24	95022–06025	BOLT, FLANGE	1	1	1	1		
25	93210–10197	O-RING	1	1	1	1		
26	99530–10114	PIN, DOWEL	1	1	1	1		
27	95022–06016	BOLT, FLANGE	1	1	1	1		

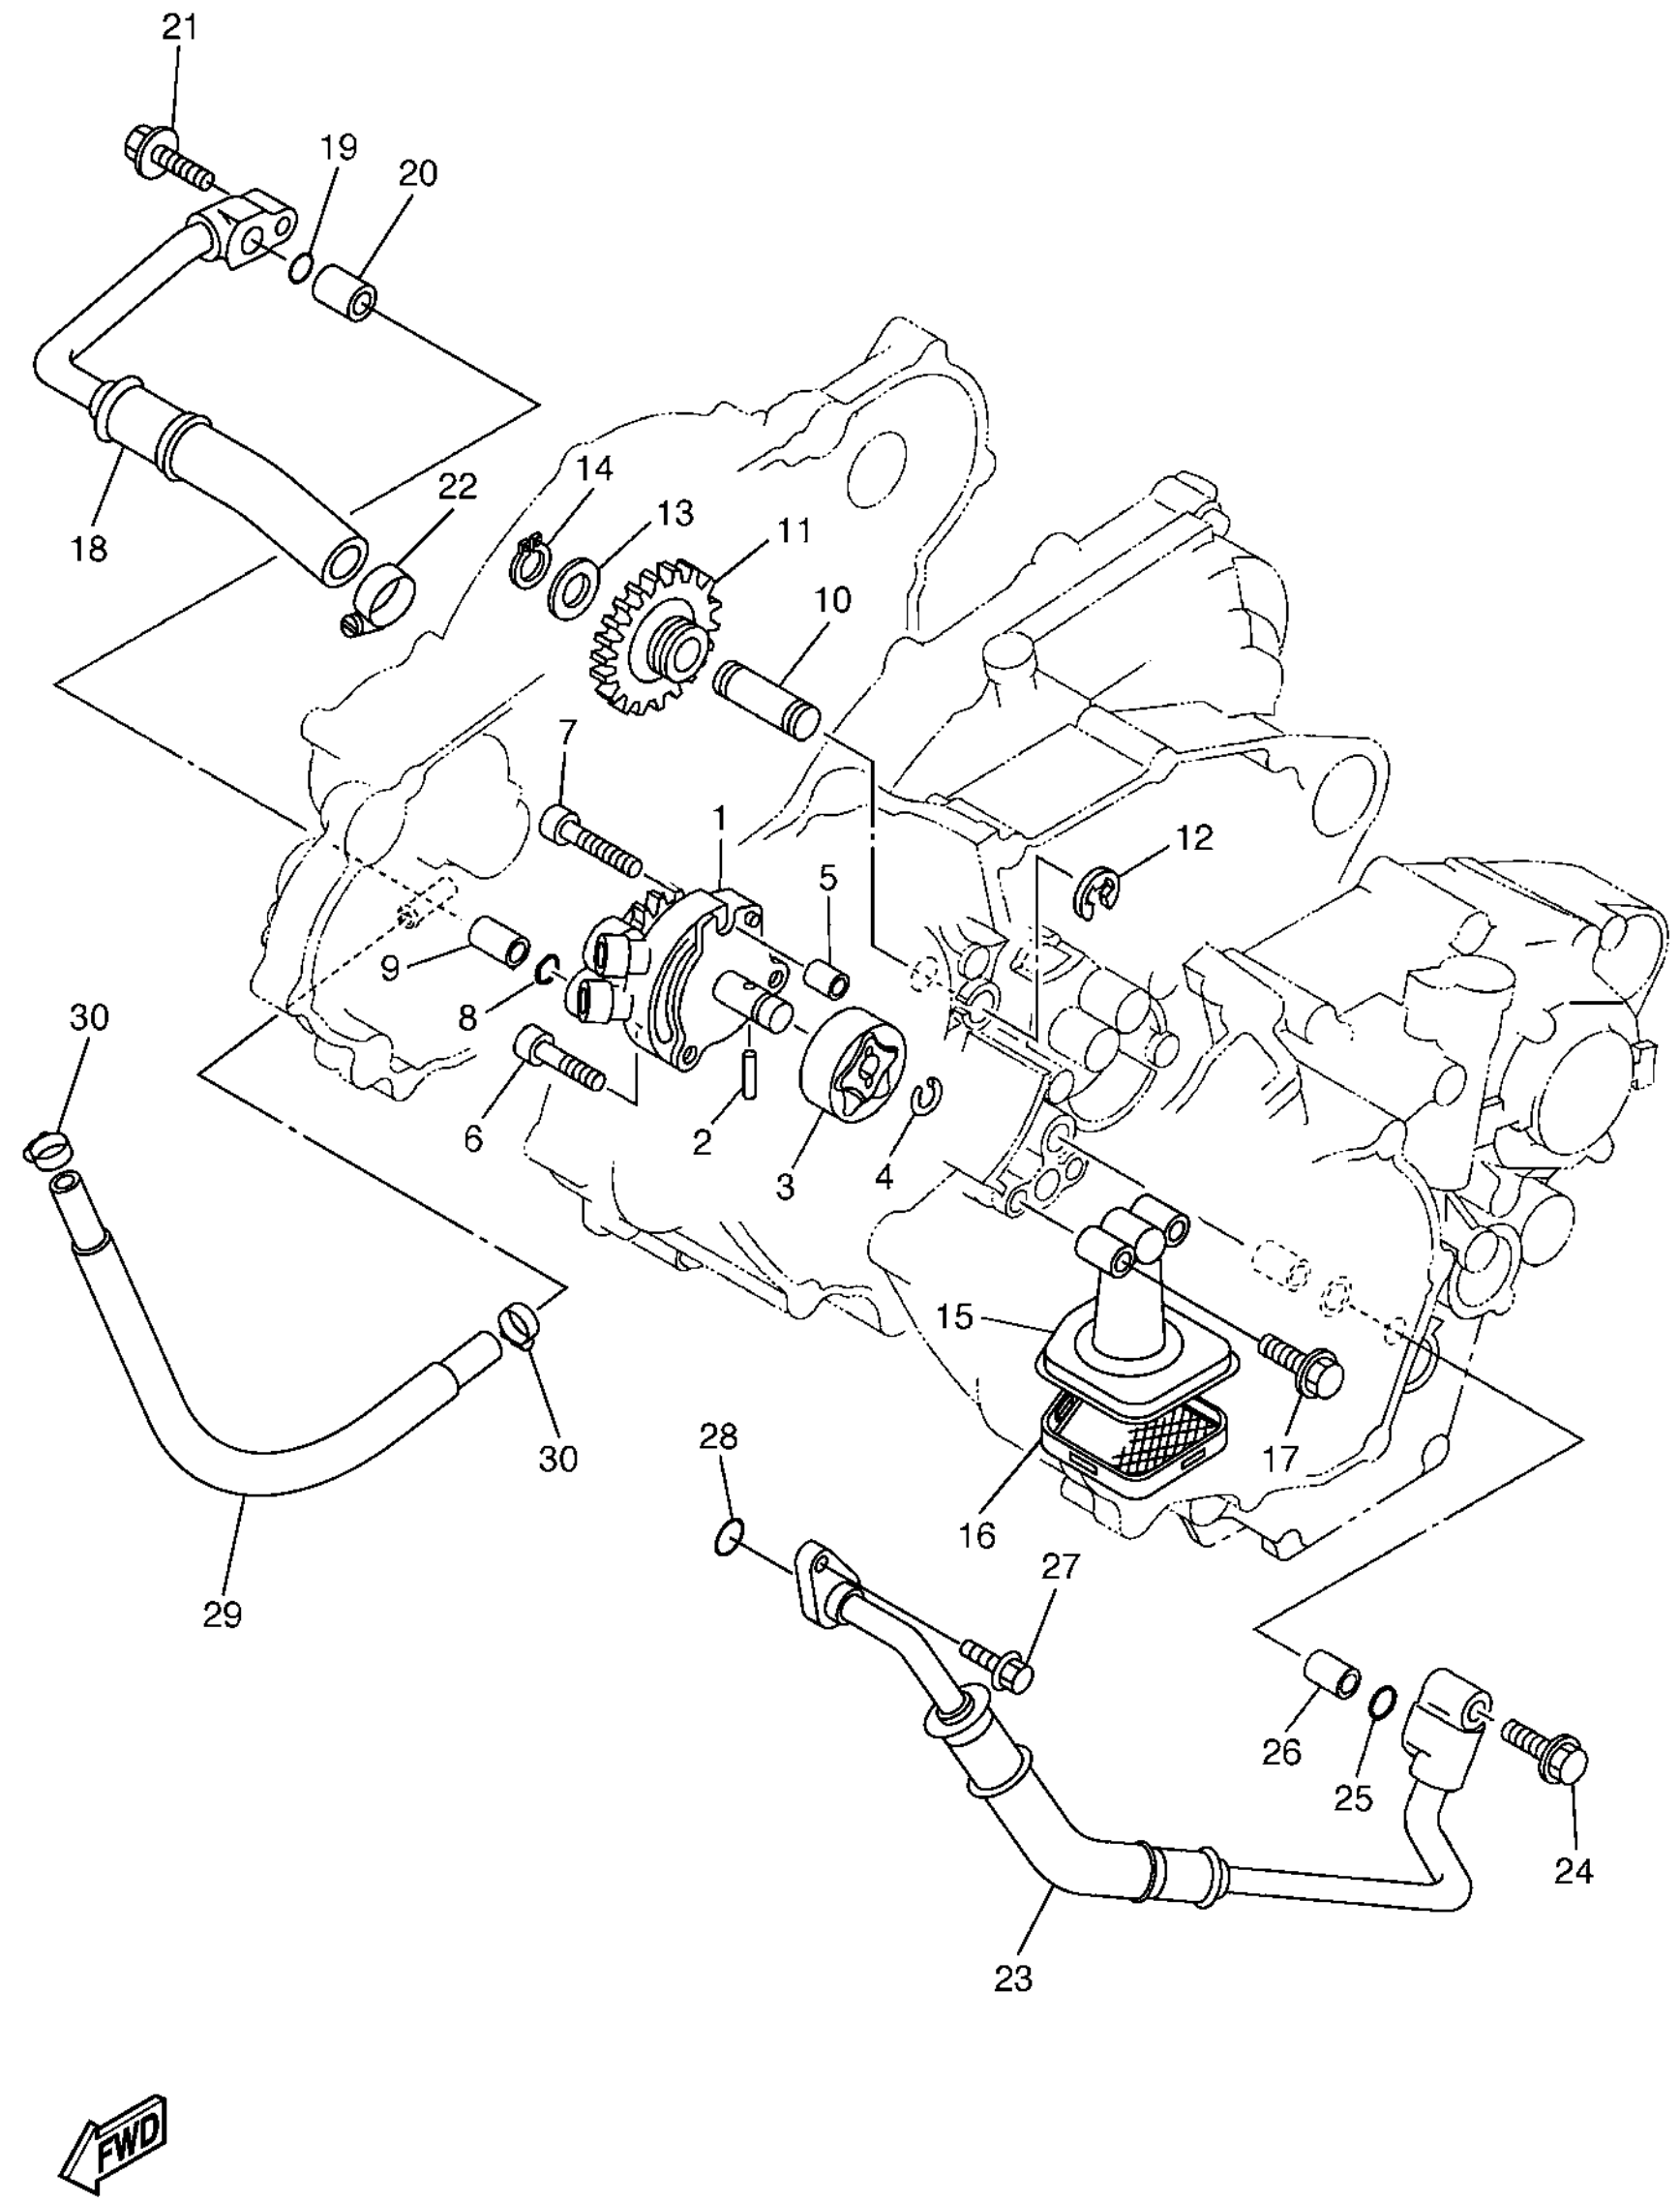

5XC9100-E070

FIG. 7 OIL PUMP

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
28	93210–09754	O-RING	1	1	1	1		
29	90445–14010	HOSE	1	1	1	1		
30	90450–17001	HOSE CLAMP ASSY	2	2	2	2		

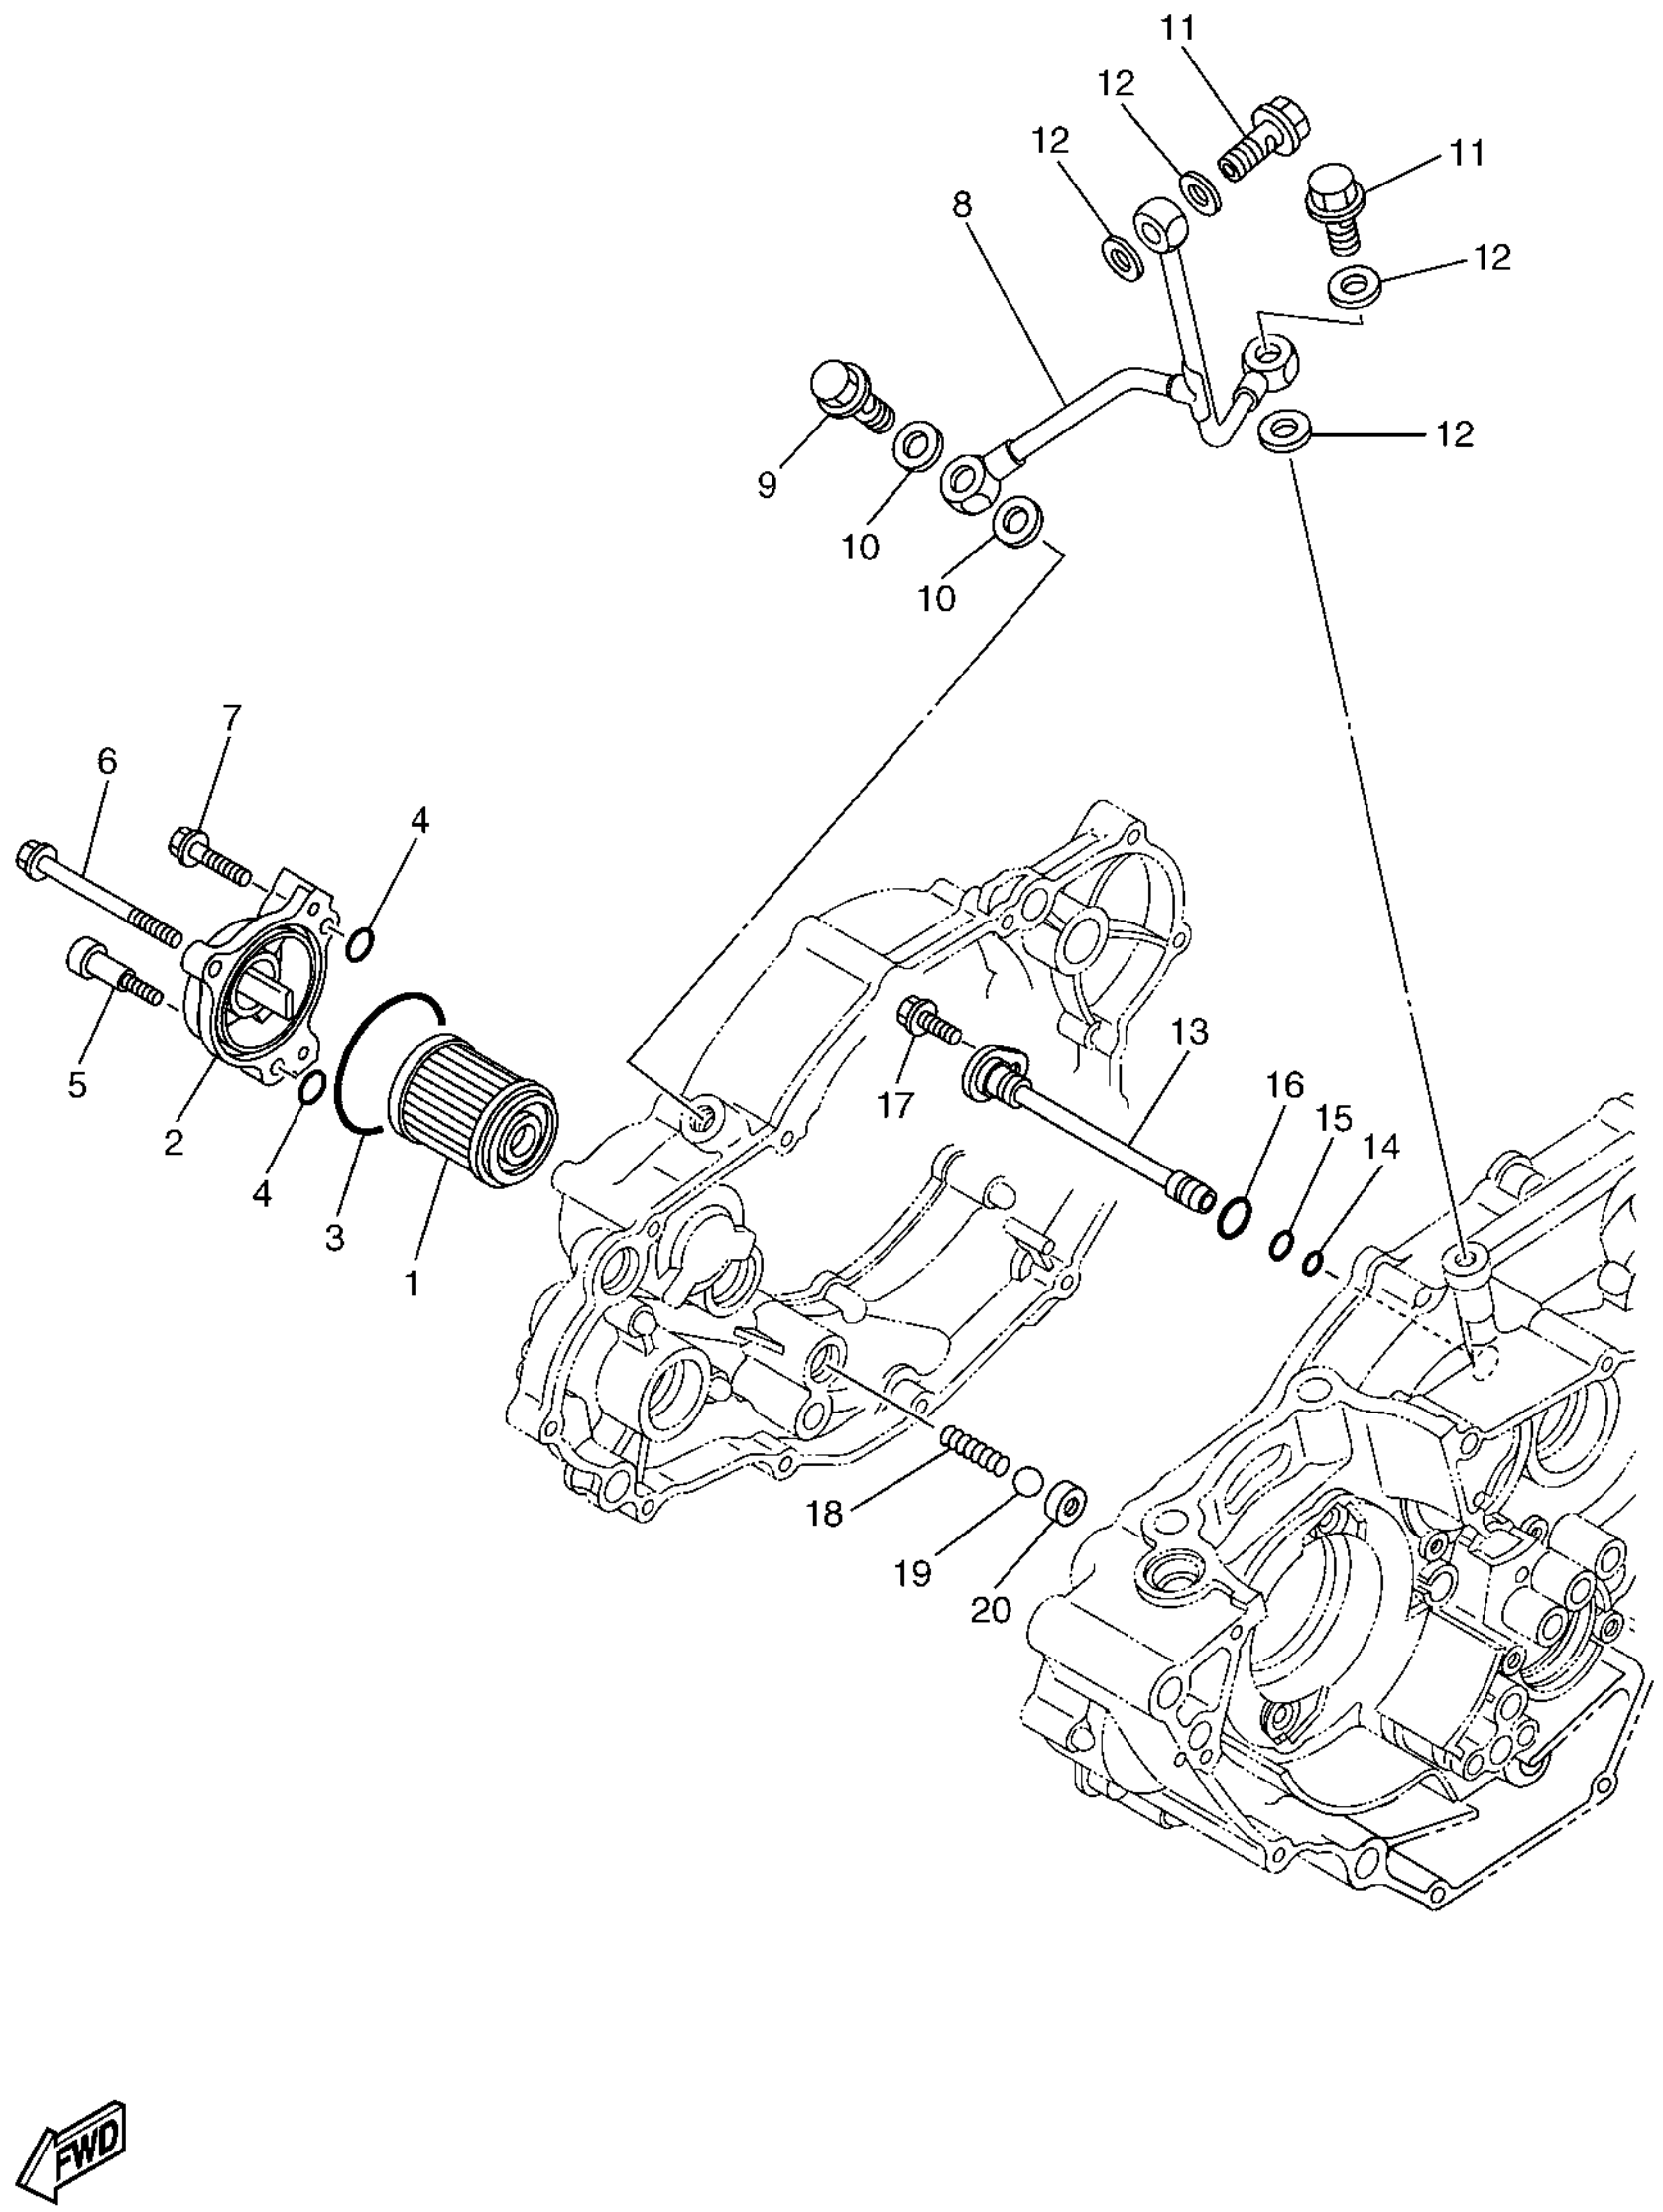

5XCG100-F080

FIG. 8 OIL CLEANER

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5D3–13440–00	ELEMENT ASSY, OIL CLEANER	1	1	1	1		
2	5BE–13447–20	COVER, OIL ELEMENT	1	1	1	1		
3	93210–47675	O-RING	1	1	1	1		
4	93210–07135	O-RING	3	3	3	3		
5	90110–06228	BOLT, HEXAGON SOCKET HEAD	1	1	1	1		
6	91312–06065	BOLT	1	1	1	1		
7	91312–06025	BOLT	1	1	1	1		
8	5NL–13161–20	PIPE, DELIVERY 1	1	1	1	1		
9	90401–10015	BOLT, UNION	1	1	1	1		
10	90430–10188	GASKET	2	2	2	2		
11	90401–08006	BOLT, UNION	2	2	2	2		
12	90430–08119	GASKET	4	4	4	4		
13	5NL–13171–00	PIPE, DELIVERY 2	1	1	1	1		
14	93210–07003	O-RING	1	1	1	1		
15	93210–09008	O-RING	1	1	1	1		
16	93210–12759	O-RING	1	1	1	1		
17	95022–06012	BOLT, FLANGE	1	1	1	1		
18	90501–043E0	SPRING, COMPRESSION	1	1	1	1		
19	93503–08007	BALL	1	1	1	1		
20	583–13113–00	SEAT, CHECK BALL	1	1	1	1		


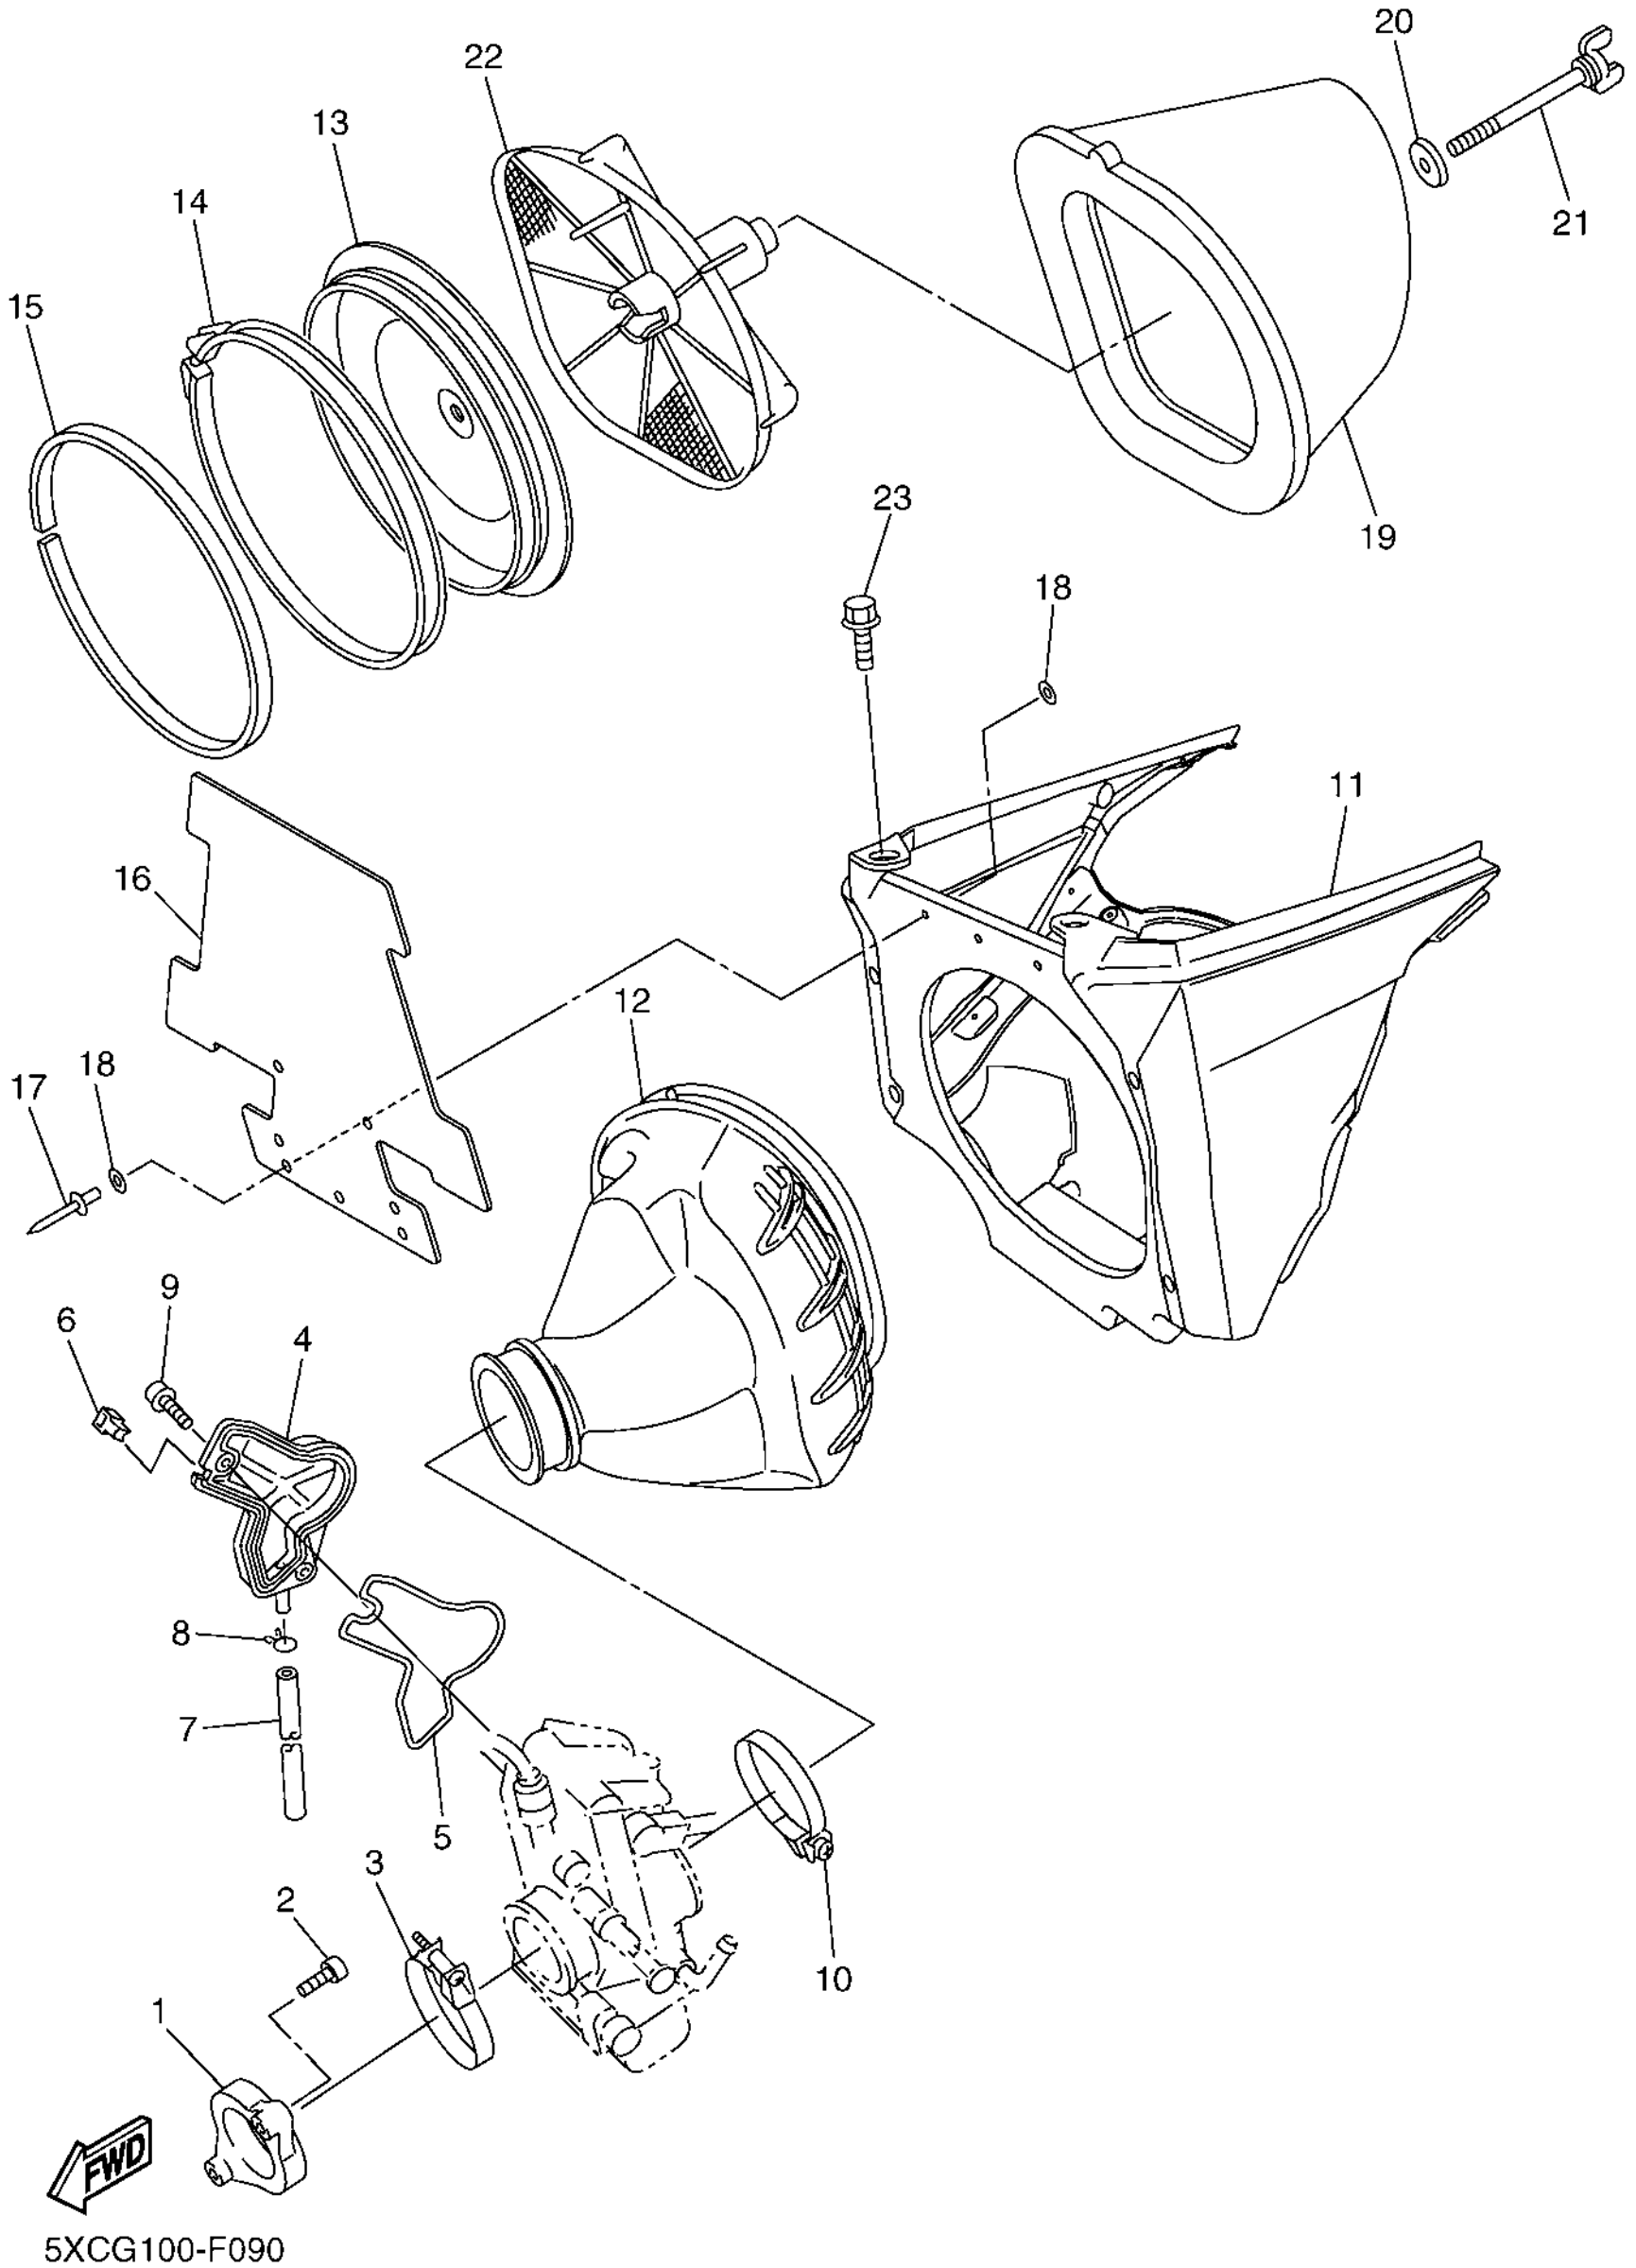


FIG. 9 INTAKE

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5XC–13597–30	JOINT, CARBURETOR 3	1	1	1	1		
2	91312–06025	BOLT	2	2	2	2		
3	90450–57010	HOSE CLAMP ASSY	1	1	1	1		
4	5TA–14293–00	COVER 1	1	1	1	1		
5	5TA–14227–00	GASKET	1	1	1	1		
6	5TA–14239–00	SEAL	1	1	1	1		
7	5TA–14987–00	HOSE	1	1	1	1		
8	3TJ–14137–40	CLIP	1	1	1	1		
9	90110–05038	BOLT, HEXAGON SOCKET HEAD	2	2	2	2		
10	90450–61002	HOSE CLAMP ASSY	1	1	1	1		
11	2S2–14401–70	AIR CLEANER CASE ASSY	1	1	1	1		
12	5XC–14453–R0	JOINT, AIR CLEANER 1	1	1	1	1		
13	5NY–14459–00	HOLDER, GUIDE	1	1	1	1		
14	5NY–14455–20	BAND	1	1	1	1		
15	5NY–14442–00	SPACER	1	1	1	1		
16	5XC–14417–90	COVER 1	1	1	1	1		
17	90267–32070	RIVET, BLIND	3	3	3	3		
18	90201–03313	WASHER, PLATE	6	6	6	6		
19	4XM–14451–00	ELEMENT, AIR CLEANER	1	1	1	1		
20	90209–06096	WASHER	1	1	1	1		
21	90122–06005	BOLT, WING	1	1	1	1		
22	5BE–14458–00	GUIDE	1	1	1	1		
23	90109–06245	BOLT	2	2	2	2		

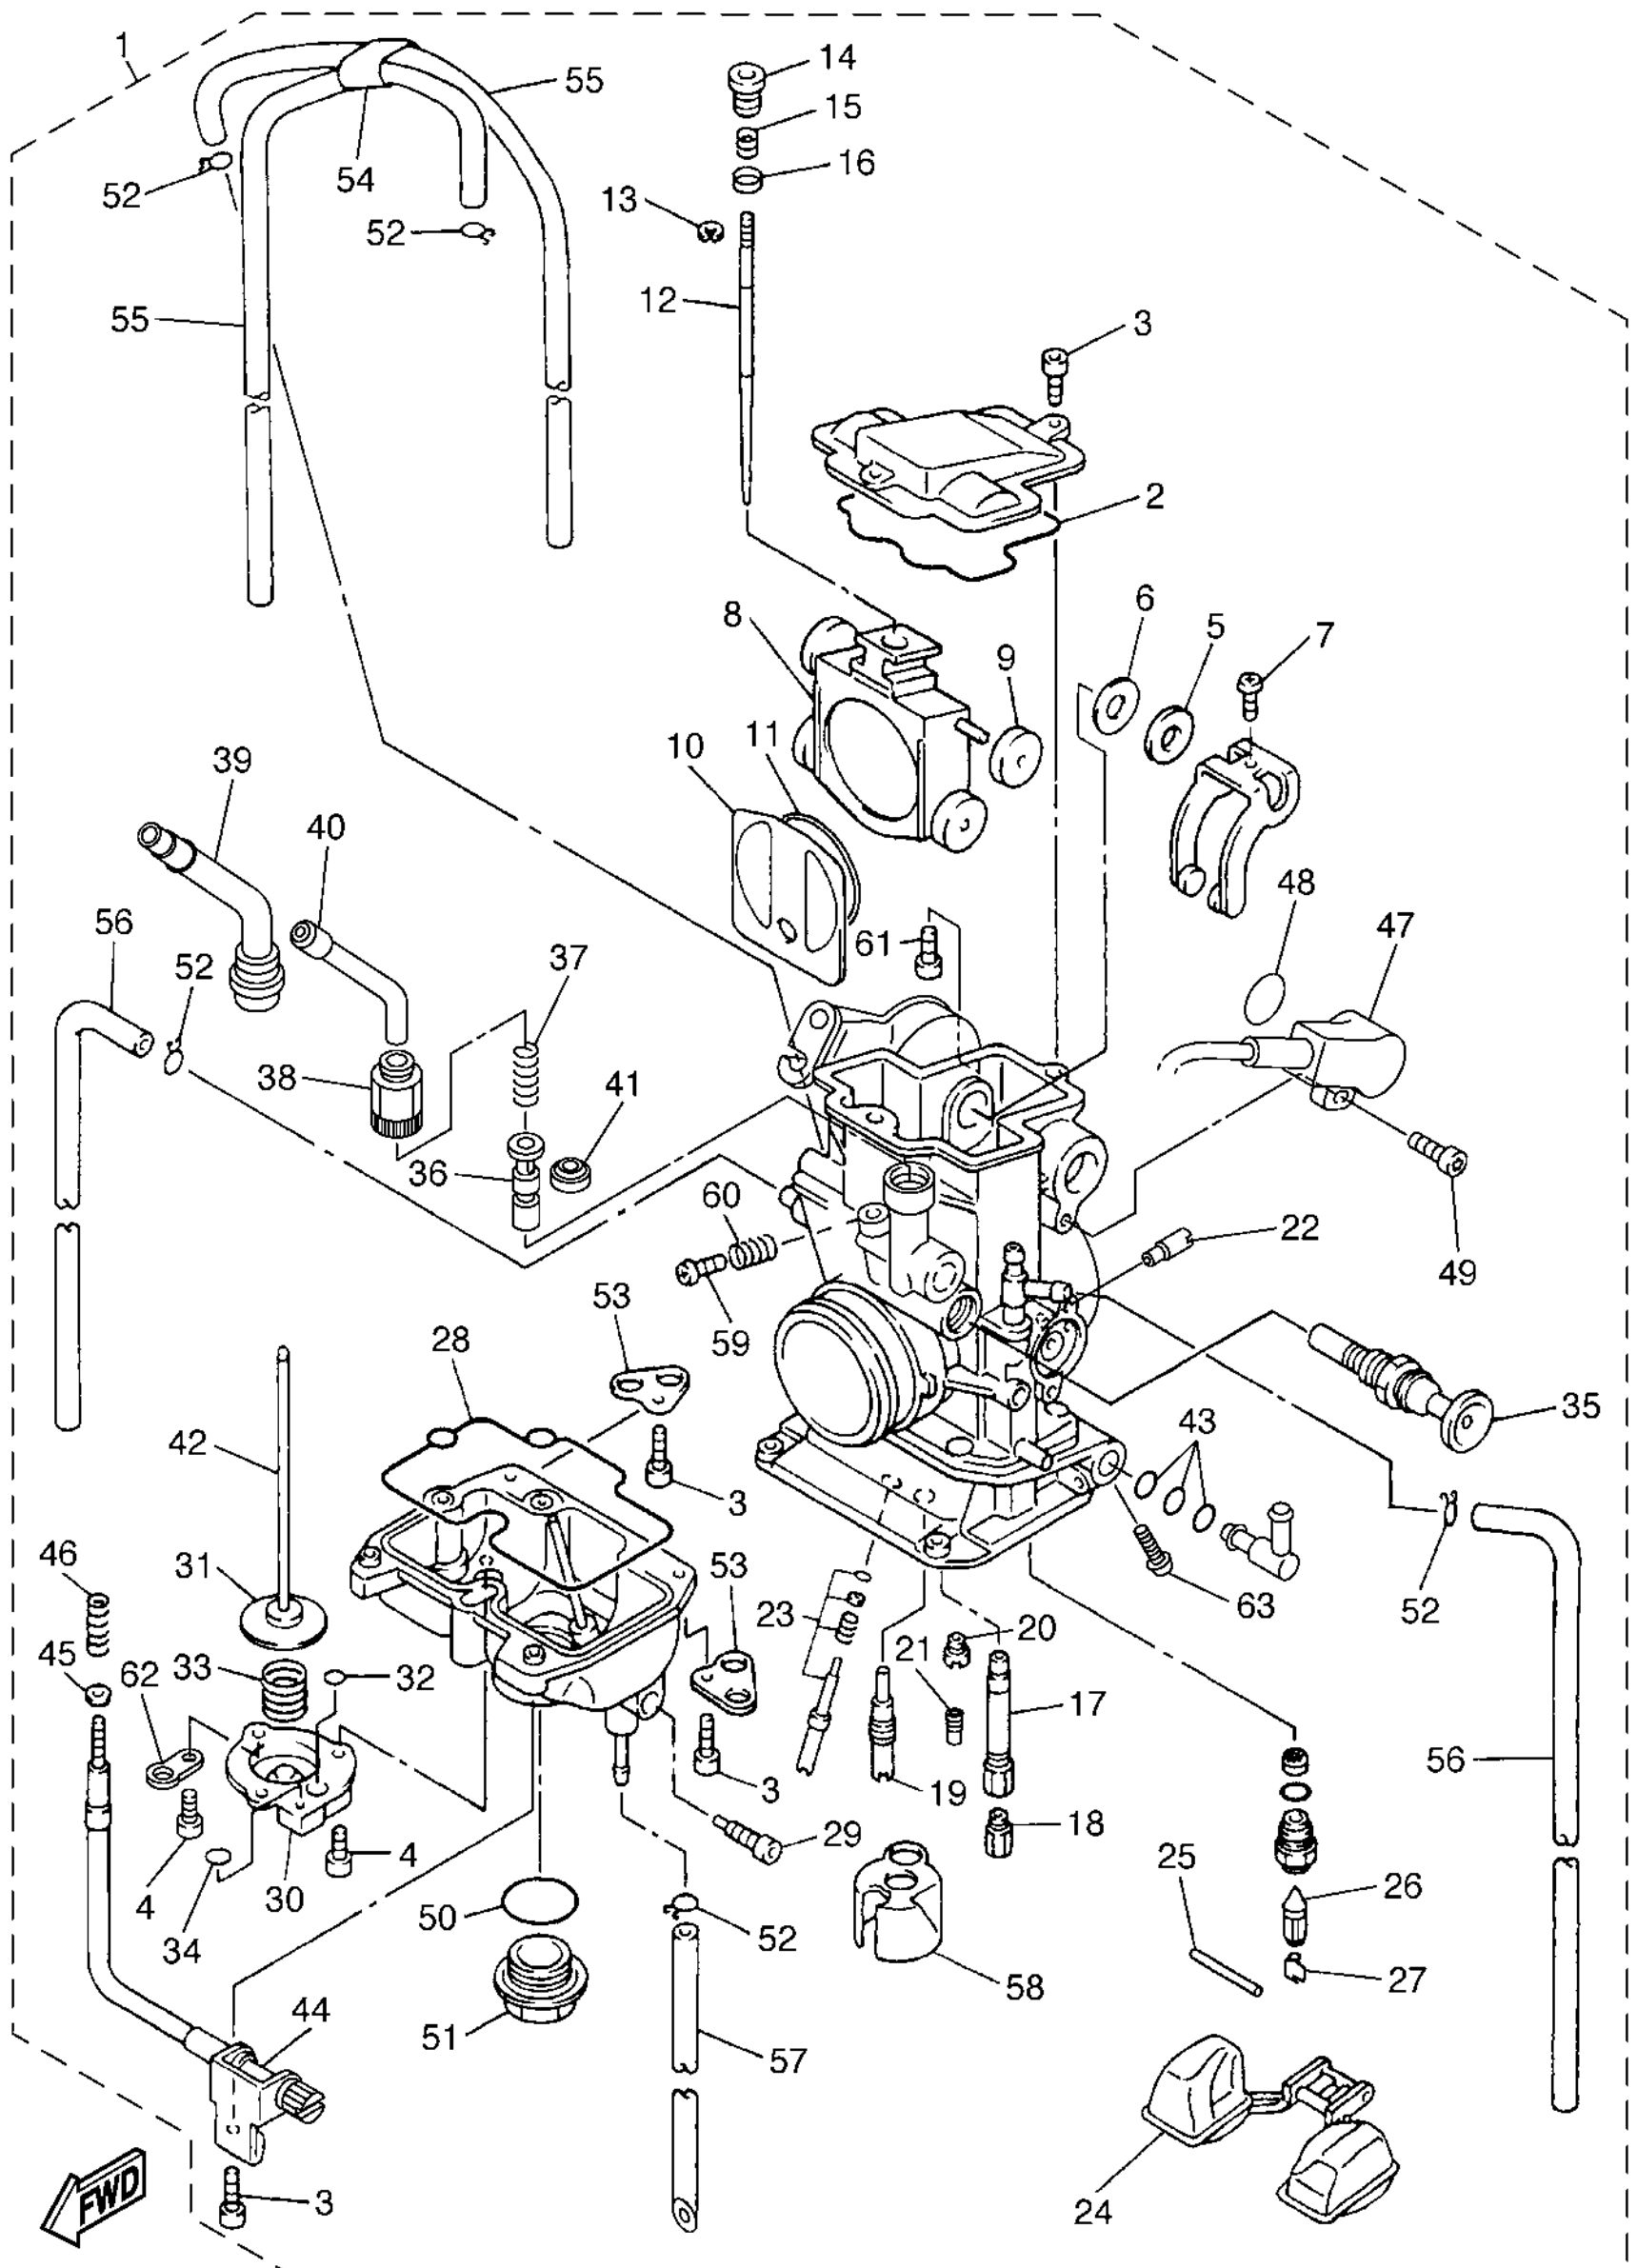


2S27100-F100

FIG. 10 CARBURETOR

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU	REMARKS
1	5XC–14101–R0	CARBURETOR ASSY 1	1				
	5XC–14101–S0	CARBURETOR ASSY 1		1	1	1	
2	5JG–14959–00	.GASKET	1	1	1	1	
3	91316–04012	.BOLT	6	6	6	6	
4	688–14592–00	.SCREW	3	3	3	3	
5	90202–08045	.WASHER, PLATE	1	1	1	1	
6	5JG–14951–00	.WASHER	1	1	1	1	
7	5JG–14522–00	.SCREW, ADJUST	1	1	1	1	
8	2S2–14388–00	.VALVE, VACUUM CONTROL	1	1	1	1	
9	3TJ–14267–40	.ROLLER	1	1	1	1	
10	5JG–14546–01	.VALVE, NEEDLE	1	1	1	1	
11	4FN–14997–00	.SEAL	1	1	1	1	
12	5TA–14916–KR	.NEEDLE (#NHKR)	1				STD
	5TA–14916–LR	.NEEDLE (#NFLR)		1	1	1	STD
	5TA–14916–LN	.NEEDLE (#NFLN)	1	1	1	1	AP
	5TA–14916–LP	.NEEDLE (#NFLP)	1	1	1	1	AP
	5TA–14916–L1	.NEEDLE (#NFLQ)	1	1	1	1	AP
	5TA–14916–LS	.NEEDLE (#NFLS)	1	1	1	1	AP
	5TA–14916–LT	.NEEDLE (#NFLT)	1	1	1	1	AP
	5TA–14916–LU	.NEEDLE (#NFLU)	1	1	1	1	AP
	5TA–14916–PN	.NEEDLE (#NFPN)	1	1	1	1	AP
	5TA–14916–PP	.NEEDLE (#NFPP)	1	1	1	1	AP
	5TA–14916–P1	.NEEDLE (#NFPQ)	1	1	1	1	AP
	5TA–14916–PR	.NEEDLE (#NFPR)	1	1	1	1	AP
	5TA–14916–PS	.NEEDLE (#NFPS)	1	1	1	1	AP
	5TA–14916–PT	.NEEDLE (#NFPT)	1	1	1	1	AP
	5TA–14916–PU	.NEEDLE (#NFPU)	1	1	1	1	AP

FIG. 10 CARBURETOR

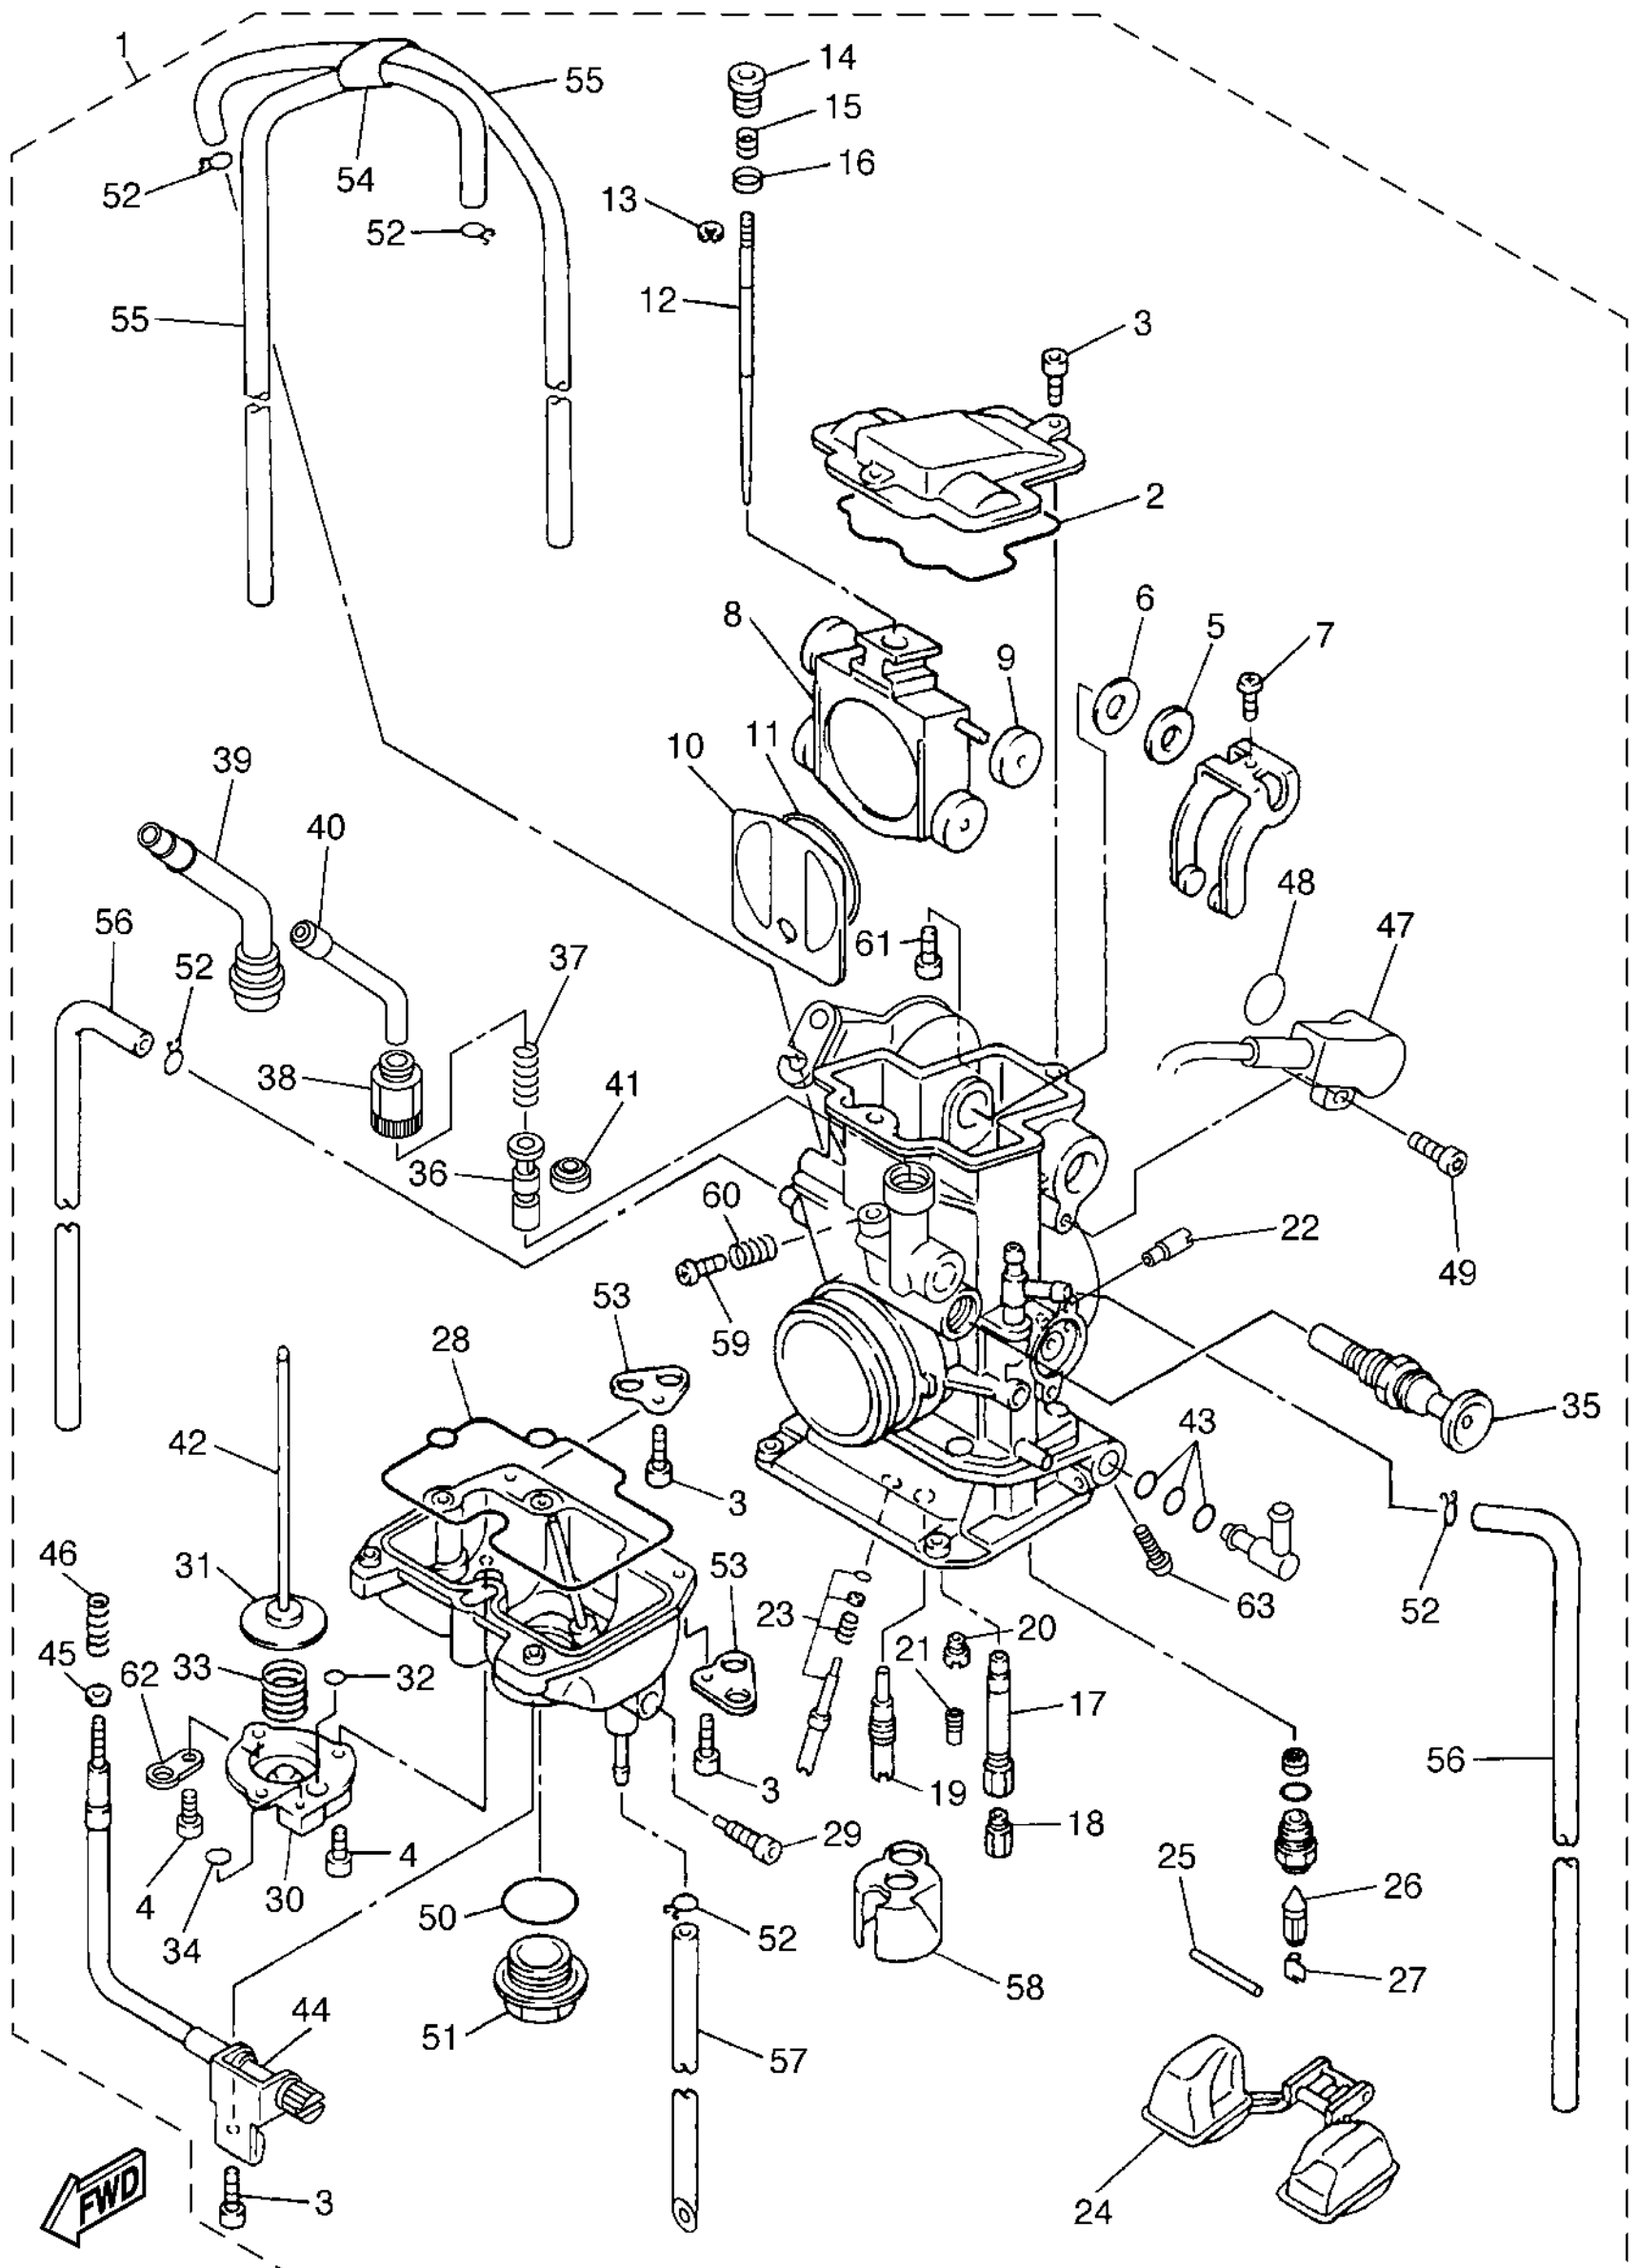

2S27100-F100

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
13	3TJ–14159–40	.CLIP	1	1	1	1		
14	5JG–14521–00	.SCREW, ADJUST	1	1	1	1		
15	5JG–14275–00	.SPRING	1	1	1	1		
16	5JG–14264–00	.COLLAR	1	1	1	1		
17	5XC–14947–00	.JET, NEEDLE	1	1	1	1		
18	4MX–14943–93	.JET, MAIN (#178)	1	1	1	1		STD
	4MX–14943–91	.JET, MAIN (#168)	1	1	1	1		AP
	4MX–14943–41	.JET, MAIN (#170)	1	1	1	1		AP
	4MX–14943–92	.JET, MAIN (#172)	1	1	1	1		AP
	4MX–14943–42	.JET, MAIN (#175)	1	1	1	1		AP
	4MX–14943–43	.JET, MAIN (#180)	1	1	1	1		AP
	4MX–14943–94	.JET, MAIN (#182)	1	1	1	1		AP
	4MX–14943–44	.JET, MAIN (#185)	1	1	1	1		AP
	4MX–14943–95	.JET, MAIN (#188)	1	1	1	1		AP
19	4MX–14948–04	.JET, SLOW (#42)	1	1	1	1		STD
	4MX–14948–05	.JET, SLOW (#45)	1	1	1	1		STD
	4MX–14948–02	.JET, SLOW (#38)	1					AP
	4MX–14948–03	.JET, SLOW (#40)	1	1	1	1		AP
	4MX–14948–06	.JET, SLOW (#48)	1	1	1	1		AP
20	3TJ–1494F–16	.JET (#72)	1	1	1	1		STD
	3TJ–1494F–13	.JET (#65)	1	1	1	1		AP
	3TJ–1494F–14	.JET (#68)	1	1	1	1		AP
	3TJ–1494F–15	.JET (#70)	1	1	1	1		AP
	3TJ–1494F–17	.JET (#75)	1	1	1	1		AP
	3TJ–1494F–18	.JET (#78)	1	1	1	1		AP
	3TJ–1494F–19	.JET (#80)	1	1	1	1		AP
21	4JT–1494F–15	.JET (#70)	1	1	1	1		STD


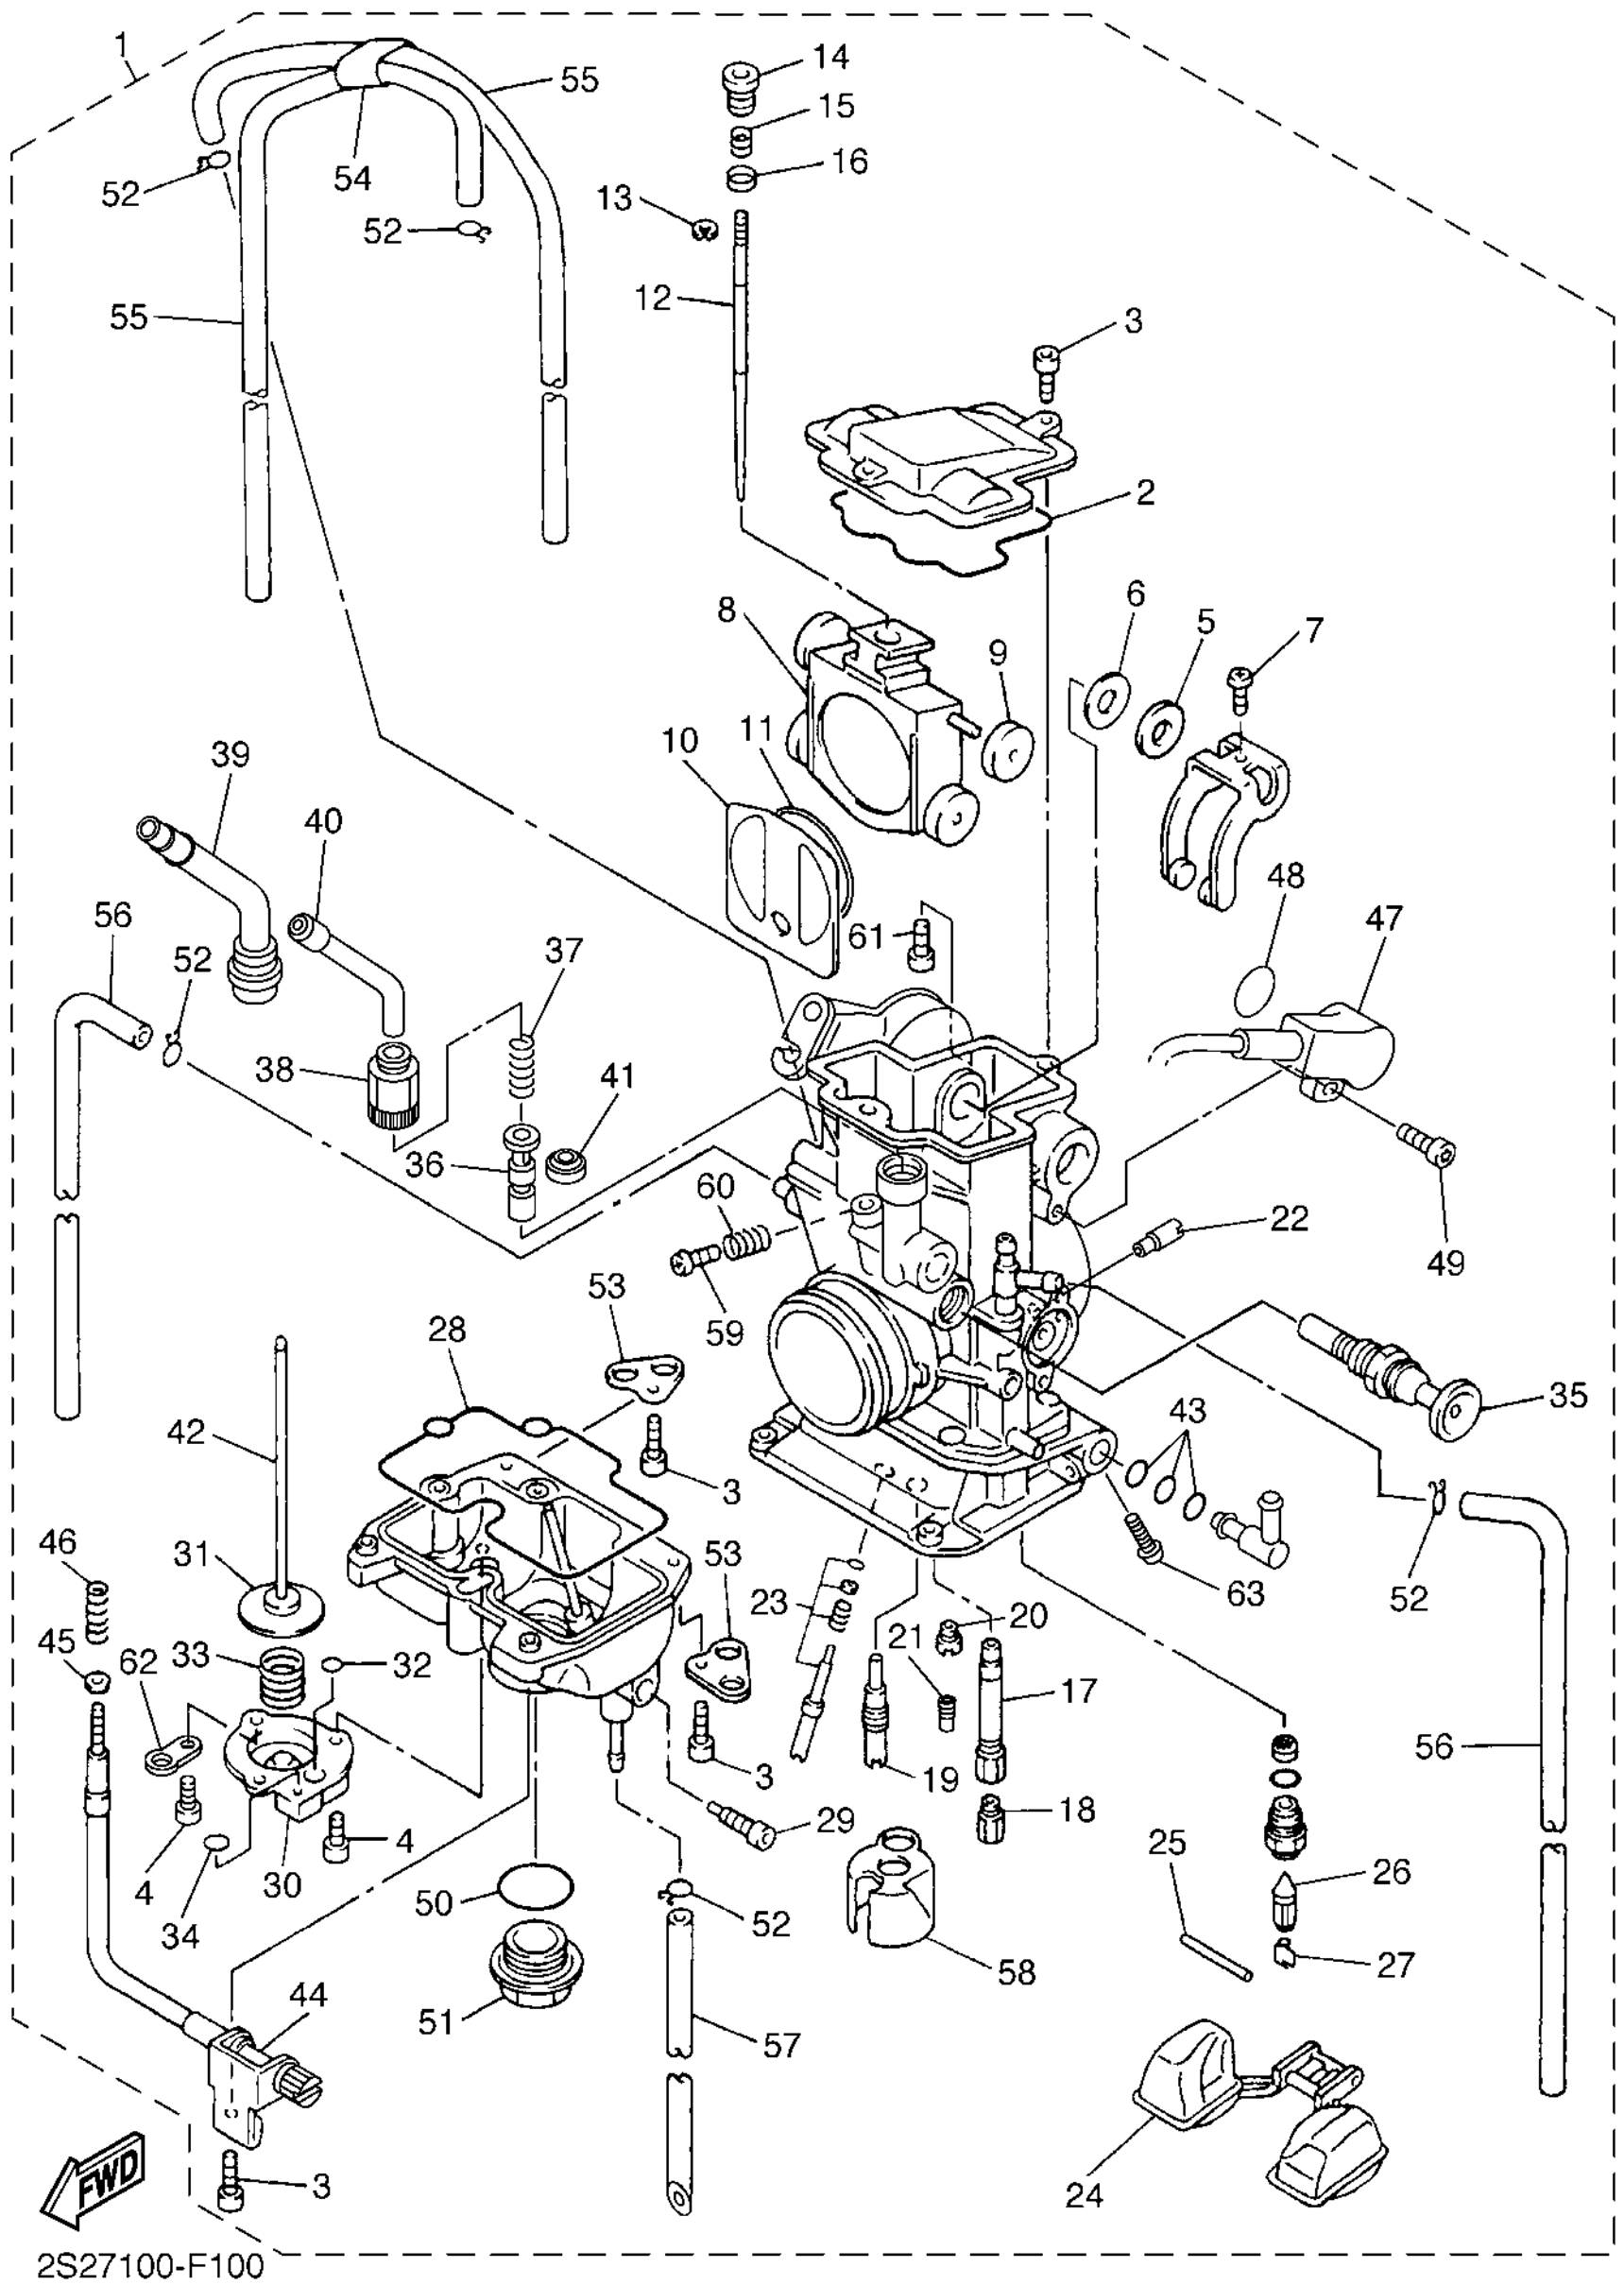


FIG. 10 CARBURETOR


REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
21	4JT–1494F–03	.JET (#40)	1	1	1	1		AP
	4JT–1494F–07	.JET (#50)	1	1	1	1		AP
	4JT–1494F–11	.JET (#60)	1	1	1	1		AP
	4JT–1494F–19	.JET (#80)	1	1	1	1		AP
	4JT–1494F–23	.JET (#90)	1	1	1	1		AP
	4JT–1494F–27	.JET(#100)	1	1	1	1		AP
22	5TA–14943–28	.JET, MAIN (#105)	1	1	1	1		
23	5NL–14105–00	.PILOT SCREW SET	1	1	1	1		
24	4SR–14985–00	.FLOAT	1	1	1	1		
25	676–14548–00	.PIN, FLOAT ARM	1	1	1	1		
26	4MX–14392–00	.VALVE, NEEDLE	1	1	1	1		
27	633–14159–00	.CLIP	1	1	1	1		
28	5JG–14984–00	.GASKET, FLOAT CHAMBER	1	1	1	1		
29	3TJ–14191–40	.PLUG, DRAIN	1	1	1	1		
30	3TJ–14293–40	.COVER 1	1	1	1	1		
31	5JG–14940–76	.DIAPHRAGM ASSY	1	1	1	1		STD
	5JG–14940–16	.DIAPHRAGM ASSY	1	1	1	1		AP
	5JG–14940–17	.DIAPHRAGM ASSY	1	1	1	1		AP
	5JG–14940–18	.DIAPHRAGM ASSY	1	1	1	1		AP
32	3TJ–14536–40	.GASKET	1	1	1	1		
33	3TJ–14933–40	.SPRING, DIAPHRAGM	1	1	1	1		
34	6H4–14561–00	.O-RING	1	1	1	1		
35	5XC–14171–00	.PLUNGER, STARTER	1	1	1	1		
36	5TA–14371–00	.PLUNGER, STARTER	1	1	1	1		
37	5TA–14335–00	.SPRING, PLUNGER	1	1	1	1		
38	5TA–14991–00	.SCREW	1	1	1	1		
39	2S2–14374–00	.CAP, PLUNGER	1	1	1	1		

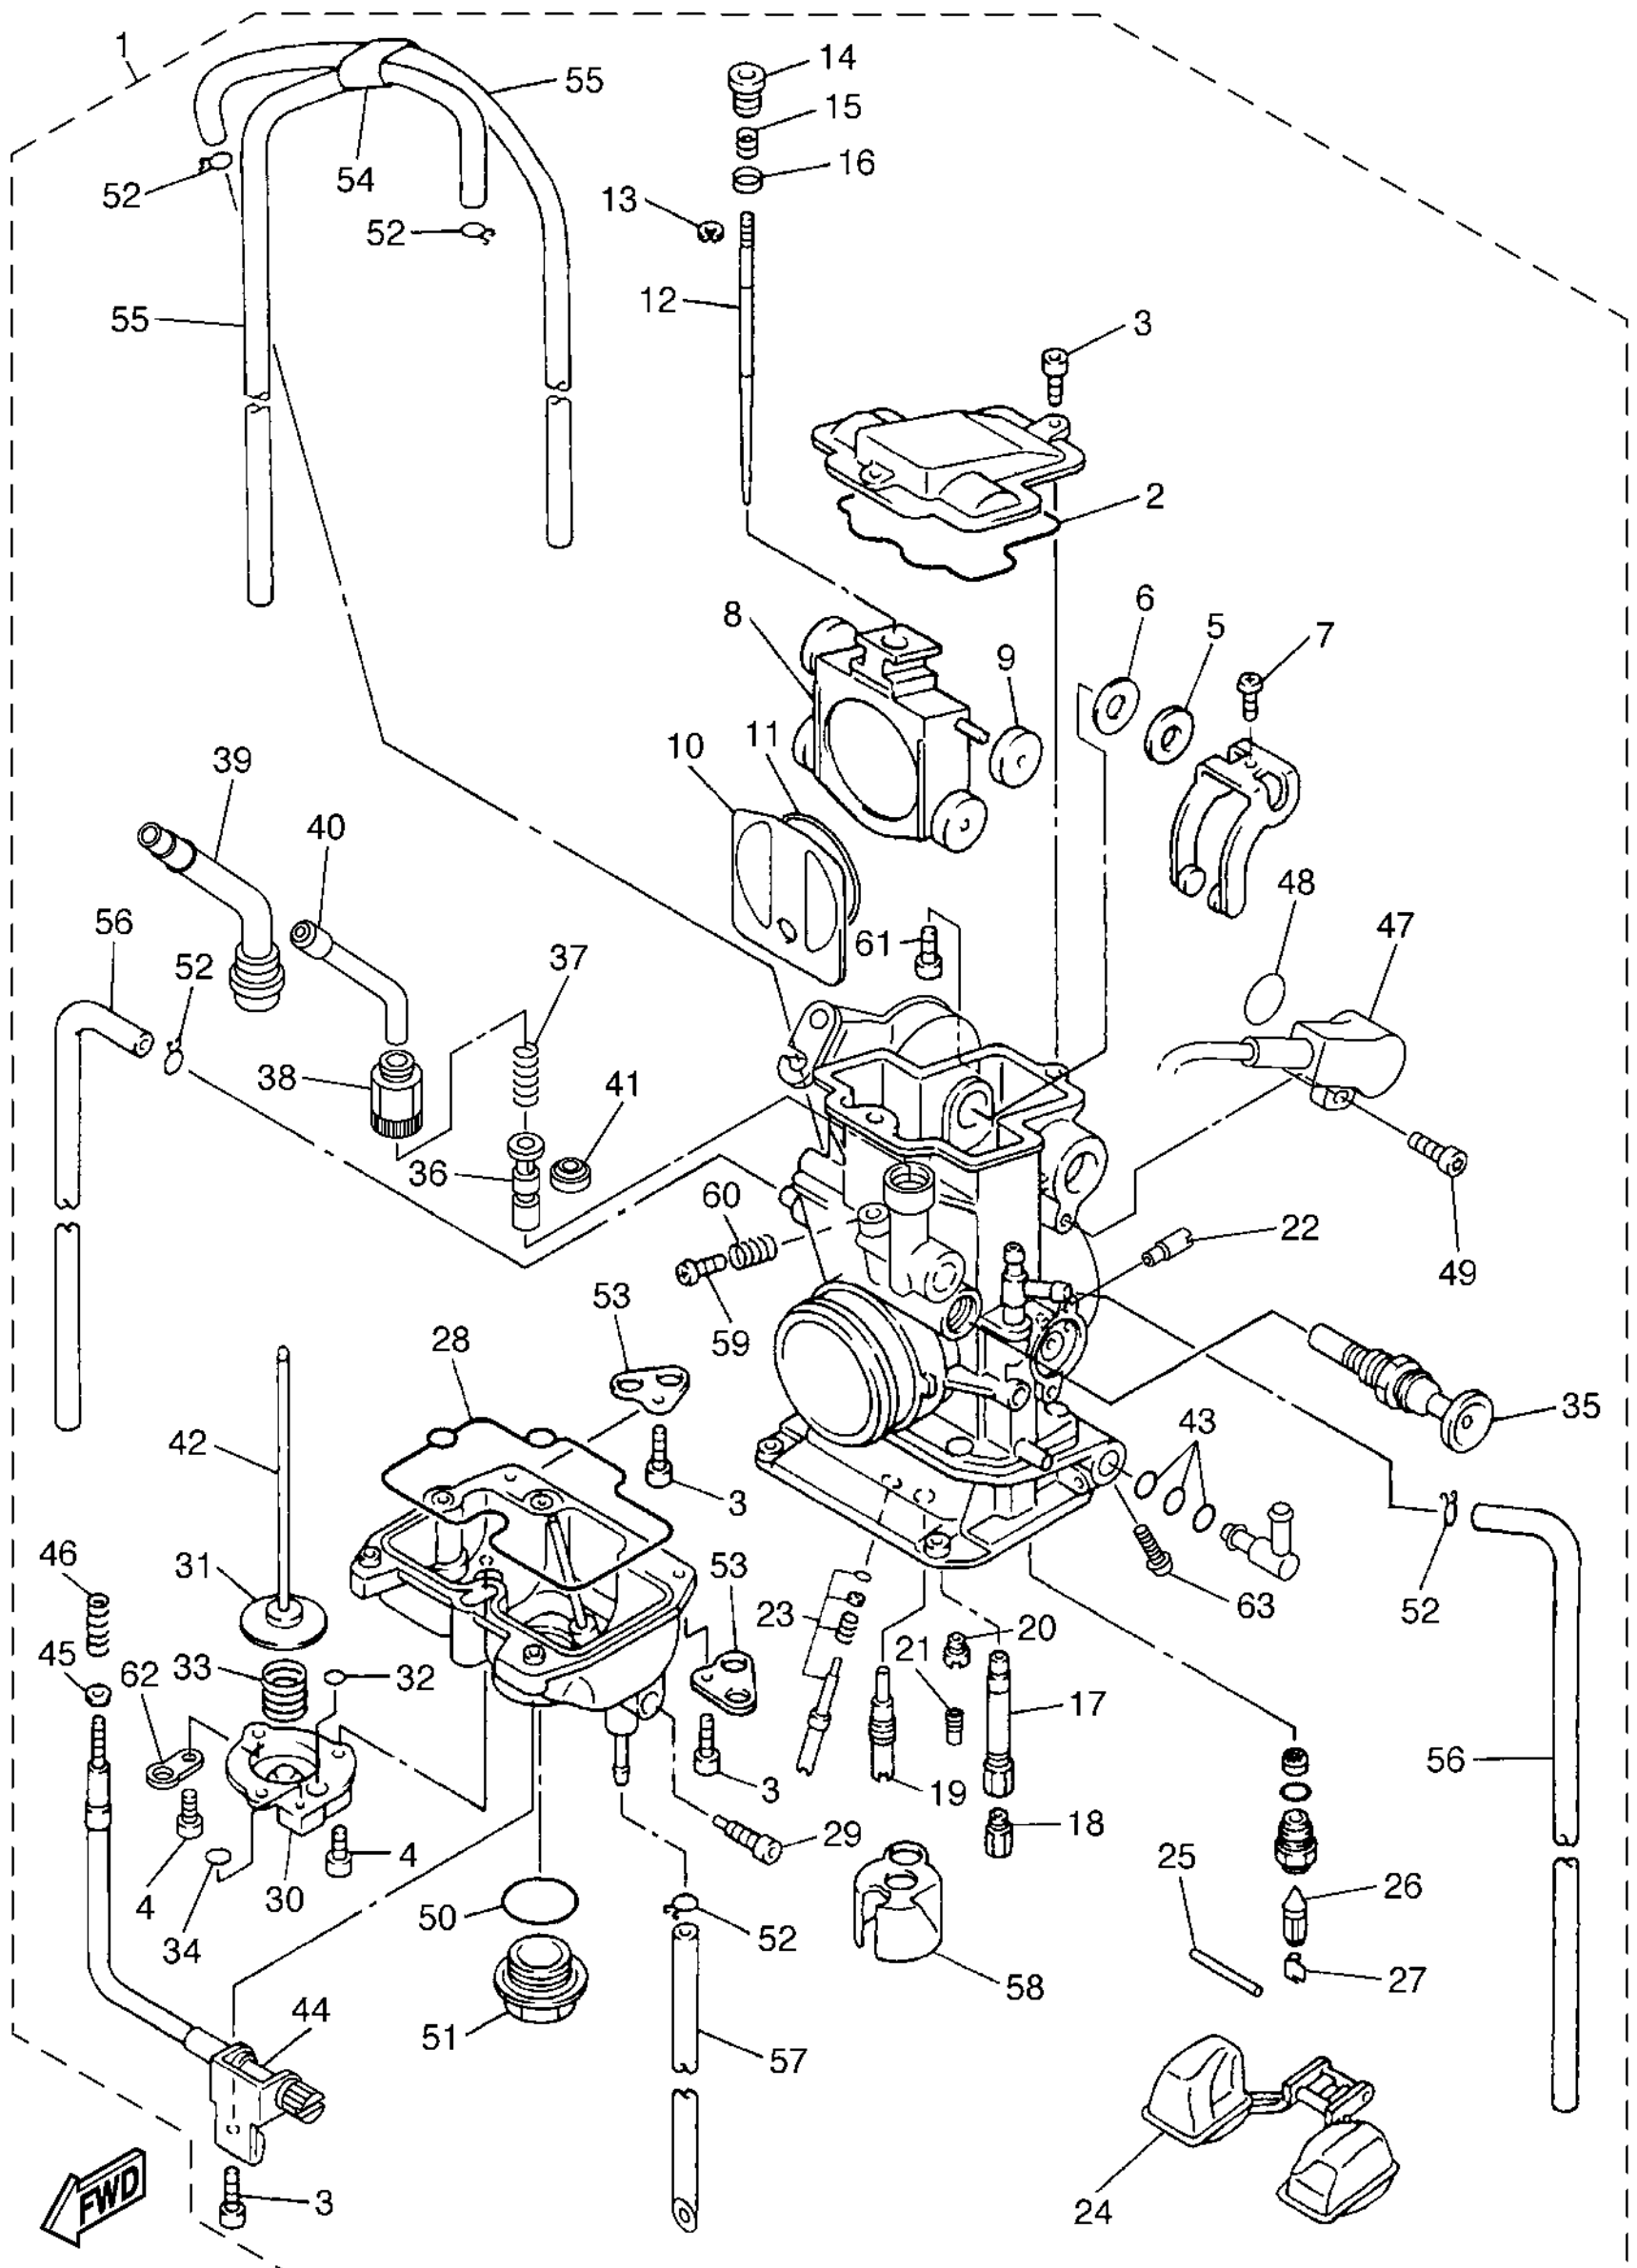

2S27100-F100

FIG. 10 CARBURETOR


REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU	REMARKS
40	5TA–14155–00	.GUIDE, CABLE	1	1	1	1	
41	5TA–14997–00	.SEAL	1	1	1	1	
42	5JG–14379–00	.ROD, STARTER	1	1	1	1	
43	3TJ–14564–40	.O-RING	3	3	3	3	
44	5XC–14922–00	.SCREW, THROTTLE	1	1	1	1	
45	90201–08410	.WASHER, PLATE	1	1	1	1	
46	5TA–14934–00	.SPRING, THROTTLE STOP	1	1	1	1	
47	5XC–85885–00	.THROTTLE SENSOR ASSY	1	1	1	1	
48	5NX–14562–00	.O-RING	1	1	1	1	
49	5NX–14216–00	.SCREW	1	1	1	1	
50	4MX–14561–00	.O-RING	1	1	1	1	
51	4MX–14115–00	.PLUG, SCREW	1	1	1	1	
52	3TJ–14137–40	.CLIP	5	5	5	5	
53	5BE–14146–00	.PLATE	2	2	2	2	
54	5TA–14261–00	.HOLDER	1	1	1	1	
55	5UL–14196–00	.PIPE	2	2	2	2	
56	5TA–14197–00	.PIPE	2	2	2	2	
57	5TJ–14987–00	.HOSE	1	1	1	1	
58	5JG–14346–00	.PLATE	1	1	1	1	
59	5JG–14565–00	.SCREW	1	1	1	1	
60	5JG–14531–00	.SPRING, ADJUST SCREW	1	1	1	1	
61	5NL–14591–00	.SCREW	1	1	1	1	
62	5PA–14146–00	.PLATE	1	1	1	1	
63	5XD–14325–00	.SCREW, PAN HEAD	1	1	1	1	

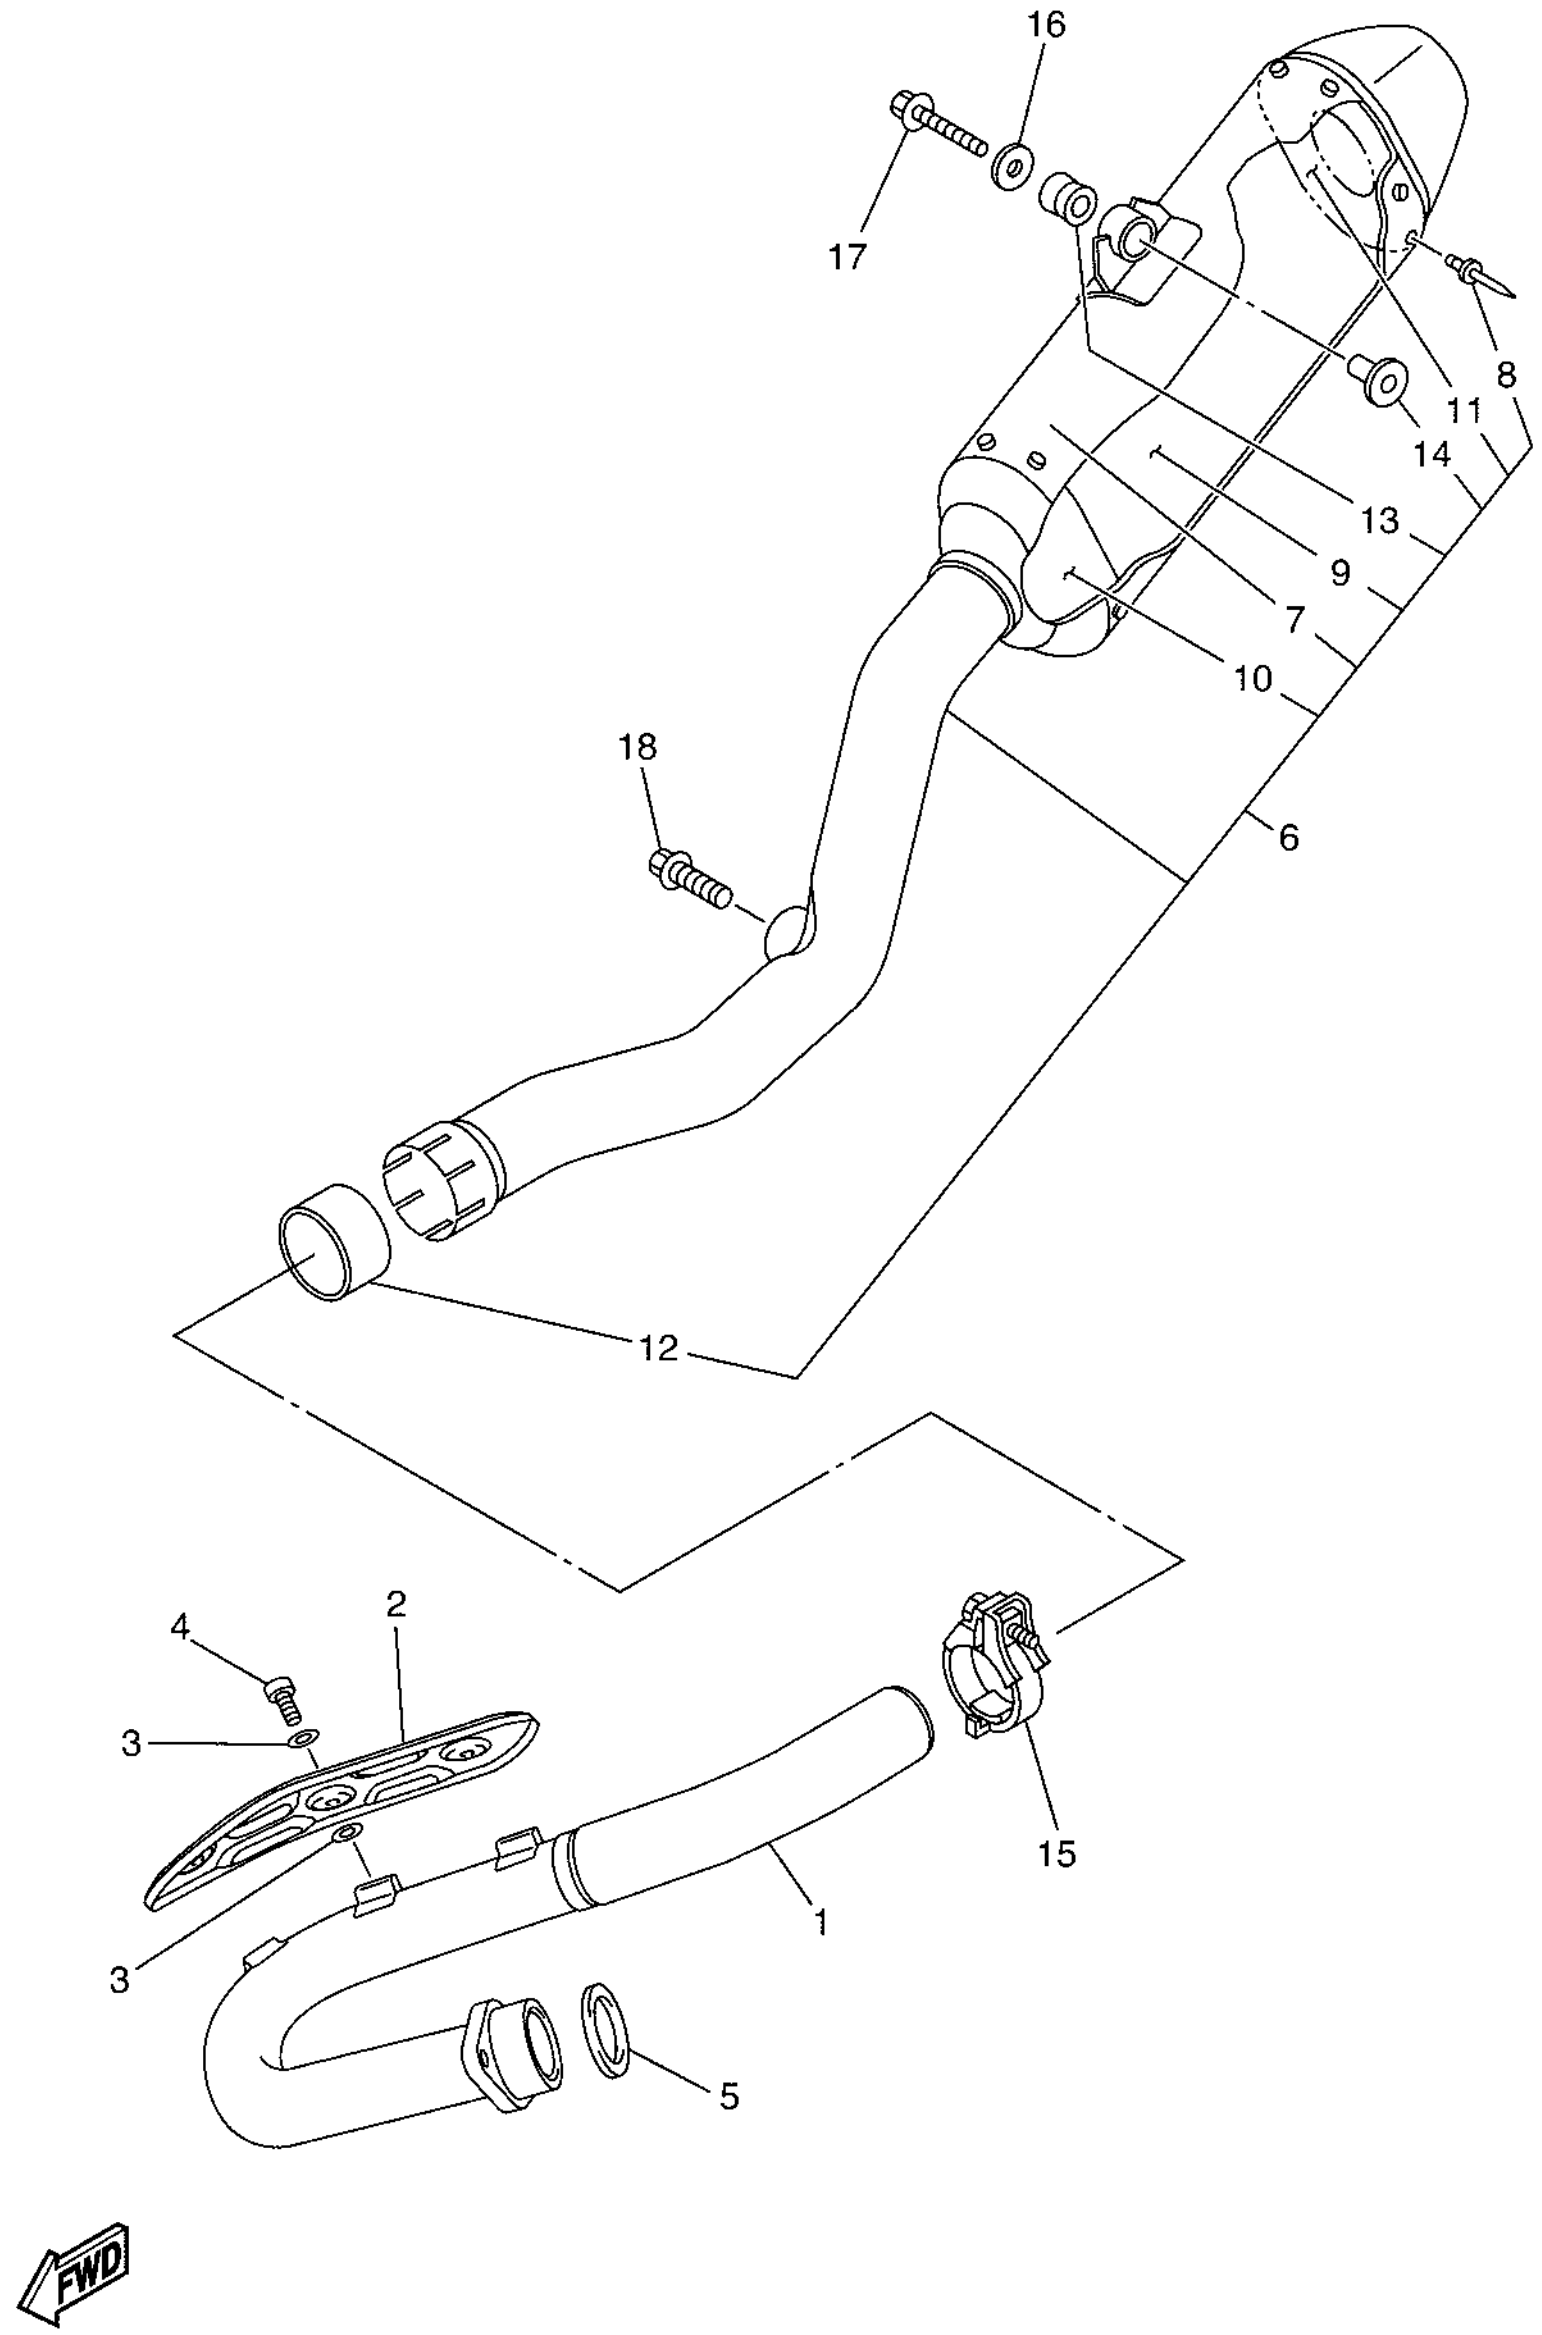

5XCR100-H110

FIG. 11 EXHAUST

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5XC–14611–R0	PIPE, EXHAUST 1	1					
2	5XC–14628–R0	PROTECTOR, EXHAUST PIPE	1					
3	90201–05017	WASHER, PLATE	6					
4	98980–06008	SCREW, BIND	3					
5	5NL–14613–00	GASKET, EXHAUST PIPE	1					
6	5XC–14750–R0	SILENCER ASSY	1					
7	5XC–1466G–R0	.BODY, SILENCER	1					
8	90267–48084	.RIVET, BLIND	16					
9	5XC–1469A–R0	.FIBER	1					
10	2S2–1469E–00	.FIBER	1					
11	2S2–1469F–00	.FIBER	1					
12	5XD–14714–00	.GASKET, MUFFLER	1					
13	5BE–14747–00	.DAMPER, MUFFLER	1					
14	90387–08081	.COLLAR	1					
15	5BE–14788–00	BAND, SILENCER	1					
16	90201–08061	WASHER, PLATE	1					
17	90105–08137	BOLT, FLANGE	1					
18	90105–08307	BOLT, FLANGE	1					

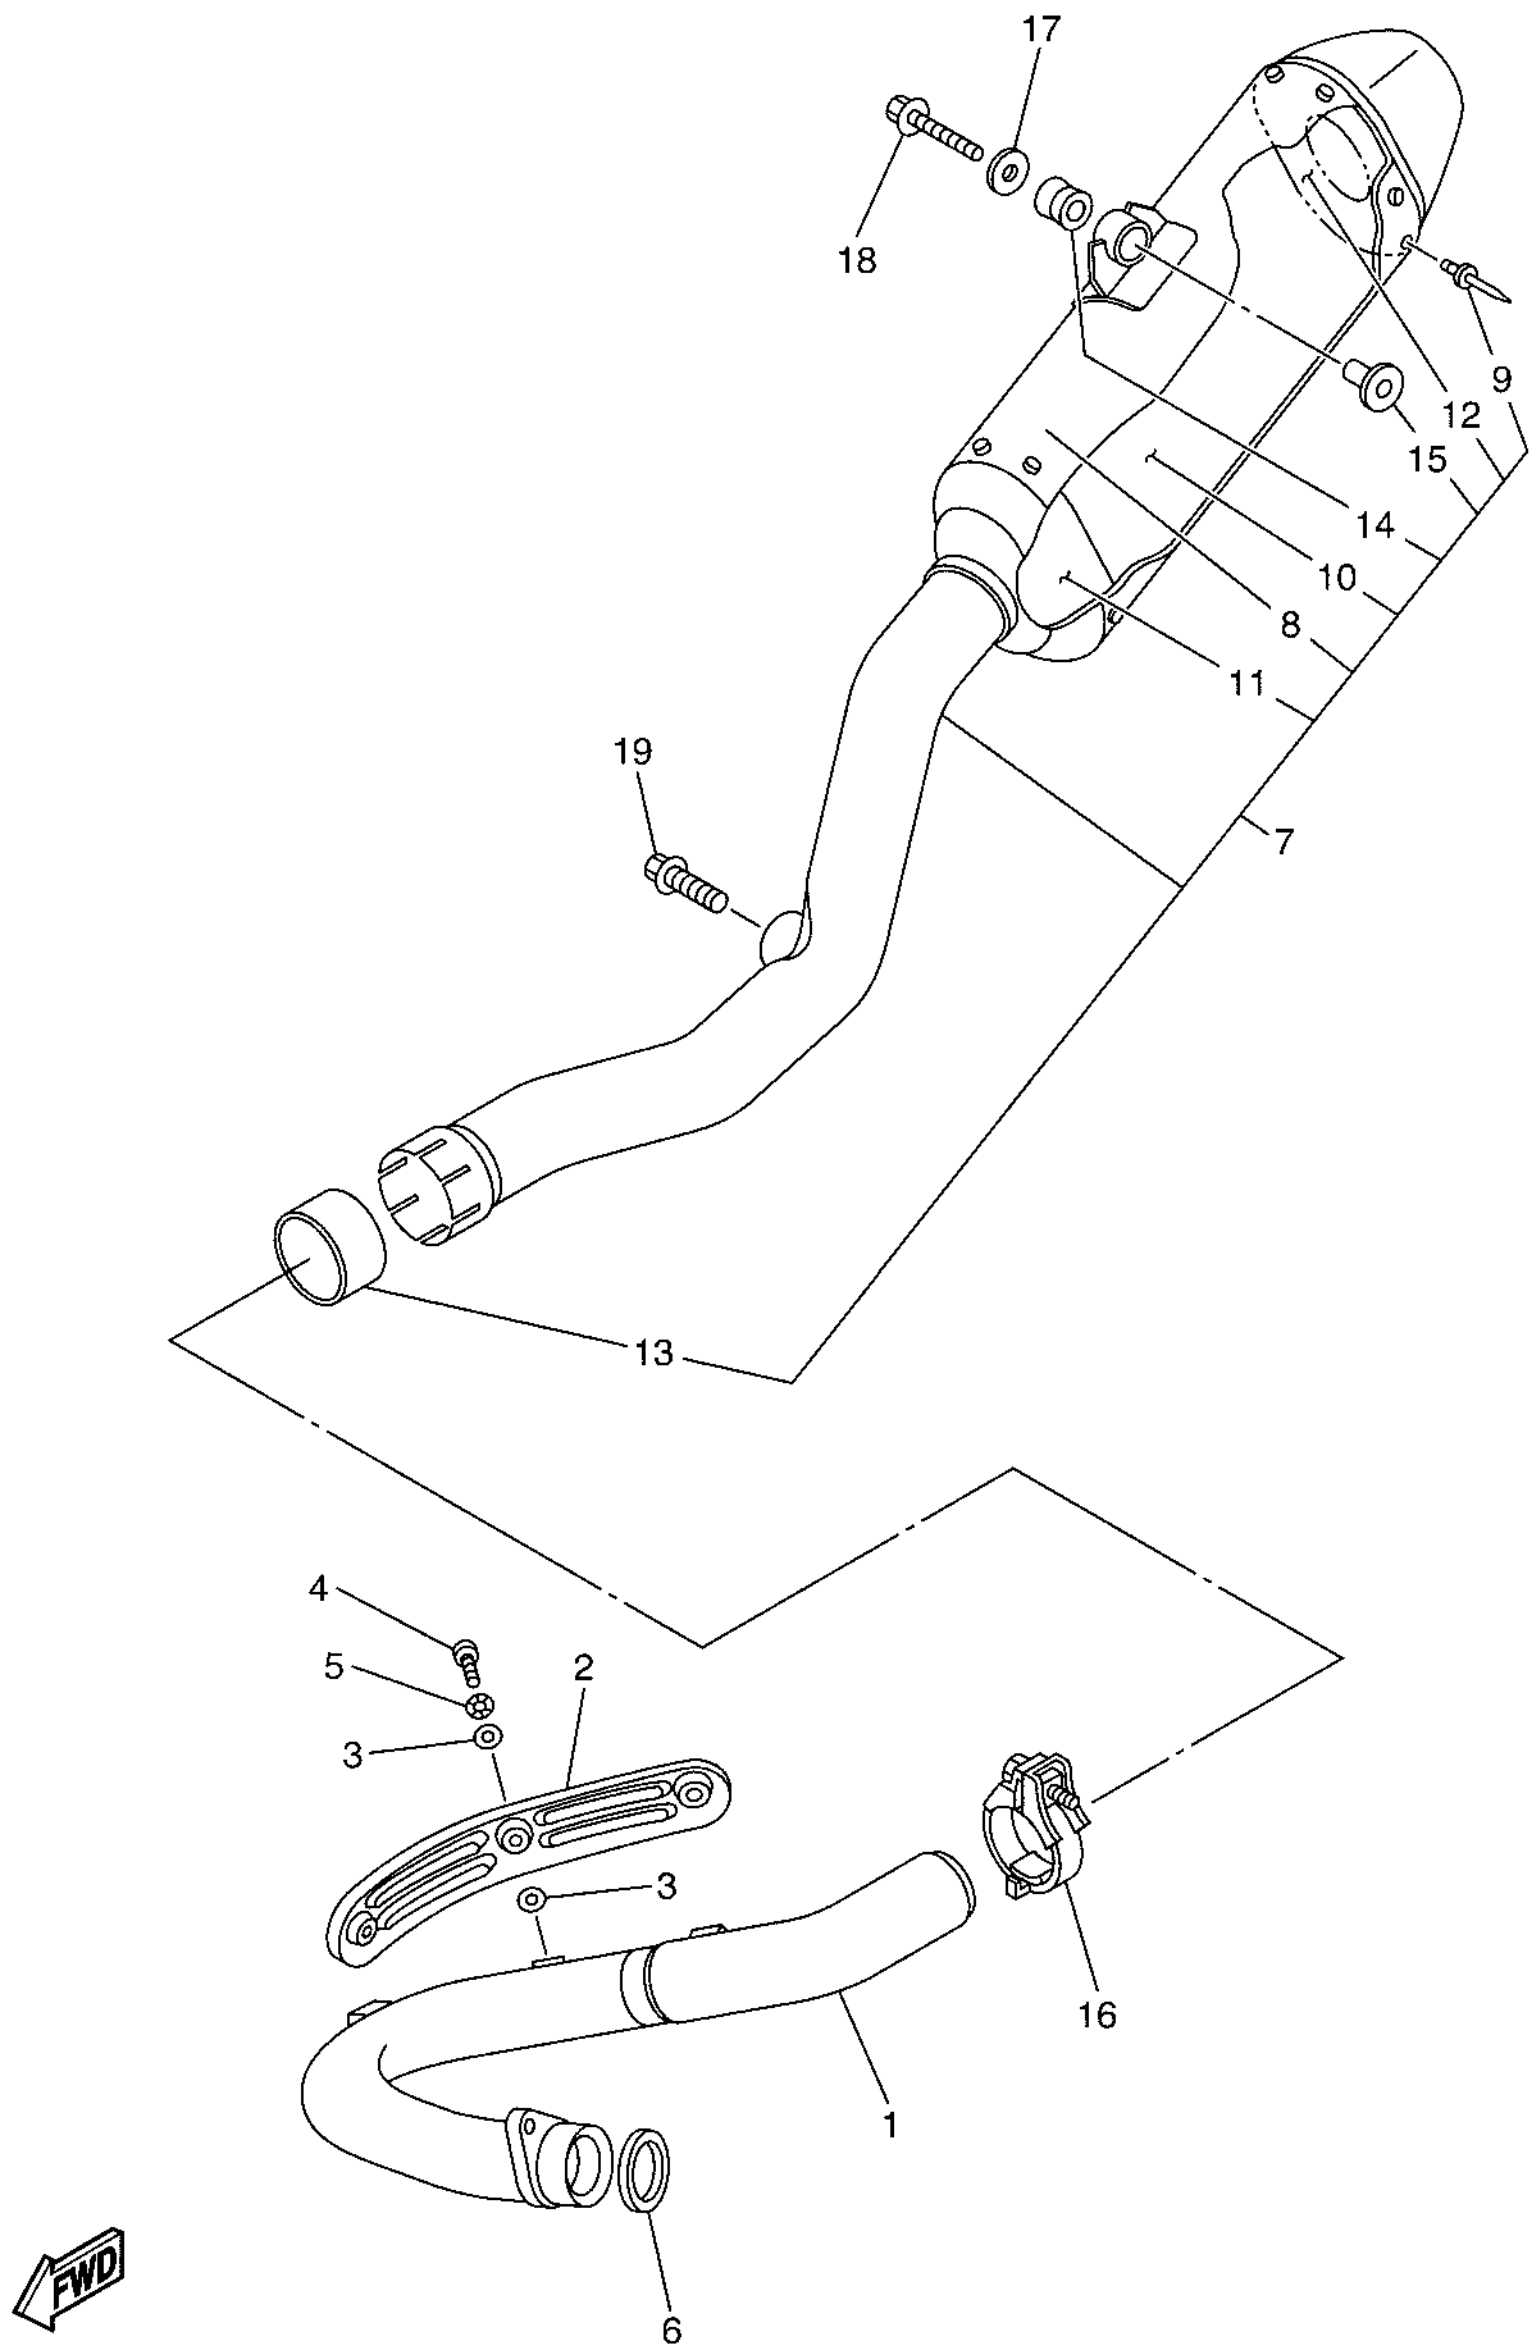


5XCL100-G110

FIG. 12 EXHAUST 2

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5XC–14611–20	PIPE, EXHAUST 1		1	1	1		
2	5XC–14628–00	PROTECTOR, EXHAUST PIPE		1	1	1		
3	4BD–14766–00	WASHER, PROTECTOR		6	6	6		
4	98980–06008	SCREW, BIND		3	3	3		
5	90206–06090	WASHER, WAVE		3	3	3		
6	5NL–14613–00	GASKET, EXHAUST PIPE		1	1	1		
7	5XC–14750–S0	SILENCER ASSY		1	1	1		
8	5XC–1466G–S0	.BODY, SILENCER		1	1	1		
9	90267–48084	.RIVET, BLIND		16	16	16		
10	5XC–1469A–10	.FIBER		1	1	1		
11	2S2–1469E–00	.FIBER		1	1	1		
12	2S2–1469F–00	.FIBER		1	1	1		
13	5XD–14714–00	.GASKET, MUFFLER		1	1	1		
14	5BE–14747–00	.DAMPER, MUFFLER		1	1	1		
15	90387–08081	.COLLAR		1	1	1		
16	5BE–14788–00	BAND, SILENCER		1	1	1		
17	90201–08061	WASHER, PLATE		1	1	1		
18	90105–08137	BOLT, FLANGE		1	1	1		
19	90105–08307	BOLT, FLANGE		1	1	1		

FIG. 13 CRANKCASE

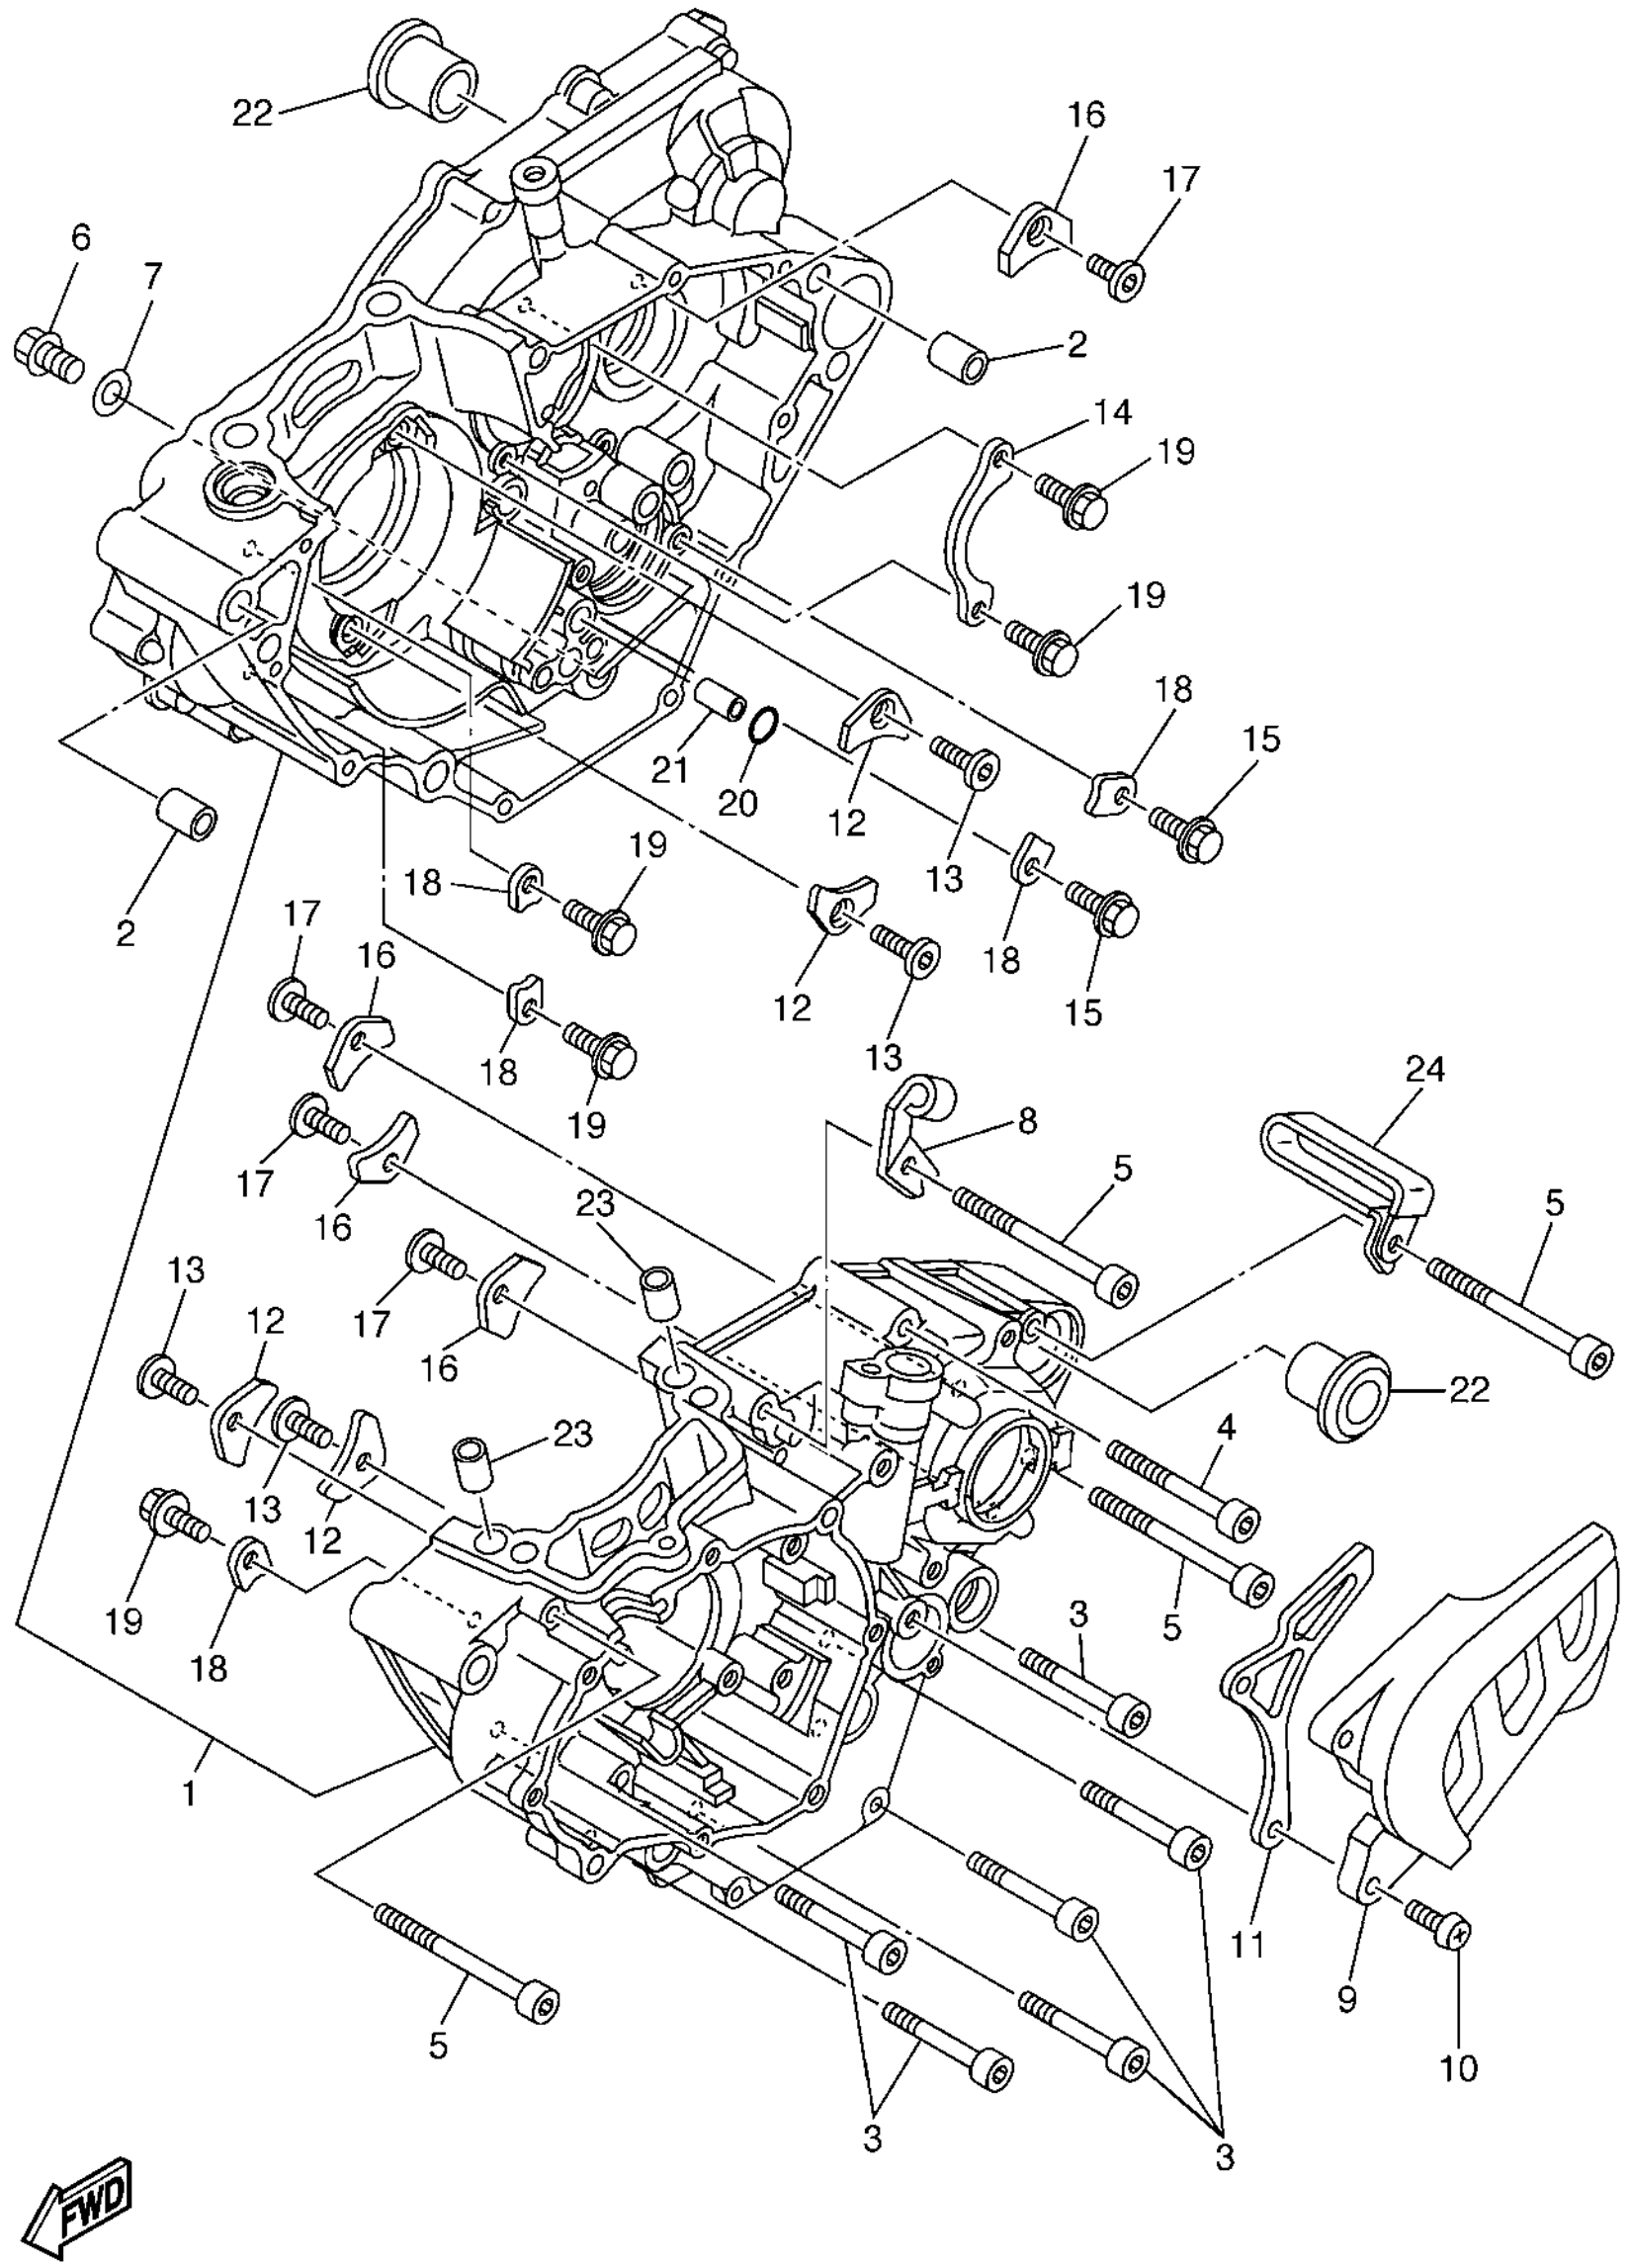

5XC9100-E120

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5XC–15150–21–YX	CRANKCASE ASSY	1	1	1	1		
2	93612–16254	PIN, DOWEL	2	2	2	2		
3	91312–06045	BOLT	6	6	6	6		
4	91312–06055	BOLT	1	1	1	1		
5	91312–06070	BOLT	4	4	4	4		
6	95022–10016	BOLT, FLANGE	1	1	1	1		
7	90430–10188	GASKET	1	1	1	1		
8	5NL–15441–01	HOLDER, CLUTCH CABLE	1	1	1	1		
9	5BE–15421–30	COVER, CRANKCASE 2	1	1	1	1		
10	98502–06025	SCREW, PAN HEAD	2	2	2	2		
11	5NL–17466–00	GUIDE, CHAIN	1	1	1	1		
12	5BE–15383–01	PLATE, BEARING COVER	4	4	4	4		
13	90151–06044	SCREW, COUNTERSUNK	4	4	4	4		
14	5NL–15388–00	PLATE, BEARING COVER	1	1	1	1		
15	90105–06081	BOLT, FLANGE	2	2	2	2		
16	4JT–15381–01	PLATE, BEARING COVER	4	4	4	4		
17	90149–06074	SCREW	4	4	4	4		
18	5DH–18562–00	PLATE, STOPPER 2	5	5	5	5		
19	90105–06081	BOLT, FLANGE	5	5	5	5		
20	93210–10197	O-RING	1	1	1	1		
21	99530–10114	PIN, DOWEL	1	1	1	1		
22	90387–18007	COLLAR	2	2	2	2		
23	99530–10116	PIN, DOWEL	2	2	2	2		
24	90465–10013	CLAMP	1	1	1	1		

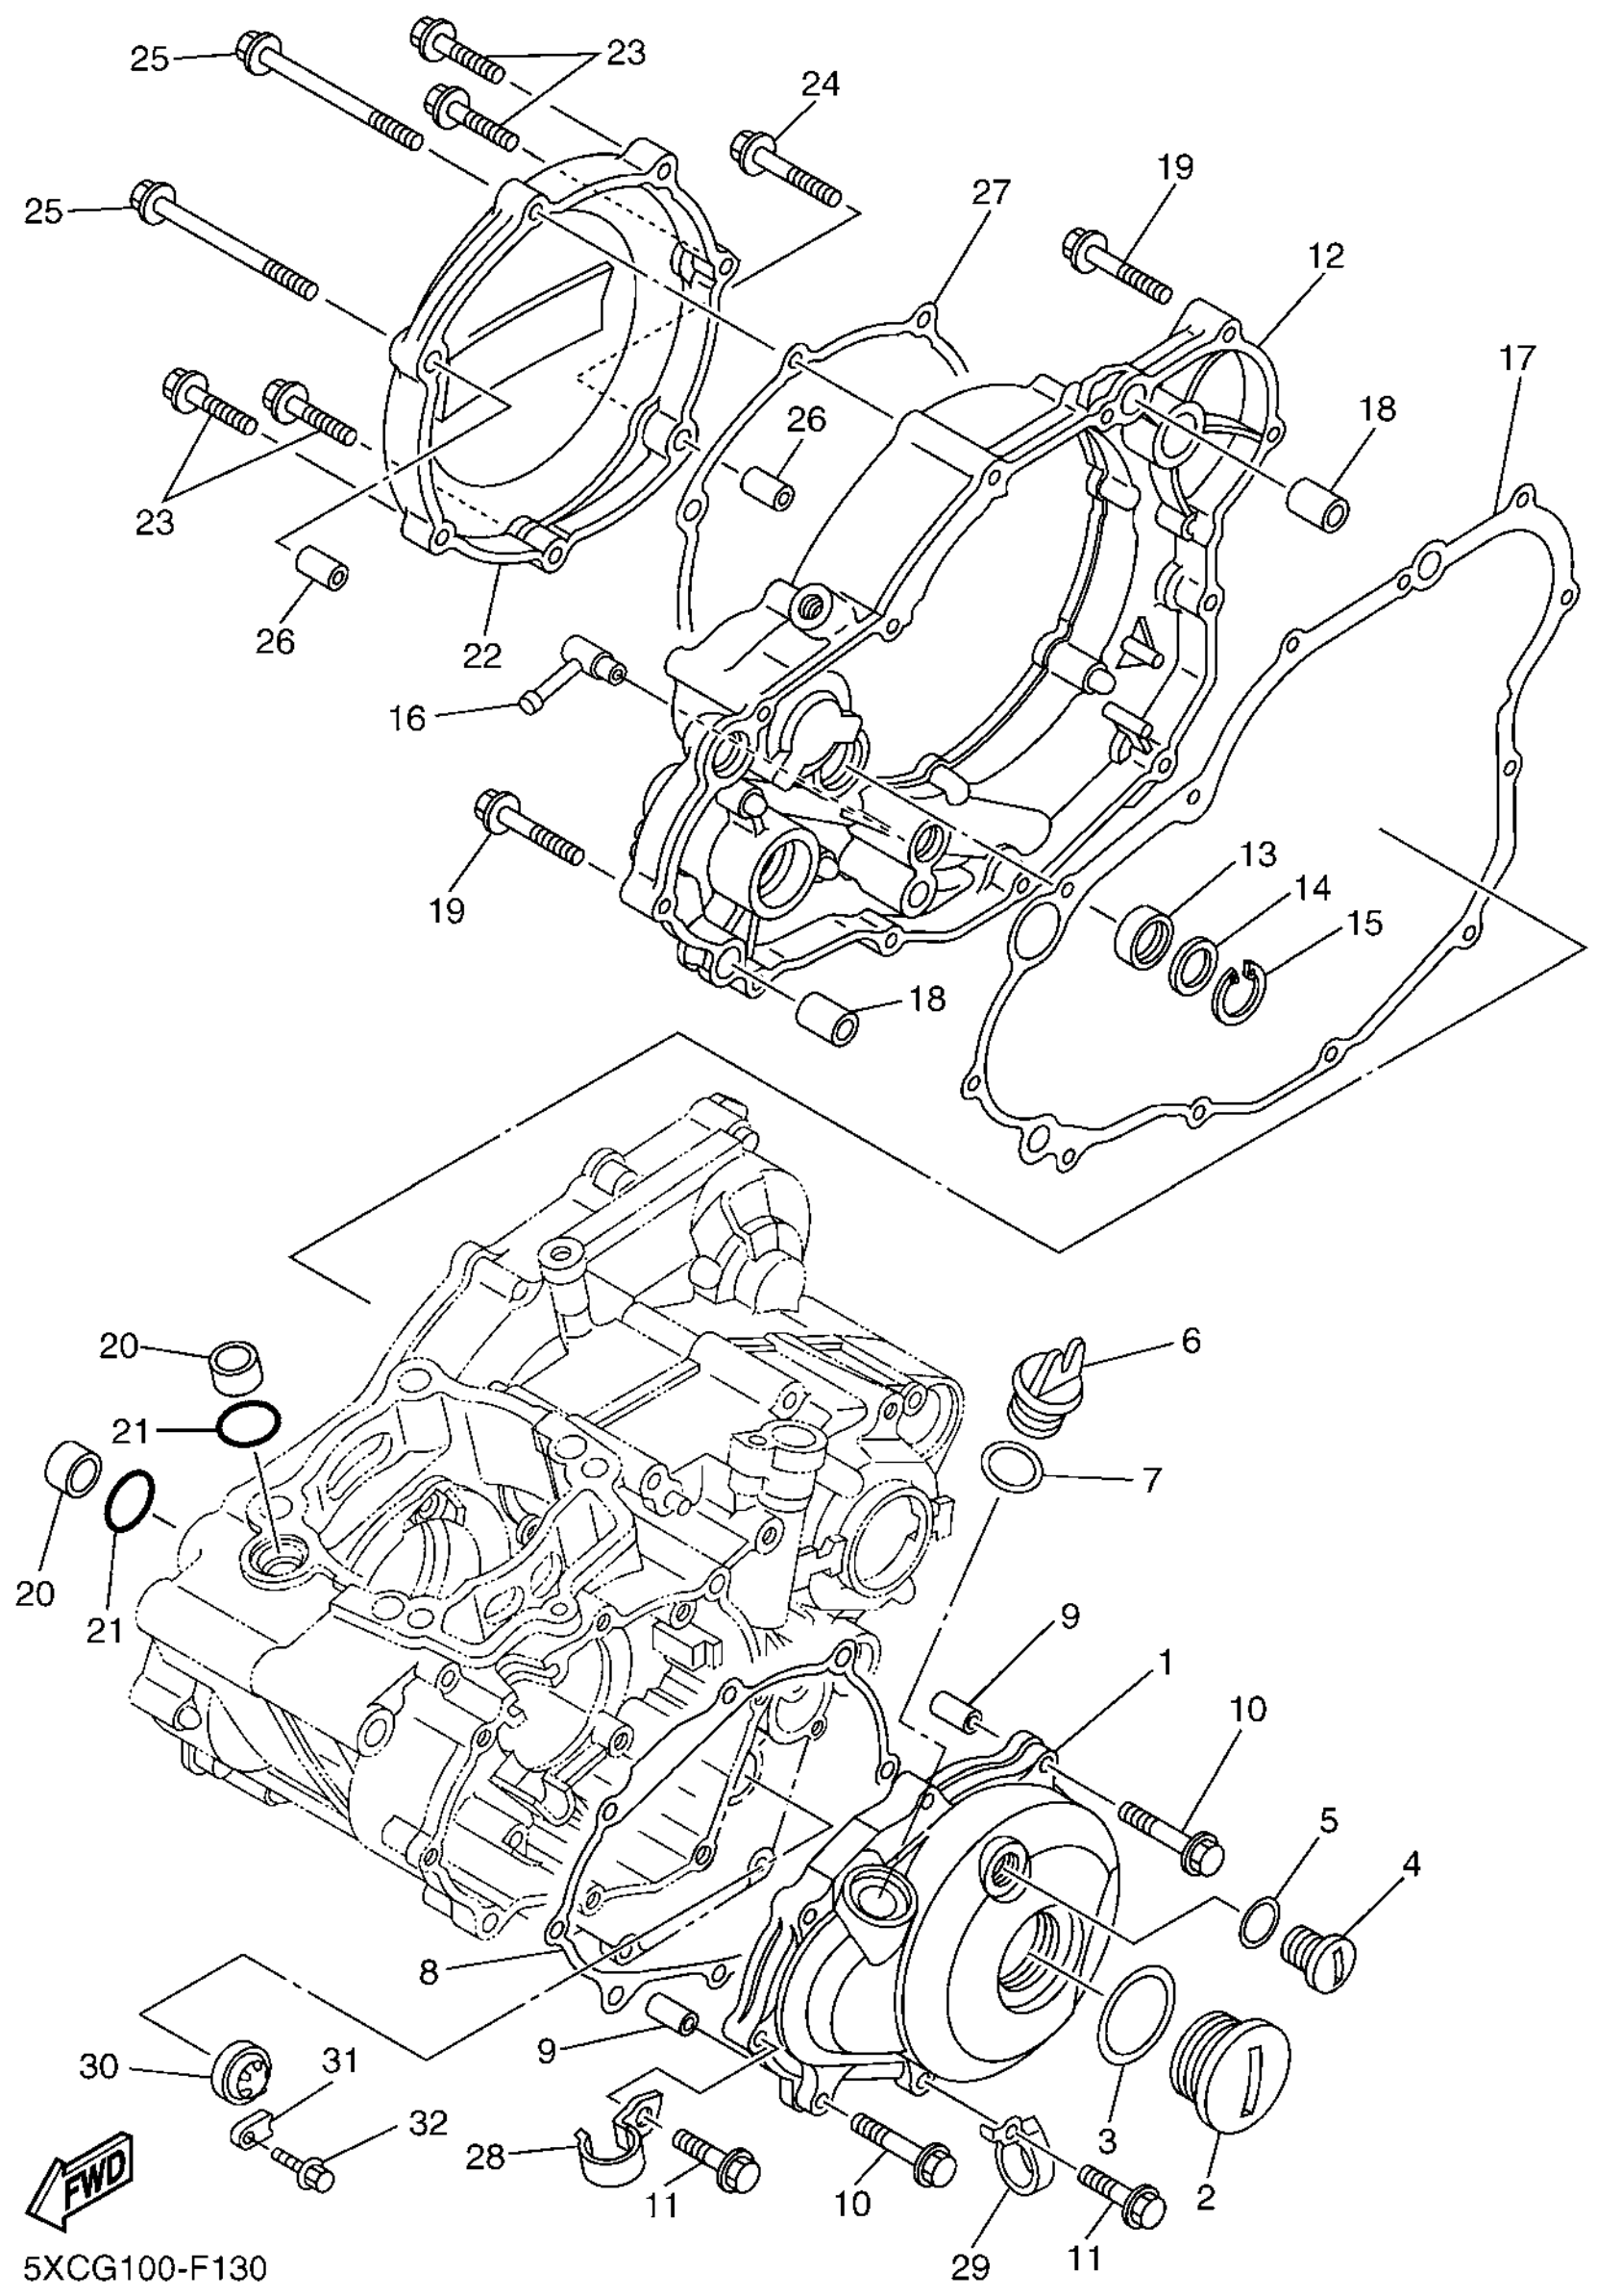


FIG. 14 CRANKCASE COVER 1

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5NL–15411–30	COVER, CRANKCASE 1	1	1	1	1		
2	90340–32006	PLUG, STRAIGHT SCREW	1	1	1	1		
3	93210–32172	O-RING	1	1	1	1		
4	90340–14015	PLUG, STRAIGHT SCREW	1	1	1	1		
5	93210–14369	O-RING	1	1	1	1		
6	3Y1–15363–00	PLUG, OIL	1	1	1	1		
7	93210–19123	O-RING	1	1	1	1		
8	5NL–15451–00	GASKET, CRANKCASE COVER 1	1	1	1	1		
9	99530–08016	PIN, DOWEL	2	2	2	2		
10	95022–06035	BOLT, FLANGE	2	2	2	2		
11	95022–06025	BOLT, FLANGE	6	6	6	6		
12	5XC–15431–01	COVER, CRANKCASE 3	1	1	1	1		
13	93101–14164	OIL SEAL	1	1	1	1		
14	90201–15701	WASHER, PLATE (T=1.0)	1	1	1	1		
15	99009–22500	CIRCLIP	1	1	1	1		
16	5XC–15373–00	PIPE, BREATHER	1	1	1	1		
17	5NL–15462–00	GASKET, CRANKCASE COVER 3	1	1	1	1		
18	91812–16001	PIN, DOWEL	2	2	2	2		
19	95022–06035	BOLT, FLANGE	8	8	8	8		
20	5NL–12564–00	PIPE, WATER	2	2	2	2		
21	93210–16716	O-RING	2	2	2	2		
22	5NL–15415–30	COVER, GENERATOR	1	1	1	1		
23	95022–06025	BOLT, FLANGE	4	4	4	4		
24	95022–06035	BOLT, FLANGE	1	1	1	1		
25	90105–06098	BOLT, FLANGE	2	2	2	2		
26	99530–08016	PIN, DOWEL	2	2	2	2		
27	5NL–15453–10	GASKET	1	1	1	1		


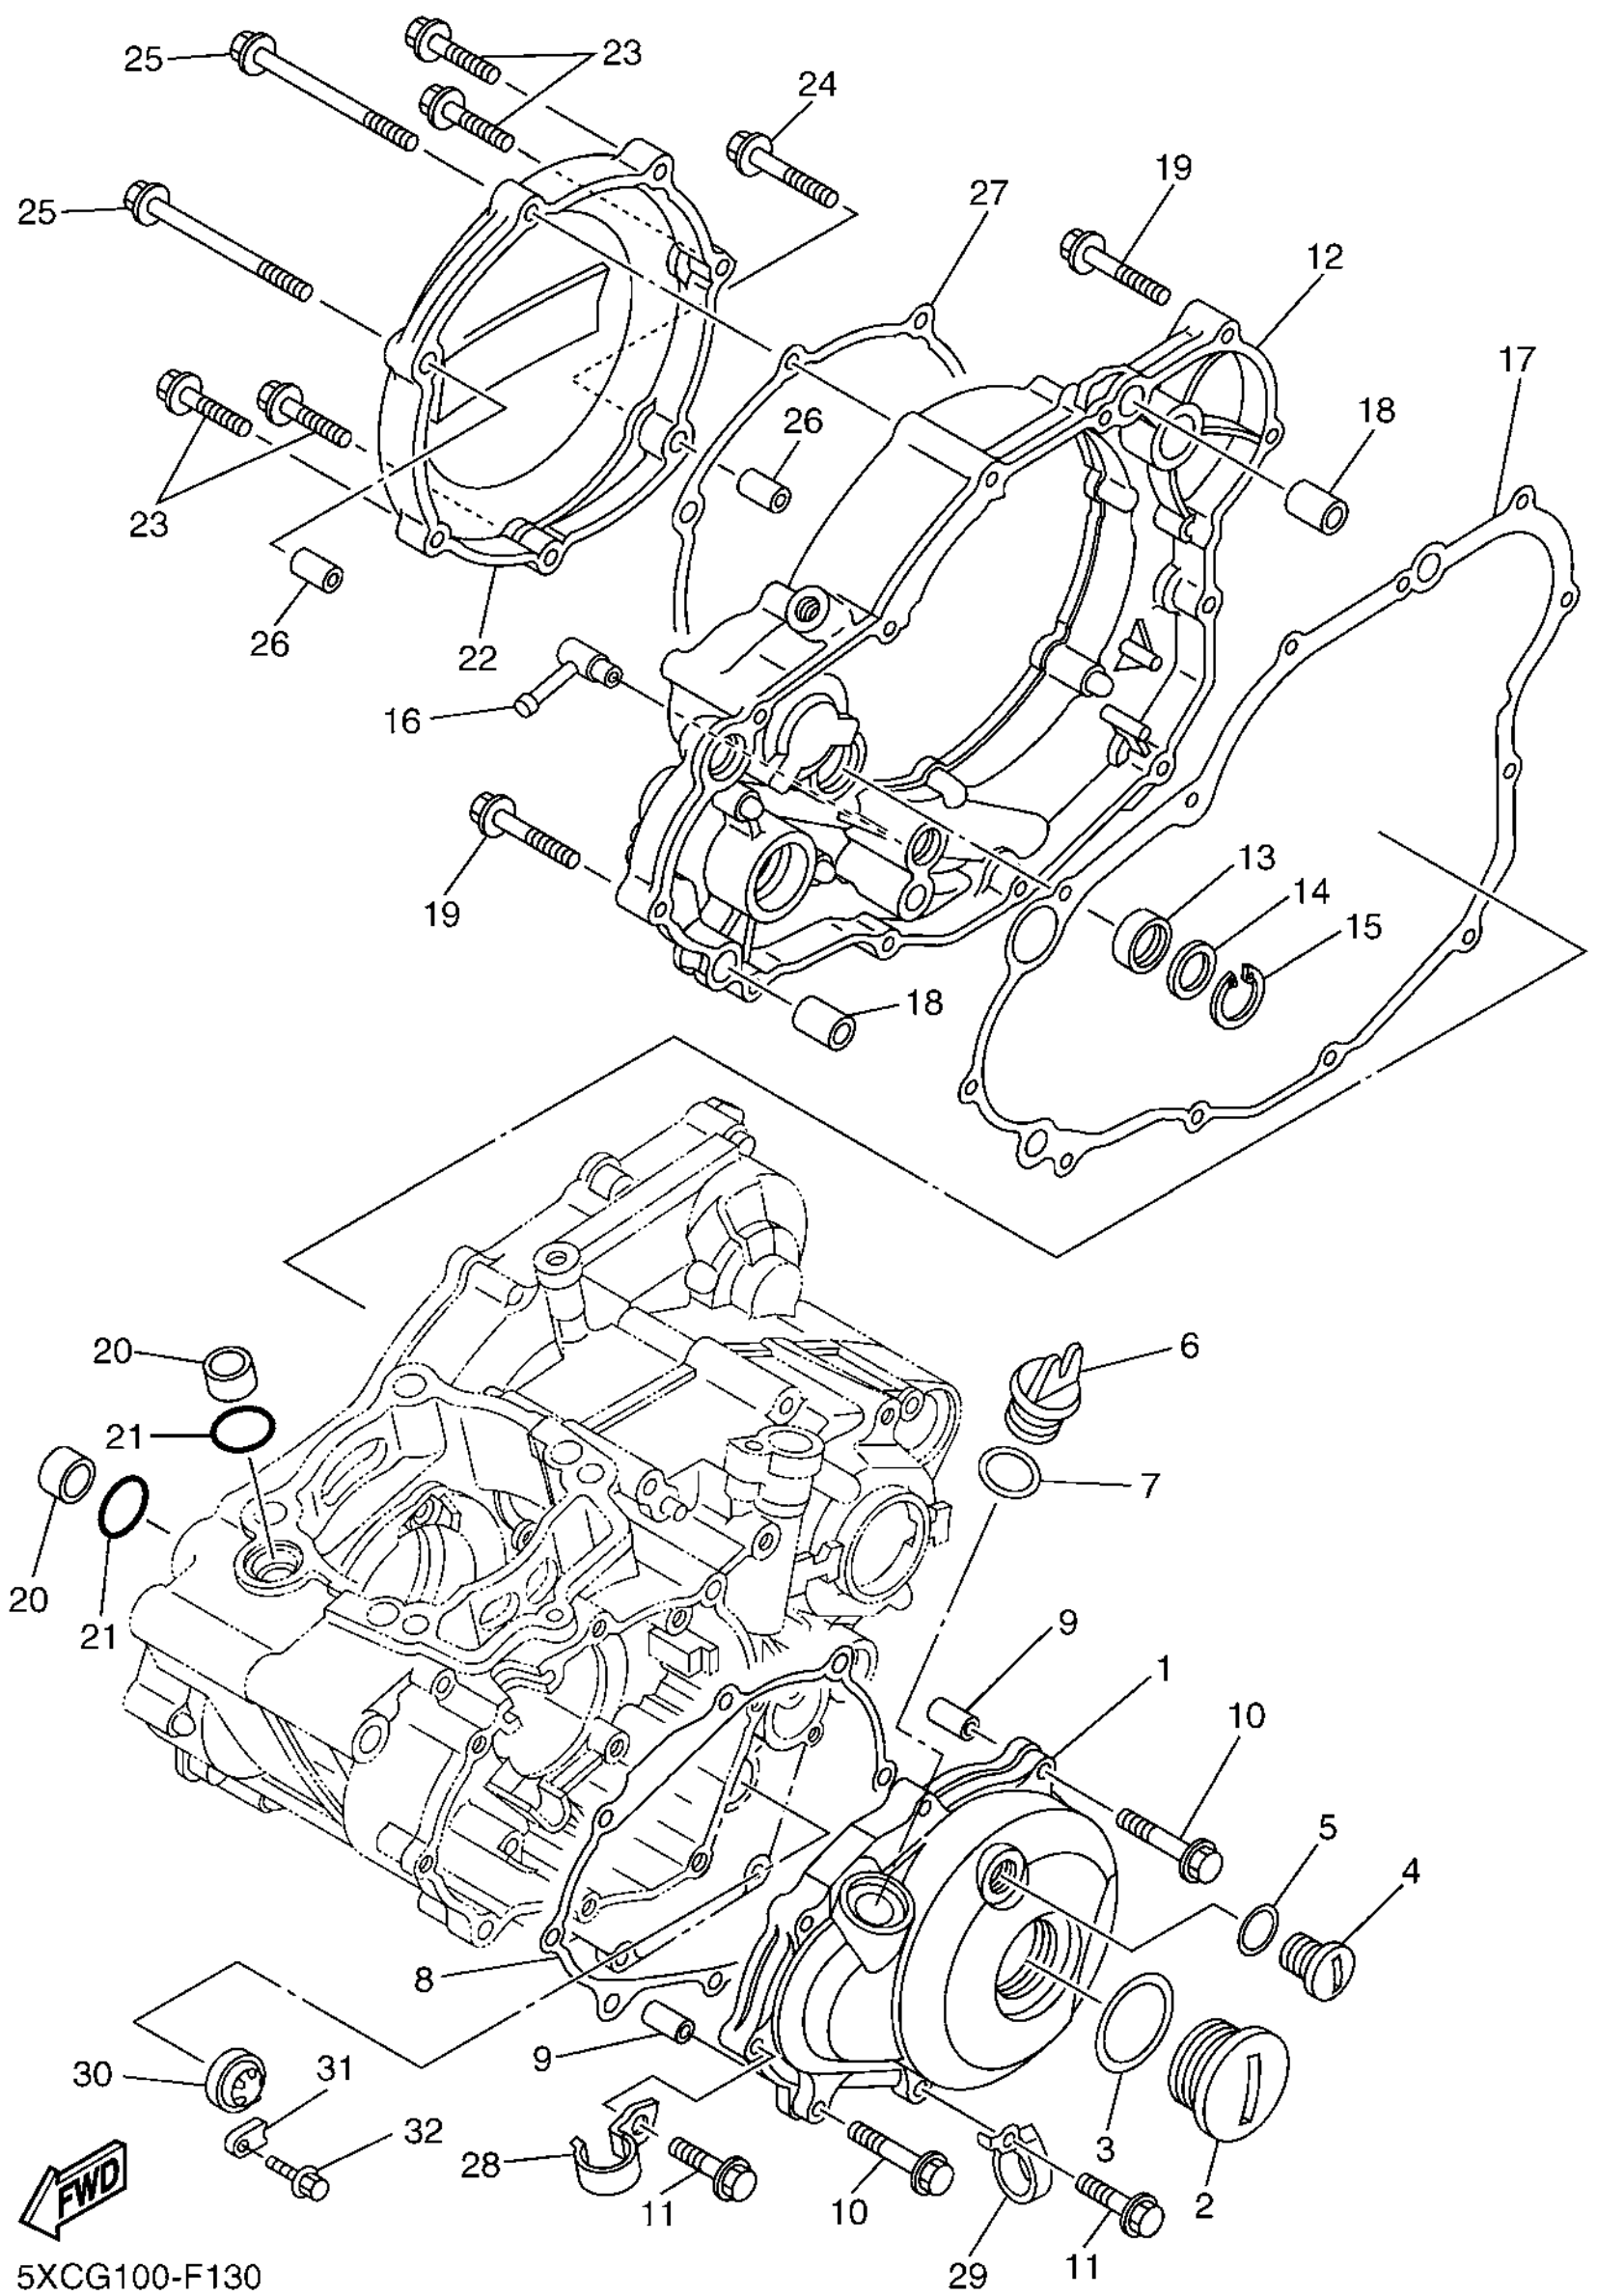


FIG. 14 CRANKCASE COVER 1


REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
28	90465–08029	CLAMP	1	1	1	1		
29	2S2–15378–00	HOLDER	1	1	1	1		
30	3Y1–15361–00	GAUGE, LEVEL	1	1	1	1		
31	5XC–15118–00	HOLDER	1	1	1	1		
32	90105–06094	BOLT, FLANGE	1	1	1	1		

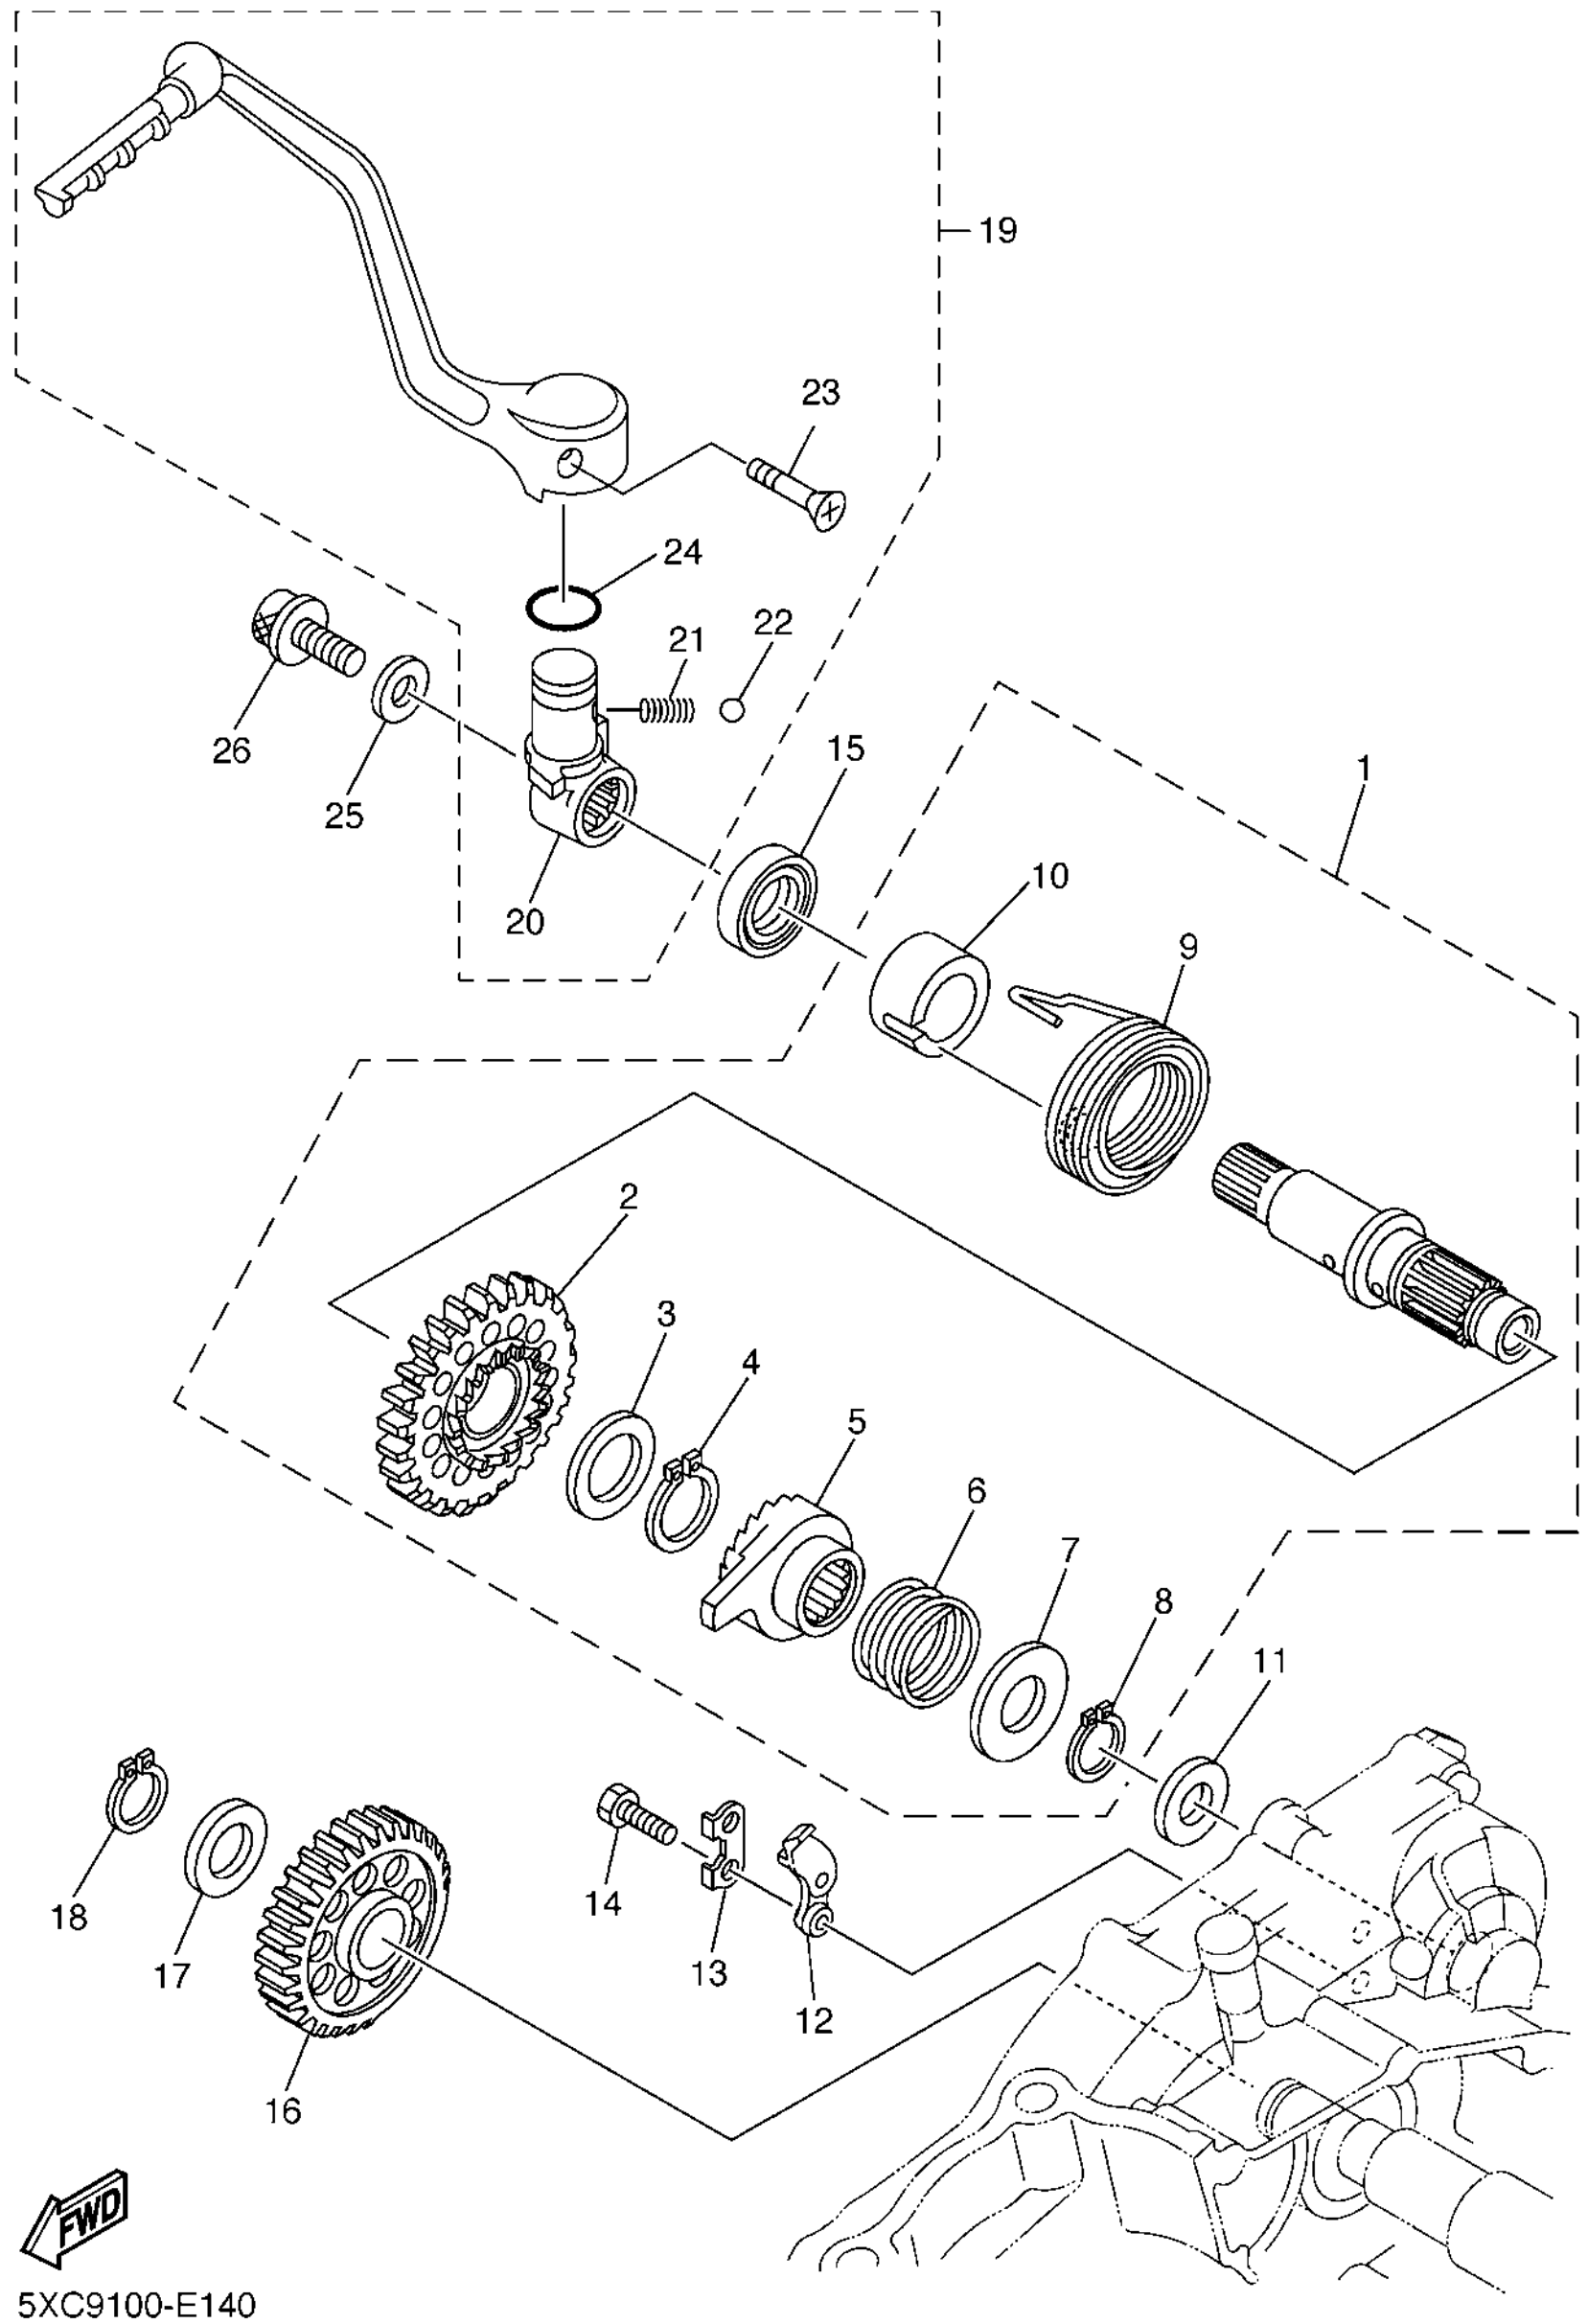

5XC9100-E140

FIG. 15 STARTER

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5NL–15601–20	KICK SHAFT ASSY	1	1	1	1		
2	5NL–15641–20	.GEAR, KICK	1	1	1	1		
3	90201–20685	.WASHER, PLATE (T=0.5)	1	1	1	1		
4	93410–20038	.CIRCLIP	1	1	1	1		
5	2S2–15671–00	.WHEEL, RATCHET	1	1	1	1		
6	90501–160A2	.SPRING, COMPRESSION	1	1	1	1		
7	90201–167P7	.WASHER, PLATE	1	1	1	1		
8	99009–16400	.CIRCLIP	1	1	1	1		
9	90508–30743	.SPRING, TORSION	1	1	1	1		
10	5NL–15664–00	.GUIDE, SPRING	1	1	1	1		
11	90201–162H4	WASHER, PLATE	1	1	1	1		
12	5SG–15668–00	STOPPER	1	1	1	1		
13	214–15686–00	WASHER, LOCK	1	1	1	1		
14	90101–06044	BOLT	2	2	2	2		
15	93102–18278	OIL SEAL	1	1	1	1		
16	5NL–15651–00	GEAR, KICK IDLE	1	1	1	1		
17	90201–177G4	WASHER, PLATE	1	1	1	1		
18	99009–17400	CIRCLIP	1	1	1	1		
19	5XC–15620–10	KICK CRANK ASSY	1	1	1	1		
20	5XC–15621–10	.BOSS, KICK CRANK	1	1	1	1		
21	90501–147A5	.SPRING, COMPRESSION	1	1	1	1		
22	93507–32009	.BALL	1	1	1	1		
23	90152–06010	.SCREW, COUNTERSUNK	1	1	1	1		
24	93210–17570	.O-RING	1	1	1	1		
25	90201–08048	WASHER, PLATE	1	1	1	1		
26	90110–08051	BOLT, HEXAGON SOCKET HEAD	1	1	1	1		

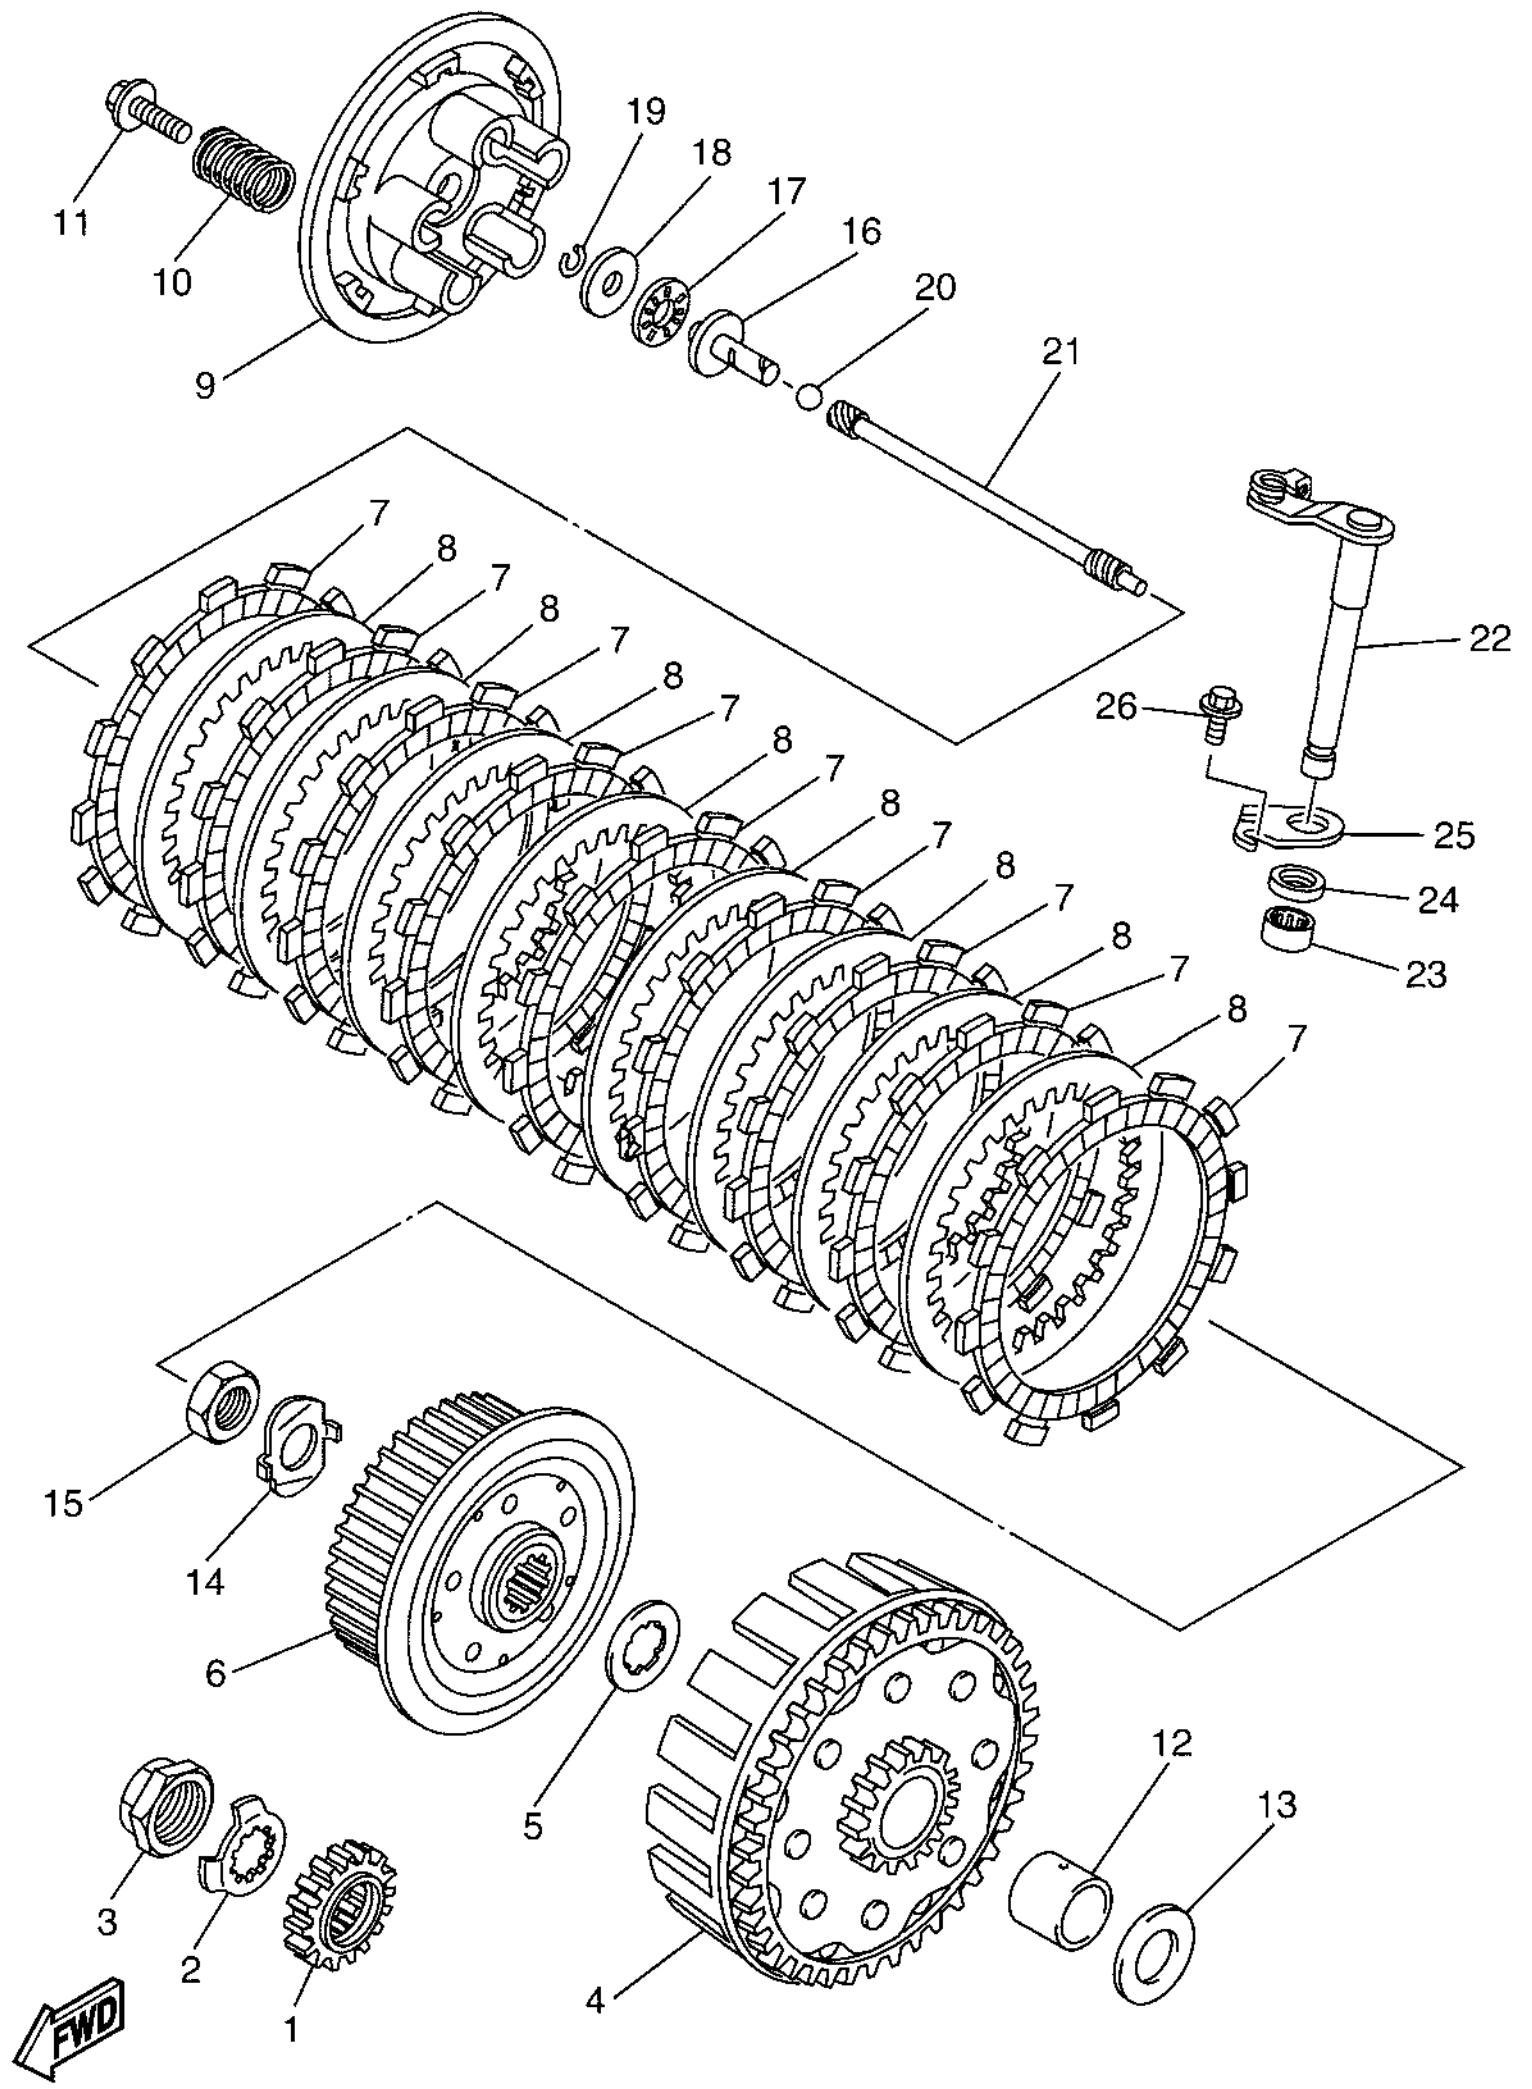

5XCR100-H160

FIG. 16 CLUTCH

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5NL–16111–01	GEAR, PRIMARY DRIVE	1	1	1	1		
2	90215–20003	WASHER, LOCK	1	1	1	1		
3	90179–18001	NUT	1	1	1	1		
4	5XC–16150–10	PRIMARY DRIVEN GEAR COMP.	1	1	1	1		
5	5XC–16154–00	PLATE, THRUST 1	1	1	1	1		
6	5NL–16371–30	BOSS, CLUTCH	1	1	1	1		
7	5XC–16321–00	PLATE, FRICTION	9	9	9	9		
8	5NL–16325–00	PLATE, CLUTCH 2	8	8	8	8		
9	5HD–16351–00	PLATE, PRESSURE 1	1	1	1	1		
10	90501–230A2	SPRING, COMPRESSION	5	5	5	5		
11	90159–06049	SCREW, WITH WASHER	5	5	5	5		
12	5XC–16181–00	SPACER 1	1	1	1	1		
13	90201–22013	WASHER, PLATE	1	1	1	1		
14	90215–16289	WASHER, LOCK	1	1	1	1		
15	90170–16326	NUT	1	1	1	1		
16	5XC–16356–00	ROD, PUSH 1	1	1	1	1		
17	93340–21008	BEARING	1	1	1	1		
18	90201–080H1	WASHER, PLATE	1	1	1	1		
19	93440–07182	CIRCLIP	1	1	1	1		
20	93511–32027	BALL	1	1	1	1		
21	5NL–16357–10	ROD, PUSH 2	1	1	1	1		
22	5XC–16381–00	PUSH LEVER COMP.	1	1	1	1		
23	93317–11287	BEARING	1	1	1	1		
24	93102–12224	OIL SEAL	1	1	1	1		
25	4JT–16384–00	PLATE, SEAT	1	1	1	1		
26	95022–06010	BOLT, FLANGE	1	1	1	1		

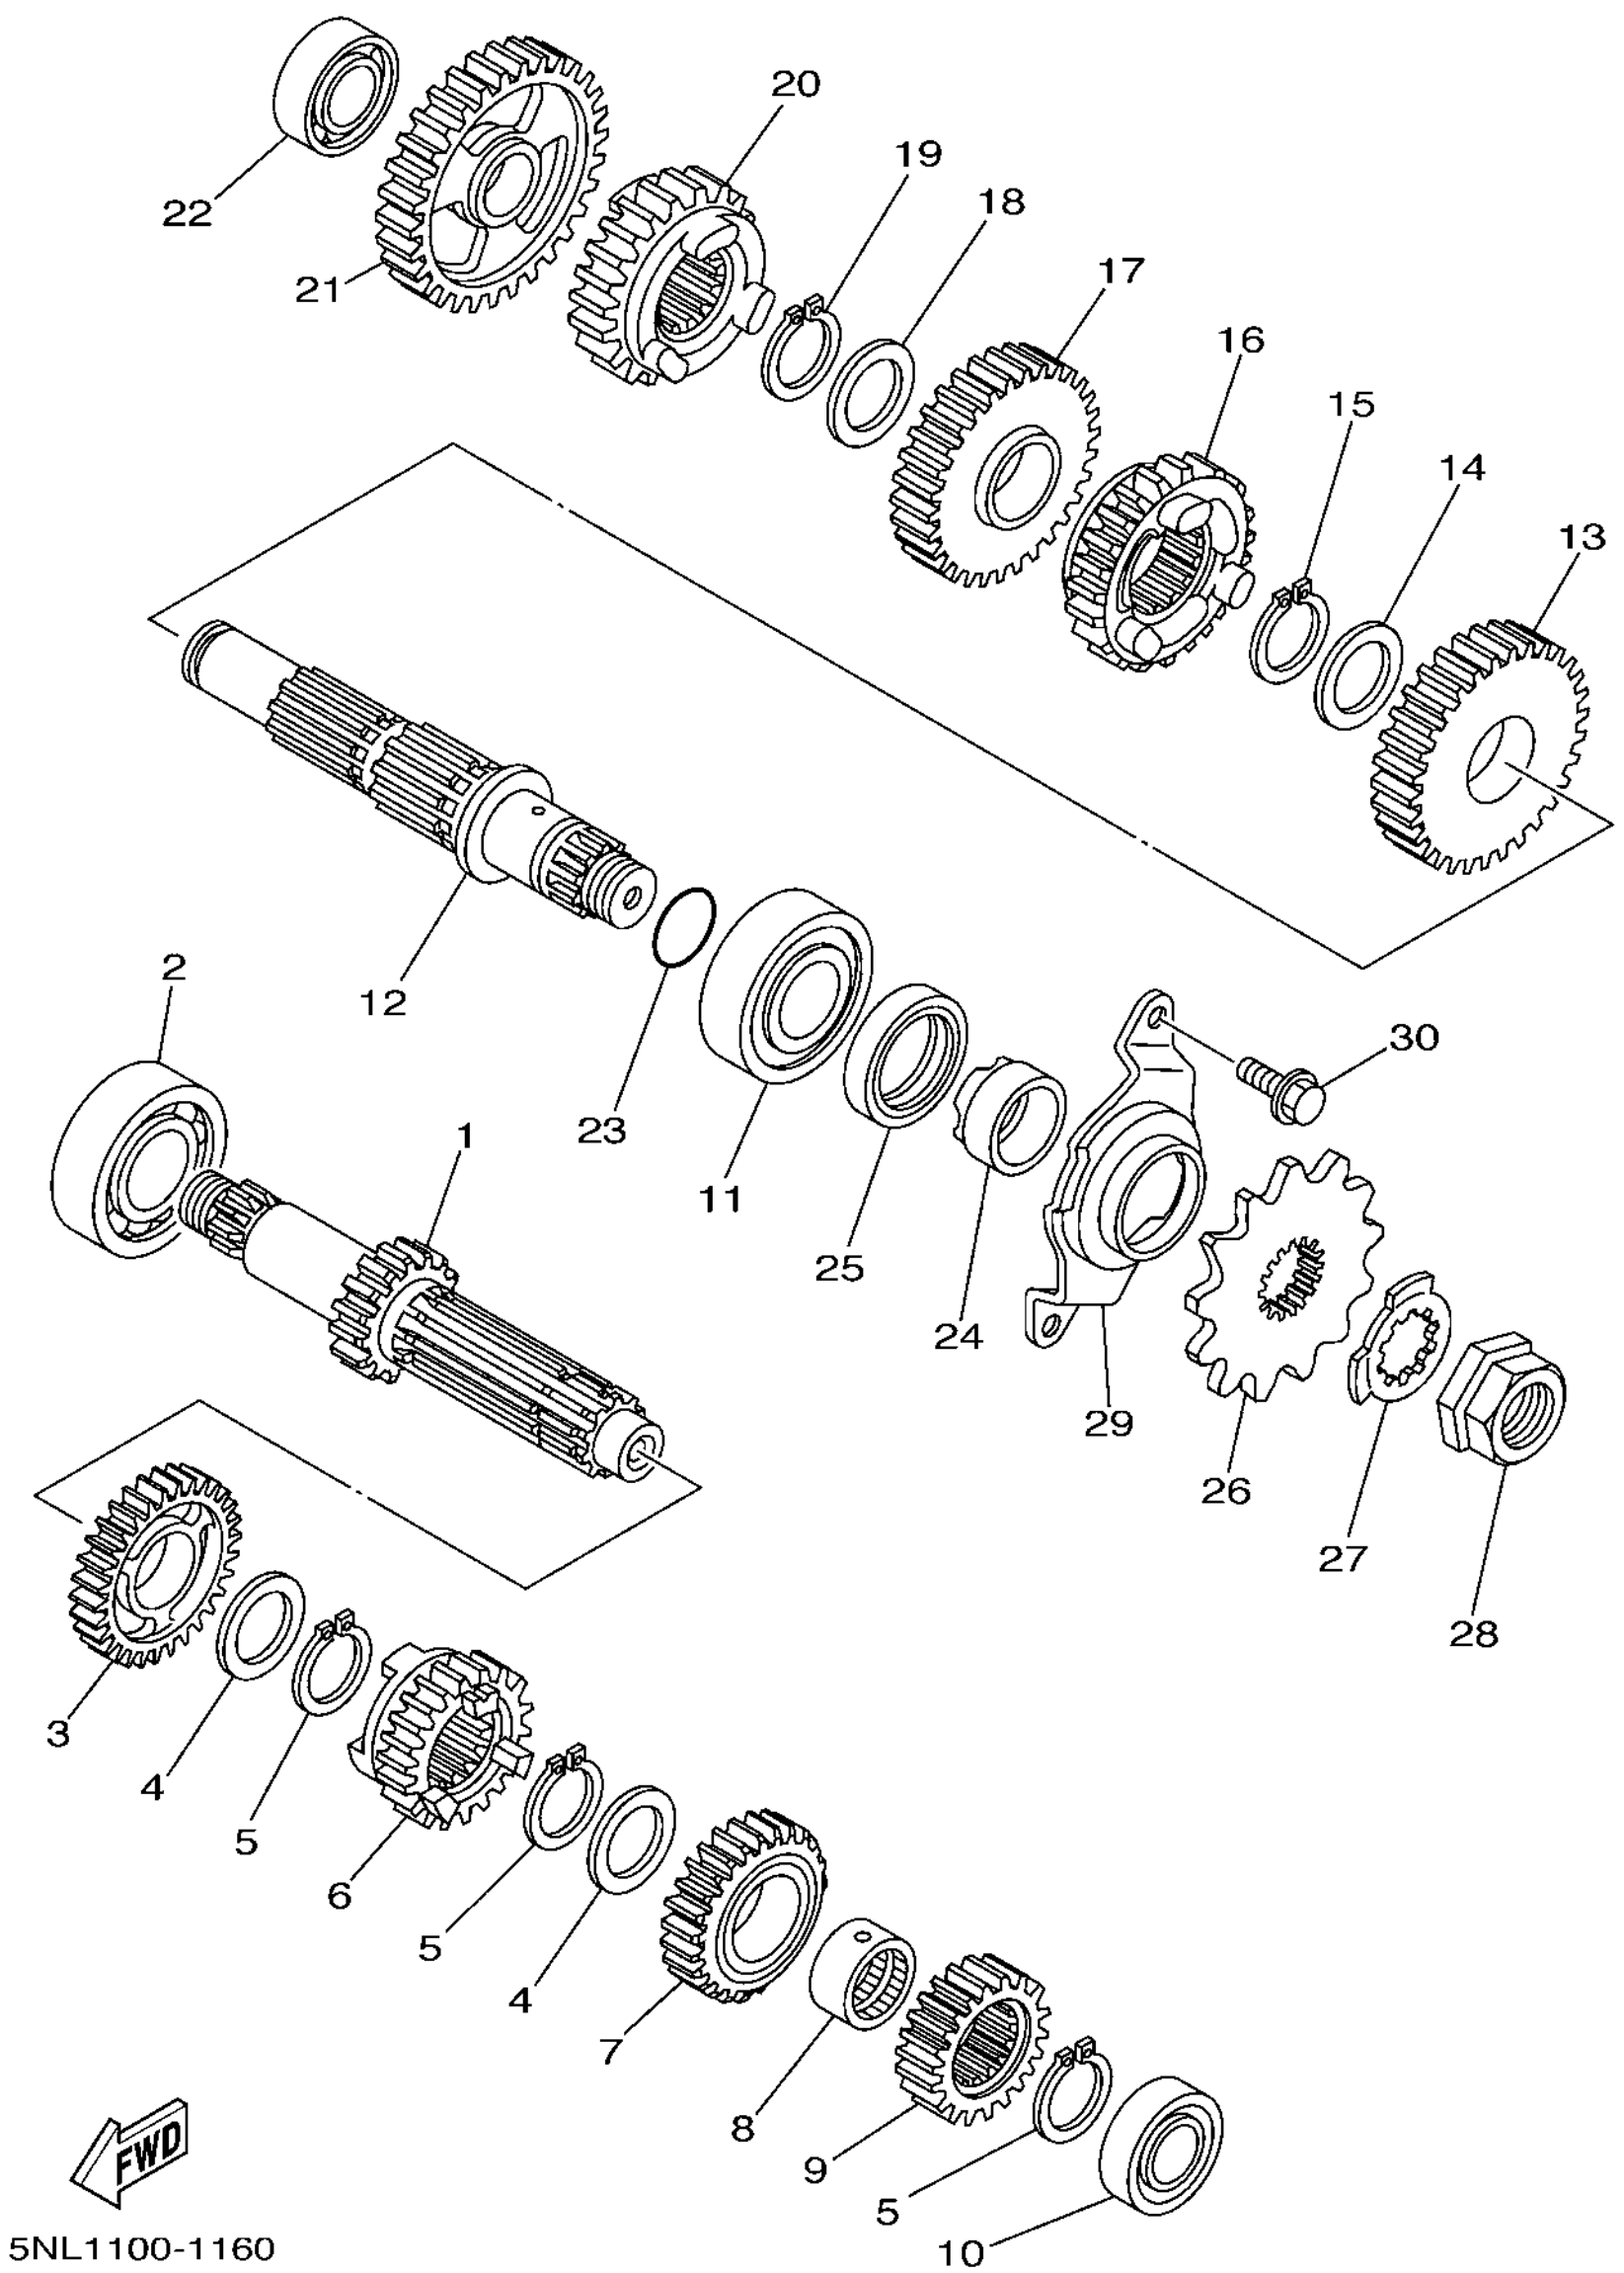


FIG. 17 TRANSMISSION

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5XC–17411–00	AXLE,MAIN (14T)	1	1	1	1		
2	93306–20447	BEARING	1	1	1	1		
3	5NL–17151–00	GEAR, 5TH PINION (24T)	1	1	1	1		
4	90209–20008	WASHER	2	2	2	2		
5	93410–22039	CIRCLIP	3	3	3	3		
6	5NL–17131–10	GEAR, 3RD PINION (20T)	1	1	1	1		
7	5NL–17141–11	GEAR, 4TH PINION (22T)	1	1	1	1		
8	90387–20006	COLLAR	1	1	1	1		
9	5NL–17121–00	GEAR, 2ND PINION (16T)	1	1	1	1		
10	93306–00320	BEARING	1	1	1	1		
11	93306–27208	BEARING	1	1	1	1		
12	5NL–17402–00	DRIVE AXLE ASSY	1	1	1	1		
13	5NL–17221–00	GEAR, 2ND WHEEL (28T)	1	1	1	1		
14	90209–23012	WASHER	1	1	1	1		
15	93410–26067	CIRCLIP	1	1	1	1		
16	5NL–17241–11	GEAR, 4TH WHEEL (27T)	1	1	1	1		
17	5NL–17231–11	GEAR, 3RD WHEEL (29T)	1	1	1	1		
18	90209–20008	WASHER	1	1	1	1		
19	93410–22039	CIRCLIP	1	1	1	1		
20	5NL–17251–10	GEAR, 5TH WHEEL (25T)	1	1	1	1		
21	5NL–17211–10	GEAR, 1ST WHEEL (30T)	1	1	1	1		
22	93306–00317	BEARING	1	1	1	1		
23	93210–196A4	O-RING	1	1	1	1		
24	90387–22001	COLLAR	1	1	1	1		
25	93102–28010	OIL SEAL	1	1	1	1		
26	9383B–13218	SPROCKET, DRIVE (13T)	1	1	1	1		
27	90215–20003	WASHER, LOCK	1	1	1	1		


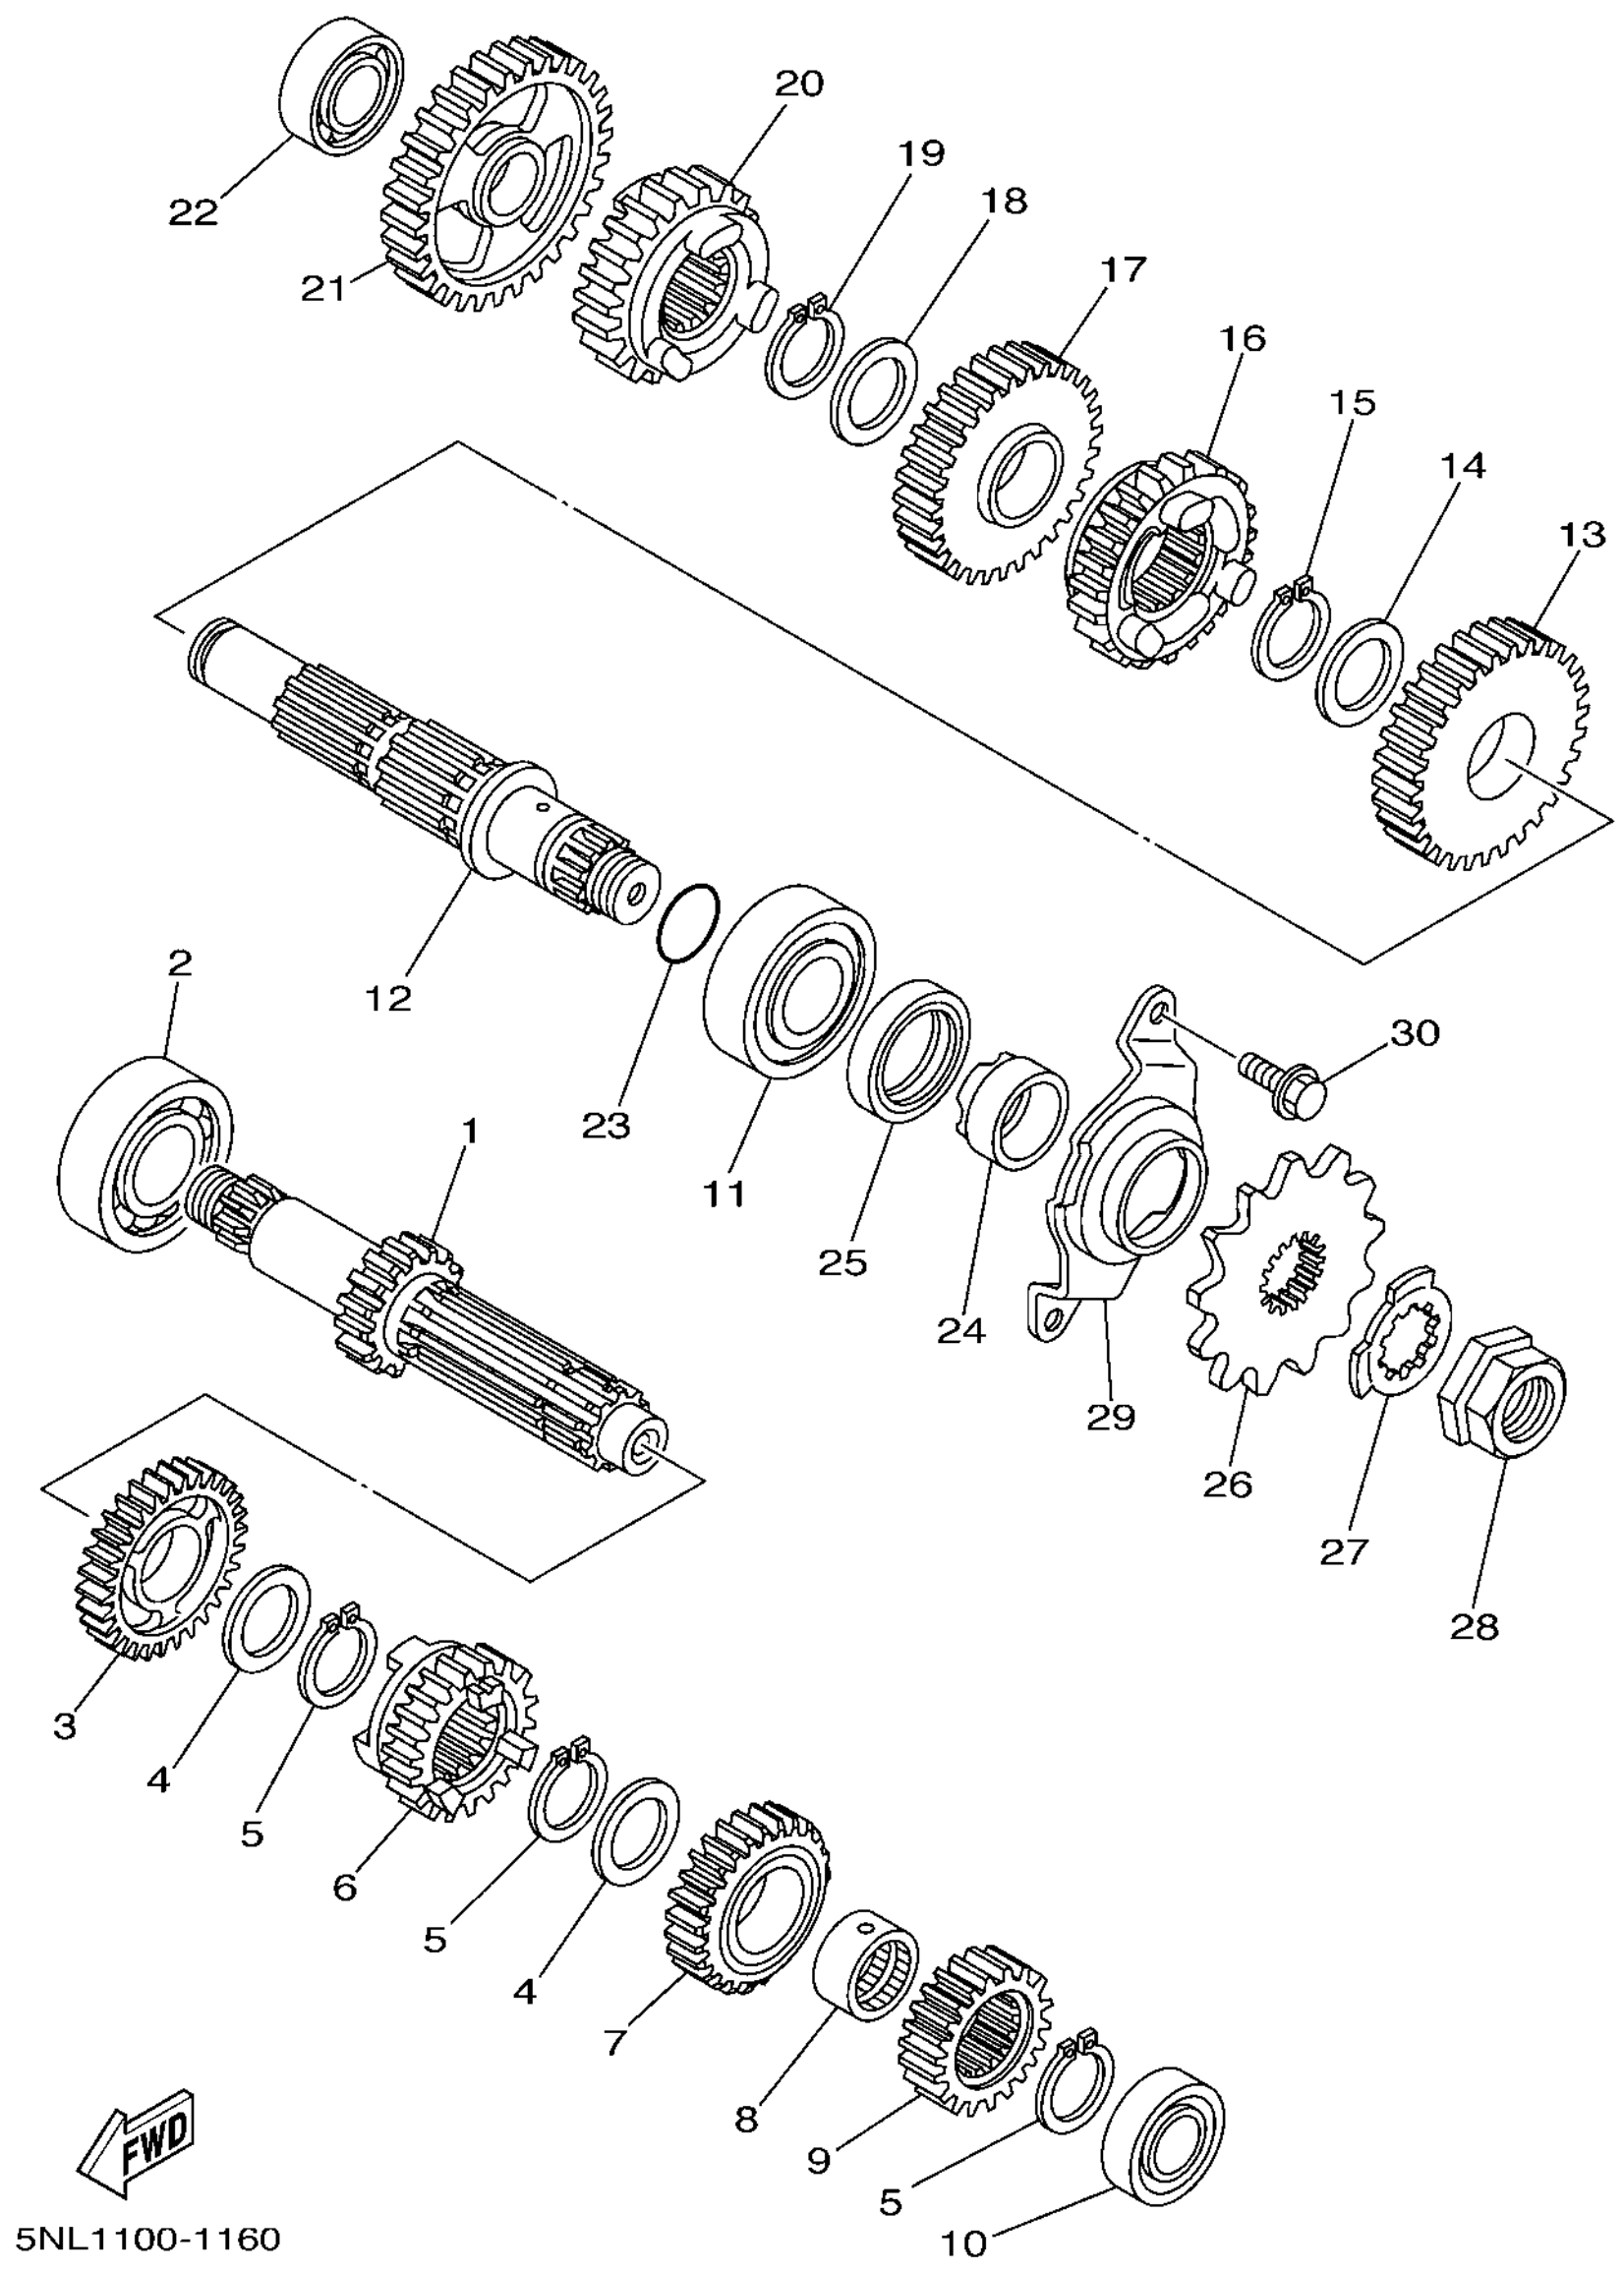


FIG. 17 TRANSMISSION


REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
28	90179–18001	NUT	1	1	1	1		
29	5NL–17471–10	PLATE, COVER	1	1	1	1		
30	90105–06081	BOLT, FLANGE	2	2	2	2		

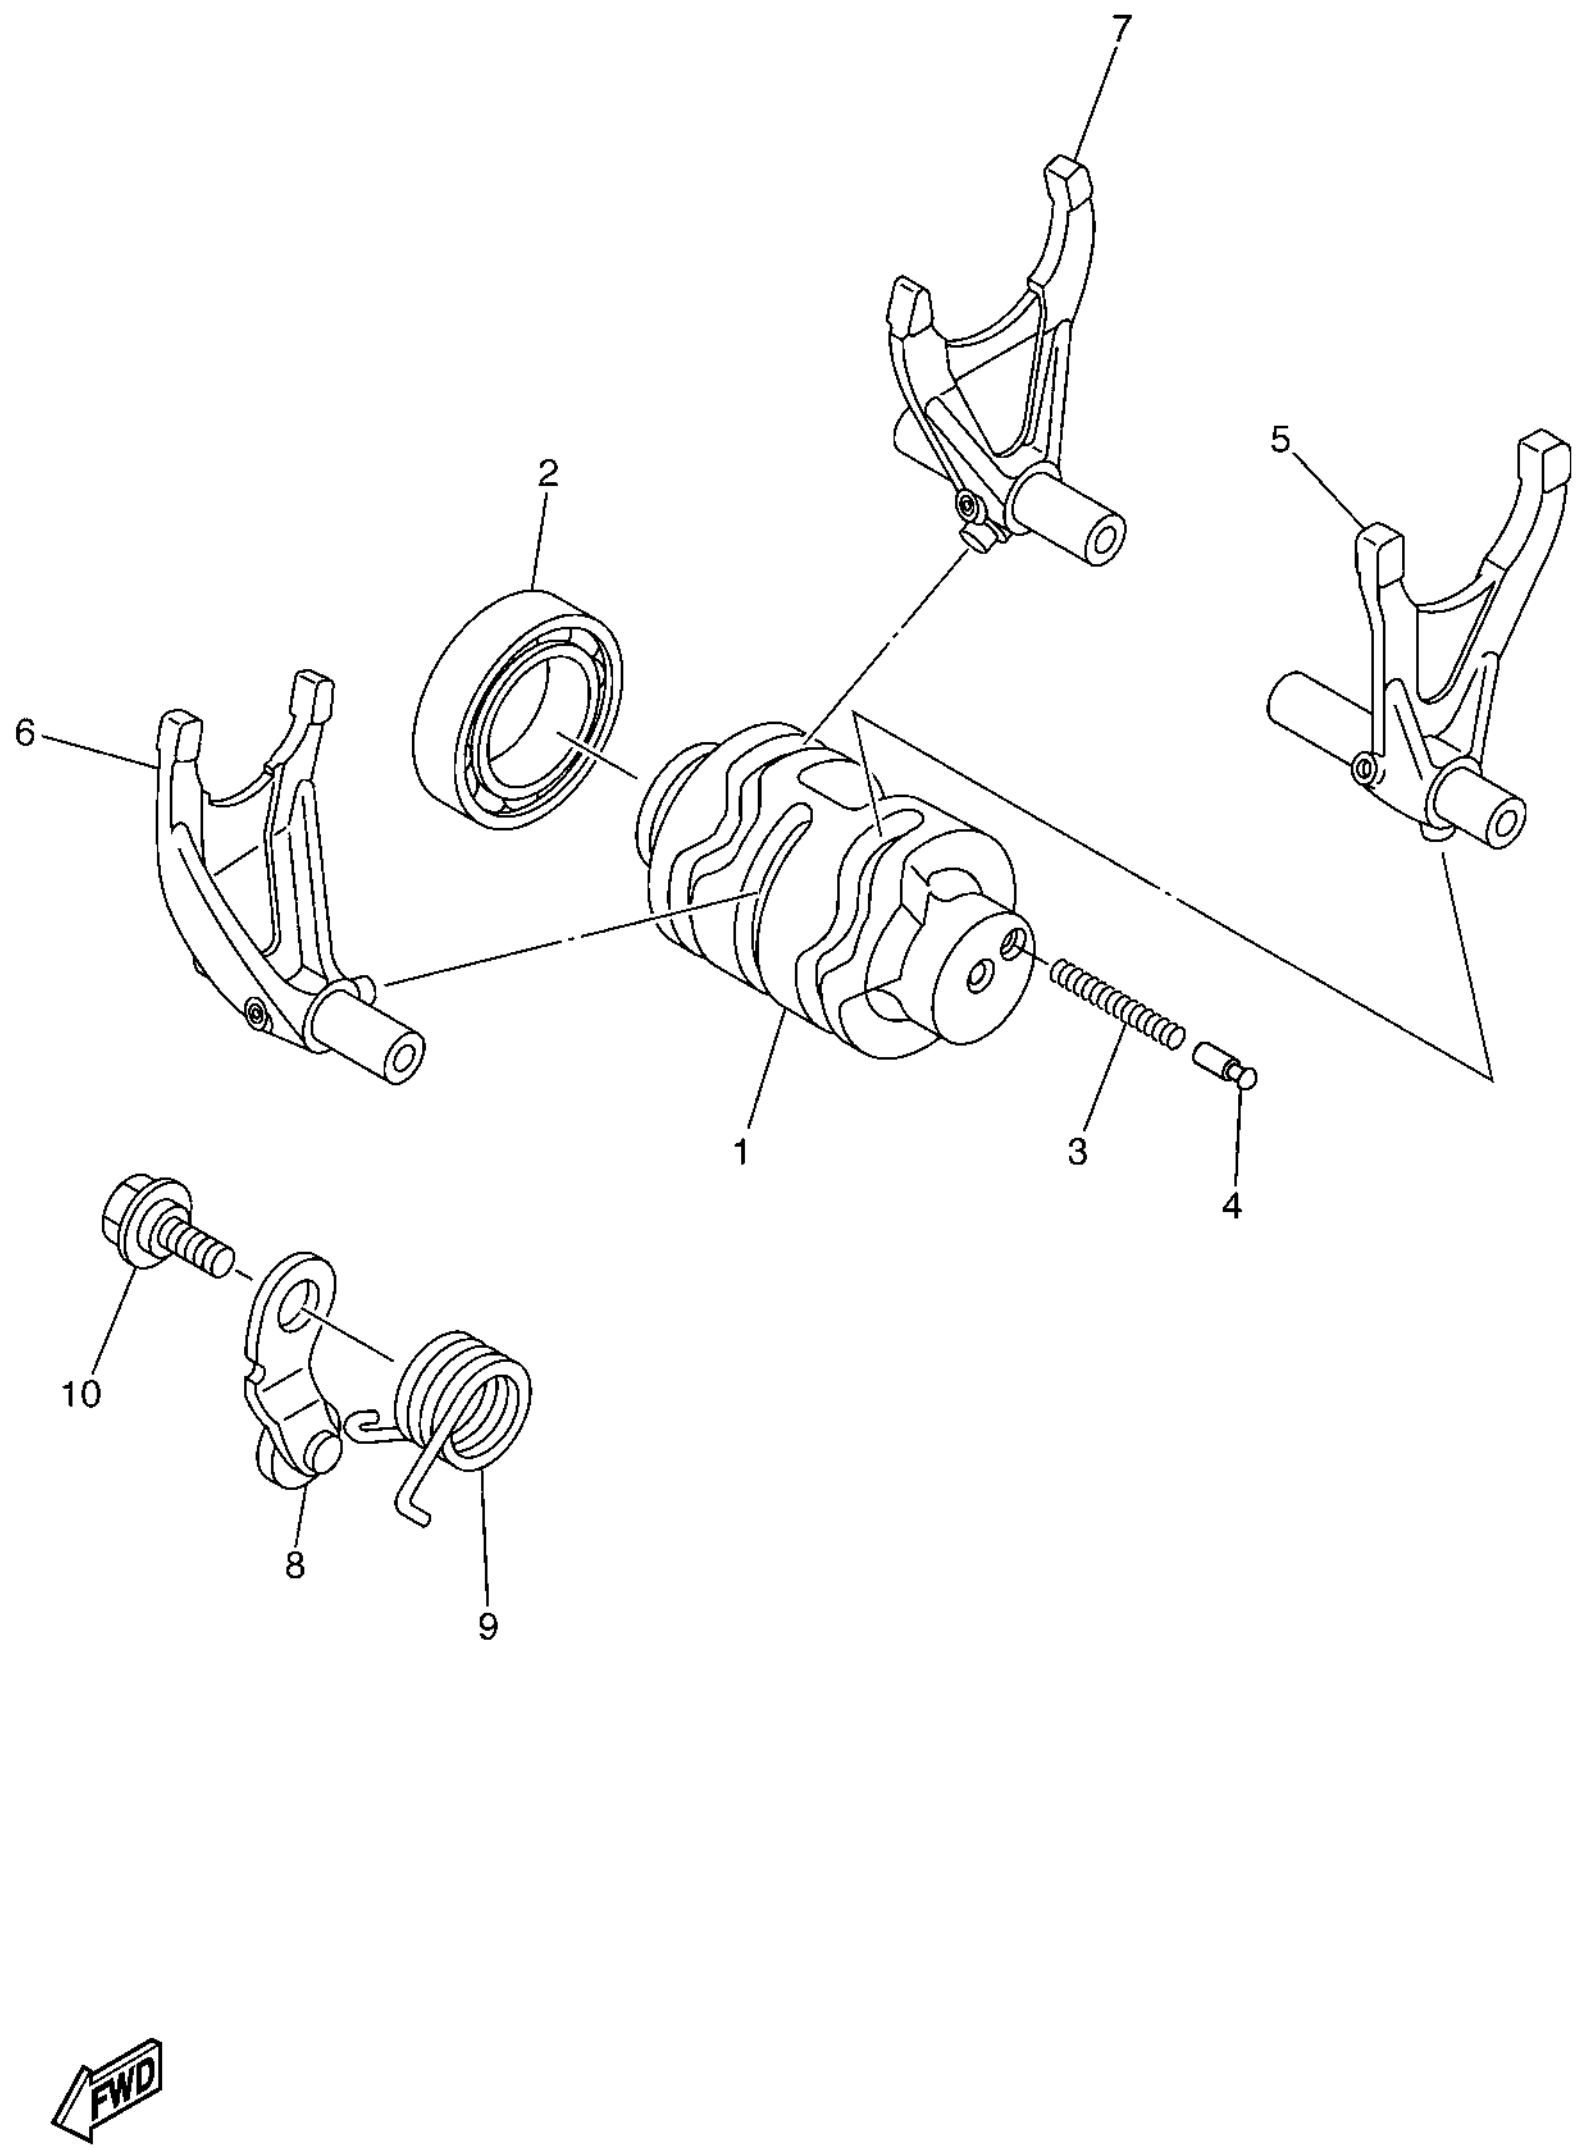

5XC9100-E170

FIG. 18 SHIFT CAM & FORK


REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5NL–18541–00	CAM, SHIFT	1	1	1	1		
2	93306–90509	BEARING	1	1	1	1		
3	90501–06022	SPRING, COMPRESSION	1	1	1	1		
4	4UN–18542–00	POINT, NEUTRAL	1	1	1	1		
5	5NL–18501–00	FORK, SHIFT 1	1	1	1	1		
6	5NL–18502–00	FORK, SHIFT 2	1	1	1	1		
7	5NL–18503–00	FORK, SHIFT 3	1	1	1	1		
8	3XK–18140–00	STOPPER LEVER ASSY	1	1	1	1		
9	90508–26561	SPRING, TORSION	1	1	1	1		
10	90109–06193	BOLT	1	1	1	1		

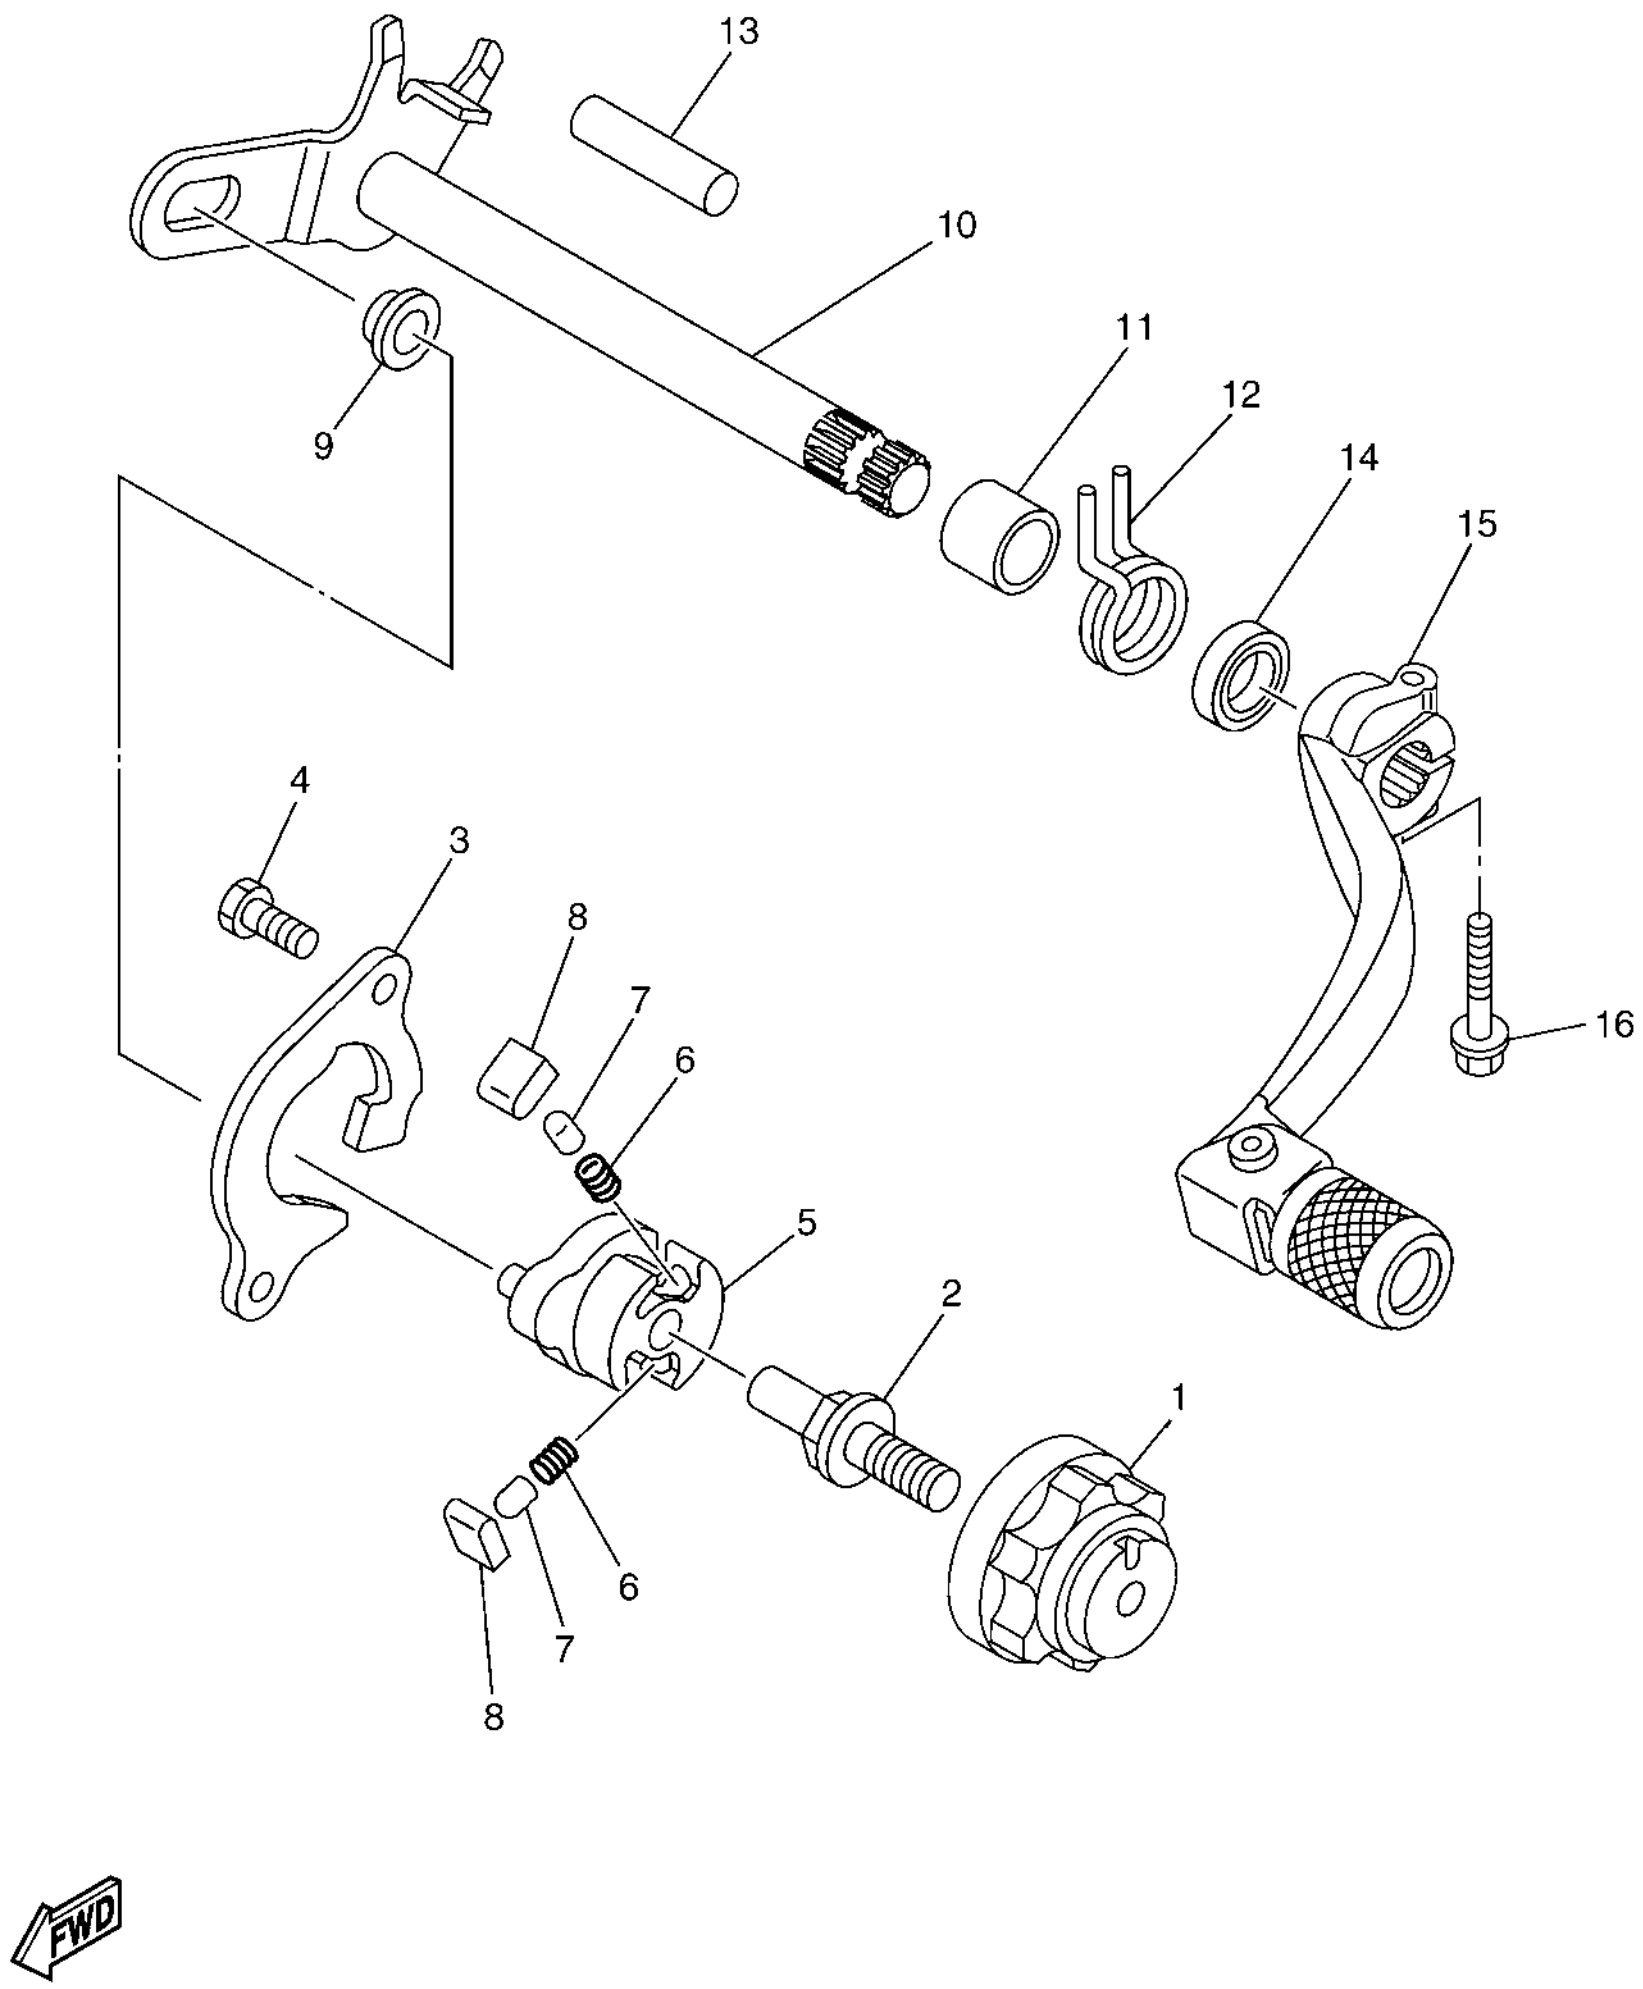

5XCG100-F180

FIG. 19 SHIFT SHAFT

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	2S2–18185–00	SEGMENT	1	1	1	1		
2	3XJ–18173–10	PIN, SHIFT	1	1	1	1		
3	5BE–18172–00	GUIDE, SHIFT	1	1	1	1		
4	90101–06041	BOLT	2	2	2	2		
5	5LP–18122–01	LEVER, SHIFT 2	1	1	1	1		
6	90501–052G5	SPRING, COMPRESSION	2	2	2	2		
7	3XJ–18184–00	PIN, PAWL	2	2	2	2		
8	3XJ–18182–00	PAWL, SHIFTER	2	2	2	2		
9	3XJ–18178–00	ROLLER, SHIFT LEVER	1	1	1	1		
10	5UL–18101–10	SHIFT SHAFT ASSY	1	1	1	1		
11	90387–124F4	COLLAR	1	1	1	1		
12	90508–291A8	SPRING, TORSION	1	1	1	1		
13	93608–33002	PIN, DOWEL	1	1	1	1		
14	93102–12224	OIL SEAL	1	1	1	1		
15	5XC–18110–10	SHIFT PEDAL ASSY	1	1	1	1		
16	95022–06020	BOLT, FLANGE	1	1	1	1		

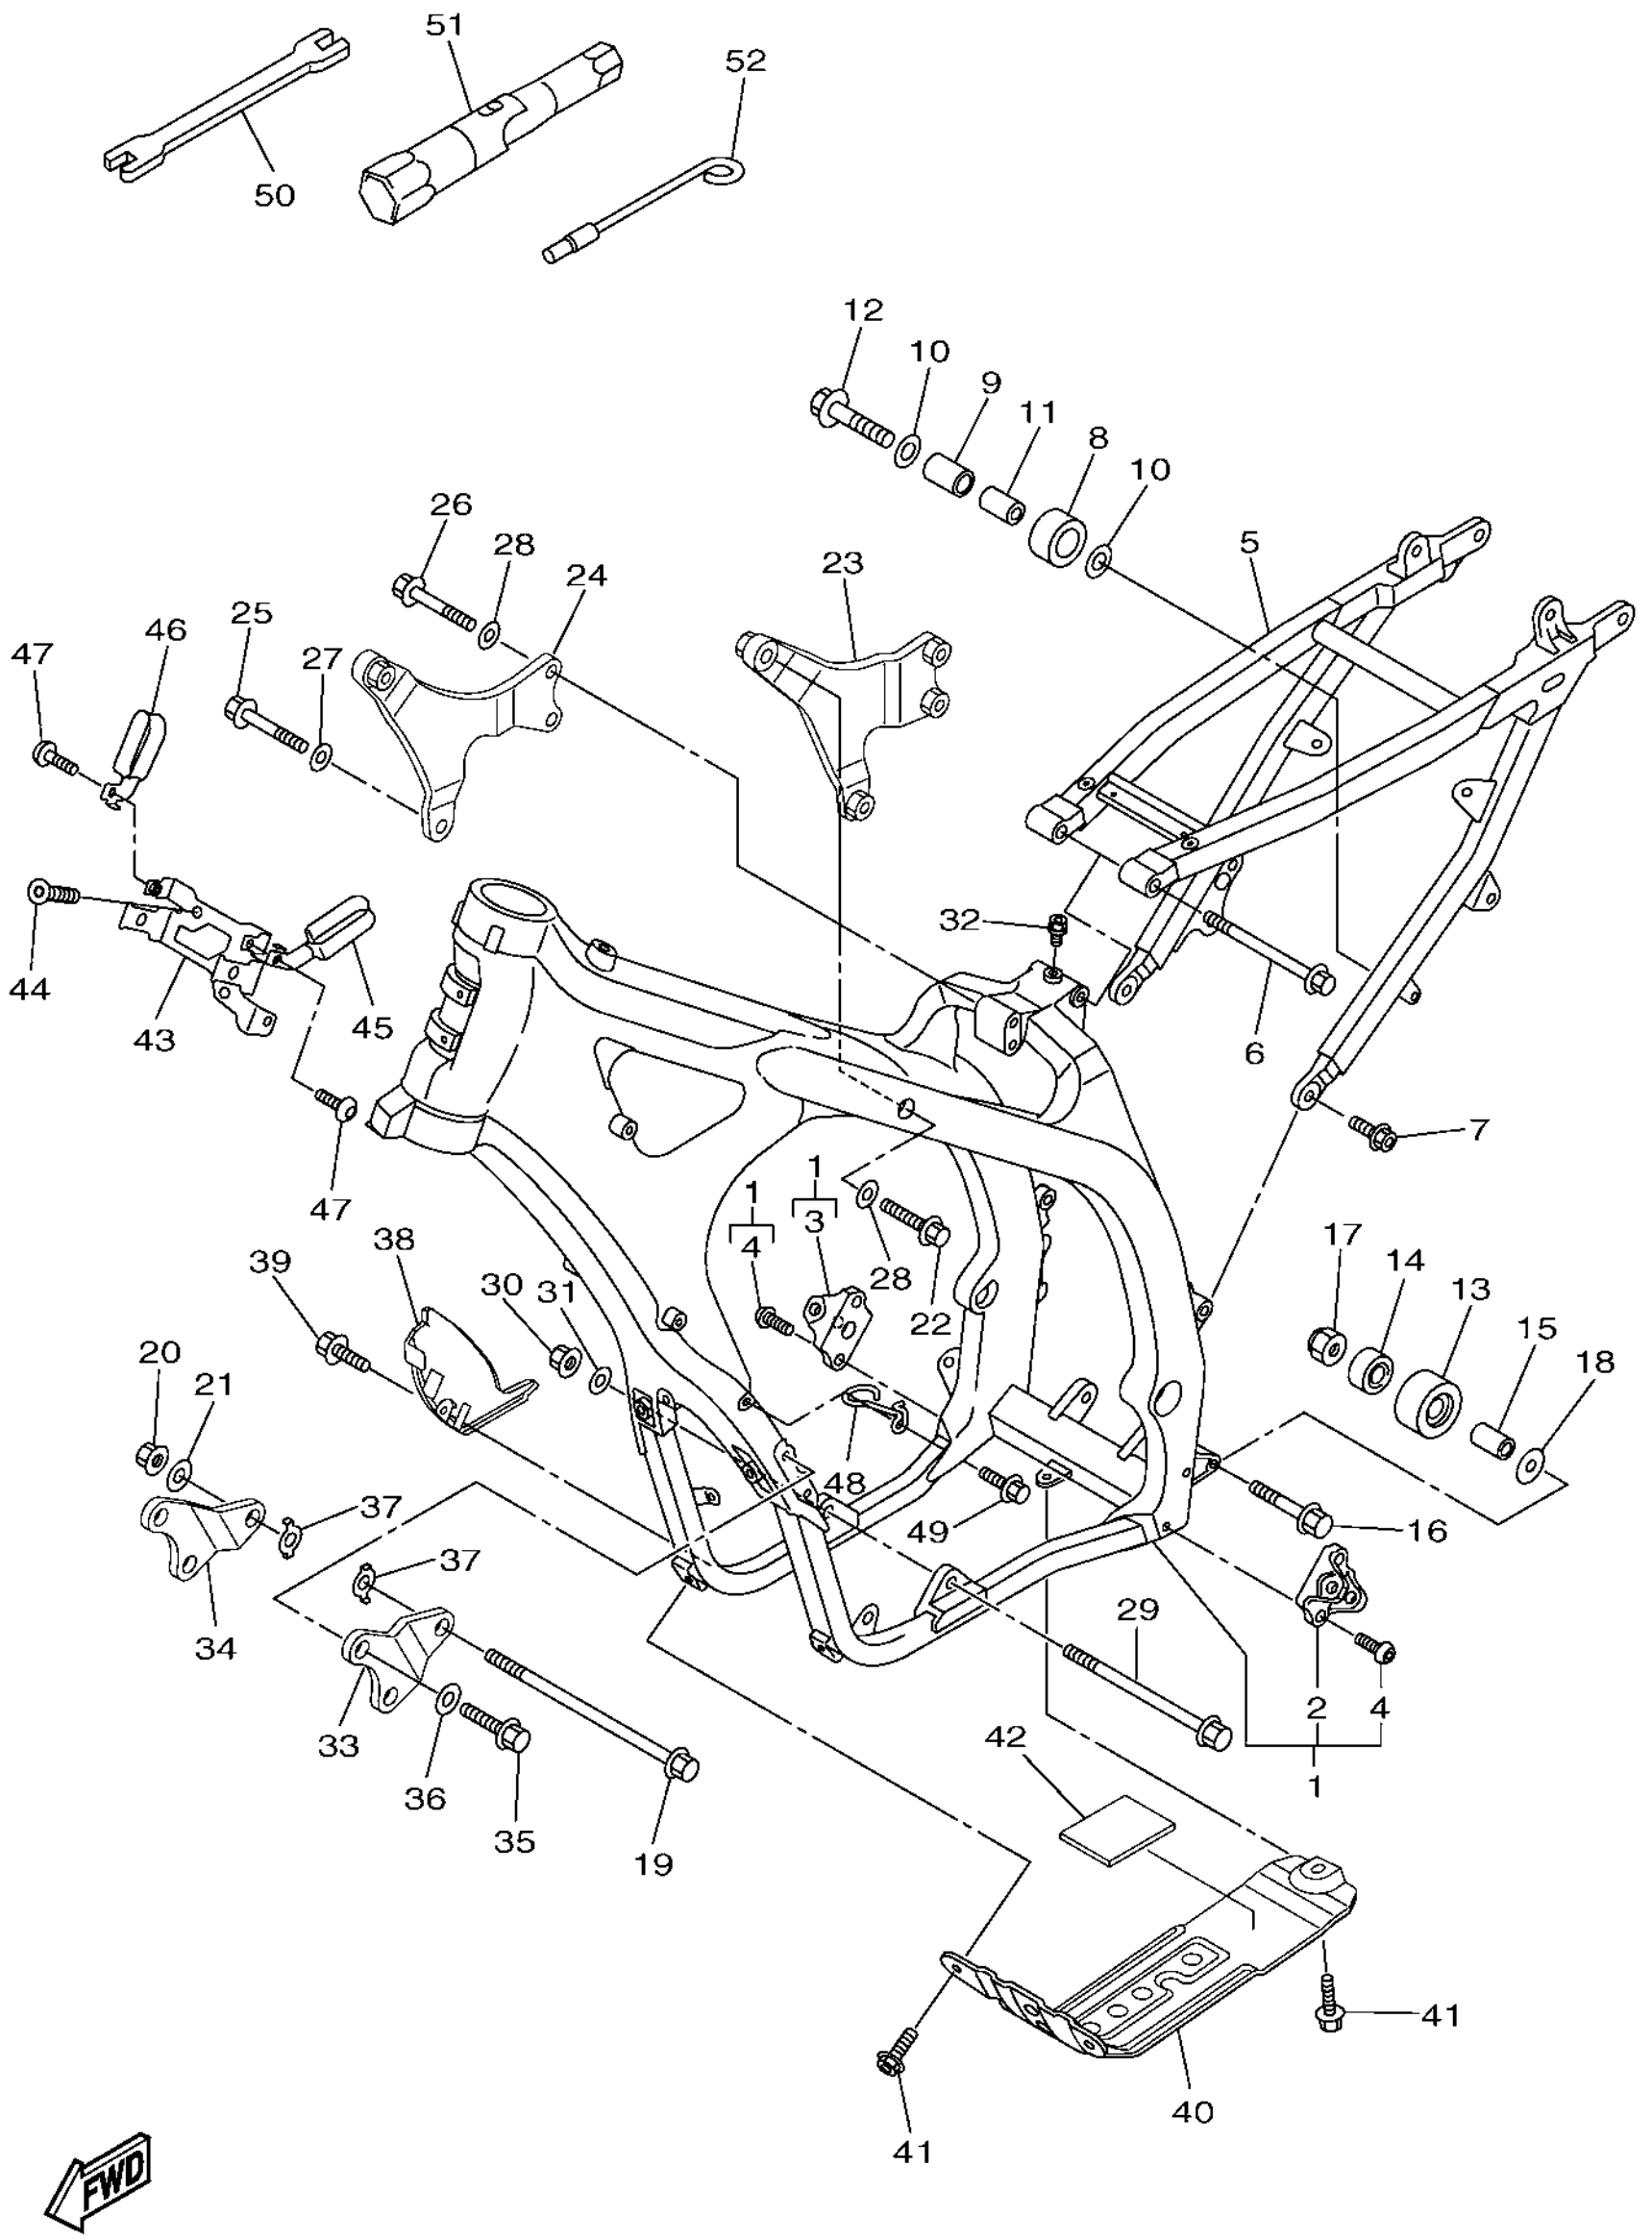


5XCG100-F190

FIG. 20 FRAME

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5XC–21101–R1	FRONT FRAME COMP.	1	1	1	1		
2	1C3–21447–10	.BRACKET, FOOTREST	1	1	1	1		
3	1C3–21448–10	.BRACKET, FOOTREST	1	1	1	1		
4	90149–10031	.SCREW	4	4	4	4		
5	5XC–21190–L0	REAR FRAME COMP.	1	1	1	1		
6	90105–08156	BOLT, FLANGE	1	1	1	1		
7	90105–08307	BOLT, FLANGE	2	2	2	2		
8	30X–22178–00	TENSIONER	1	1	1	1		
9	4V4–22184–00	BUSH	1	1	1	1		
10	90201–08045	WASHER, PLATE	2	2	2	2		
11	90387–08041	COLLAR	1	1	1	1		
12	95022–08040	BOLT, FLANGE	1	1	1	1		
13	3JD–22178–20	TENSIONER	1	1	1	1		
14	93300–60839	BEARING	1	1	1	1		
15	90387–086N4	COLLAR	1	1	1	1		
16	90105–08146	BOLT, FLANGE	1	1	1	1		
17	90185–08009	NUT, SELF-LOCKING	1	1	1	1		
18	90201–08043	WASHER, PLATE	1	1	1	1		
19	90105–10174	BOLT, FLANGE	1	1	1	1		
20	90179–10658	NUT	1	1	1	1		
21	90201–10045	WASHER, PLATE	1	1	1	1		
22	90105–08150	BOLT, FLANGE	2	2	2	2		
23	5XC–21425–G0	BRACKET, REAR UPPER 1	1	1	1	1		
24	5XC–21426–G0	BRACKET, REAR UPPER 2	1	1	1	1		
25	90105–10191	BOLT, FLANGE	1	1	1	1		
26	90105–08147	BOLT, FLANGE	2	2	2	2		
27	90201–10045	WASHER, PLATE	1	1	1	1		

FIG. 20 FRAME

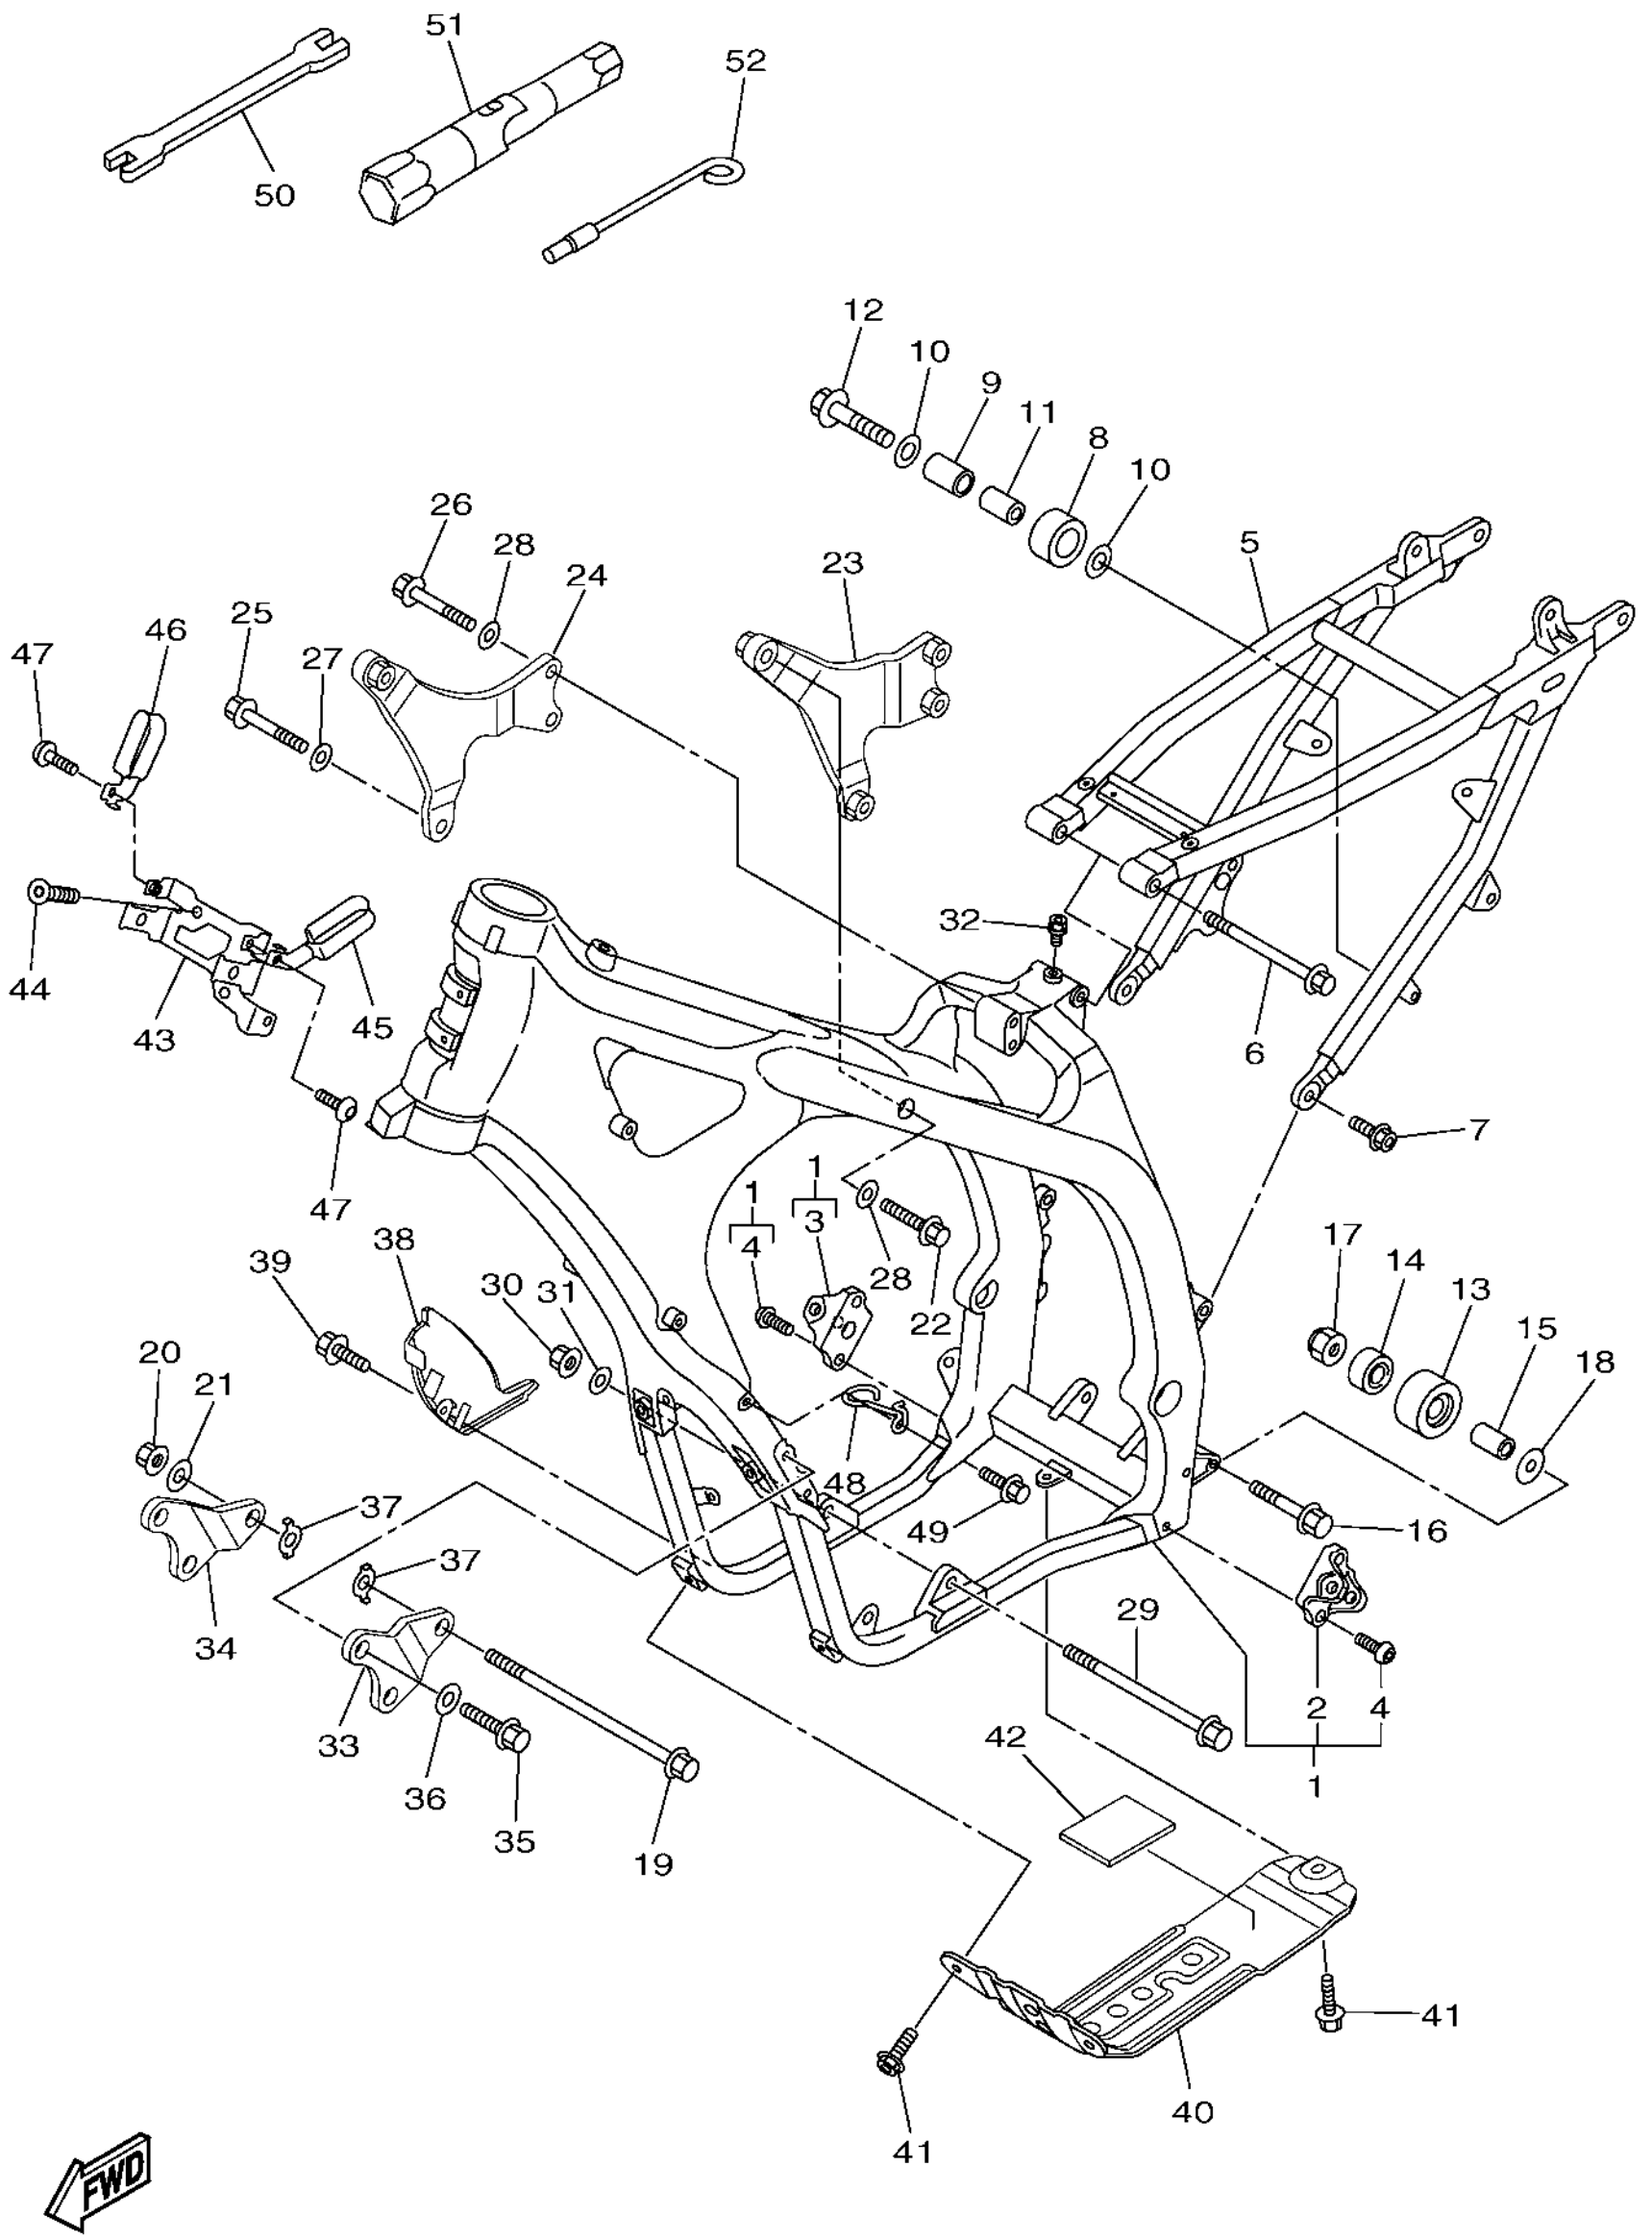

5XCG100-F190

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
28	92902–08200	WASHER	4	4	4	4		
29	90105–10176	BOLT, FLANGE	1	1	1	1		
30	90179–10658	NUT	1	1	1	1		
31	90201–10045	WASHER, PLATE	1	1	1	1		
32	1C3–21244–10	NUT	1	1	1	1		
33	5XC–21417–G0	BRACKET, FRONT LOWER 1	1	1	1	1		
34	5XC–21418–G0	BRACKET, FRONT LOWER 2	1	1	1	1		
35	90105–08143	BOLT, FLANGE	4	4	4	4		
36	92902–08200	WASHER	4	4	4	4		
37	5XC–21456–90	PLATE, PATCH	2	2	2	2		
38	5XC–21471–90	PROTECTOR, ENGINE	1	1	1	1		
39	90119–06146	BOLT, WITH WASHER	1	1	1	1		
40	5XC–2147E–G0	GUARD, ENGINE 2	1	1	1	1		
41	90119–06146	BOLT, WITH WASHER	3	3	3	3		
42	5XC–21486–90	DAMPER 2	1	1	1	1		
43	5XC–21274–90	BRACKET, C.D.I. UNIT	1	1	1	1		
44	90151–06032	SCREW, COUNTERSUNK	2	2	2	2		
45	5XC–21163–90	HOLDER, CLUTCH CABLE	1	1	1	1		
46	5XC–21164–90	HOLDER, CABLE	1	1	1	1		
47	92012–05008	BOLT, BUTTON HEAD	2	2	2	2		
48	5XC–21288–90	GUIDE, CABLE	1	1	1	1		
49	90105–05014	BOLT, FLANGE	1	1	1	1		
50	5ET–28166–10	WRENCH, HEXAGON	1	1	1	1		
51	5TA–2814F–00	BOX, SPARK PLUG	1	1	1	1		
52	5XC–28116–00	TOOL, SPECIAL	1	1	1	1		

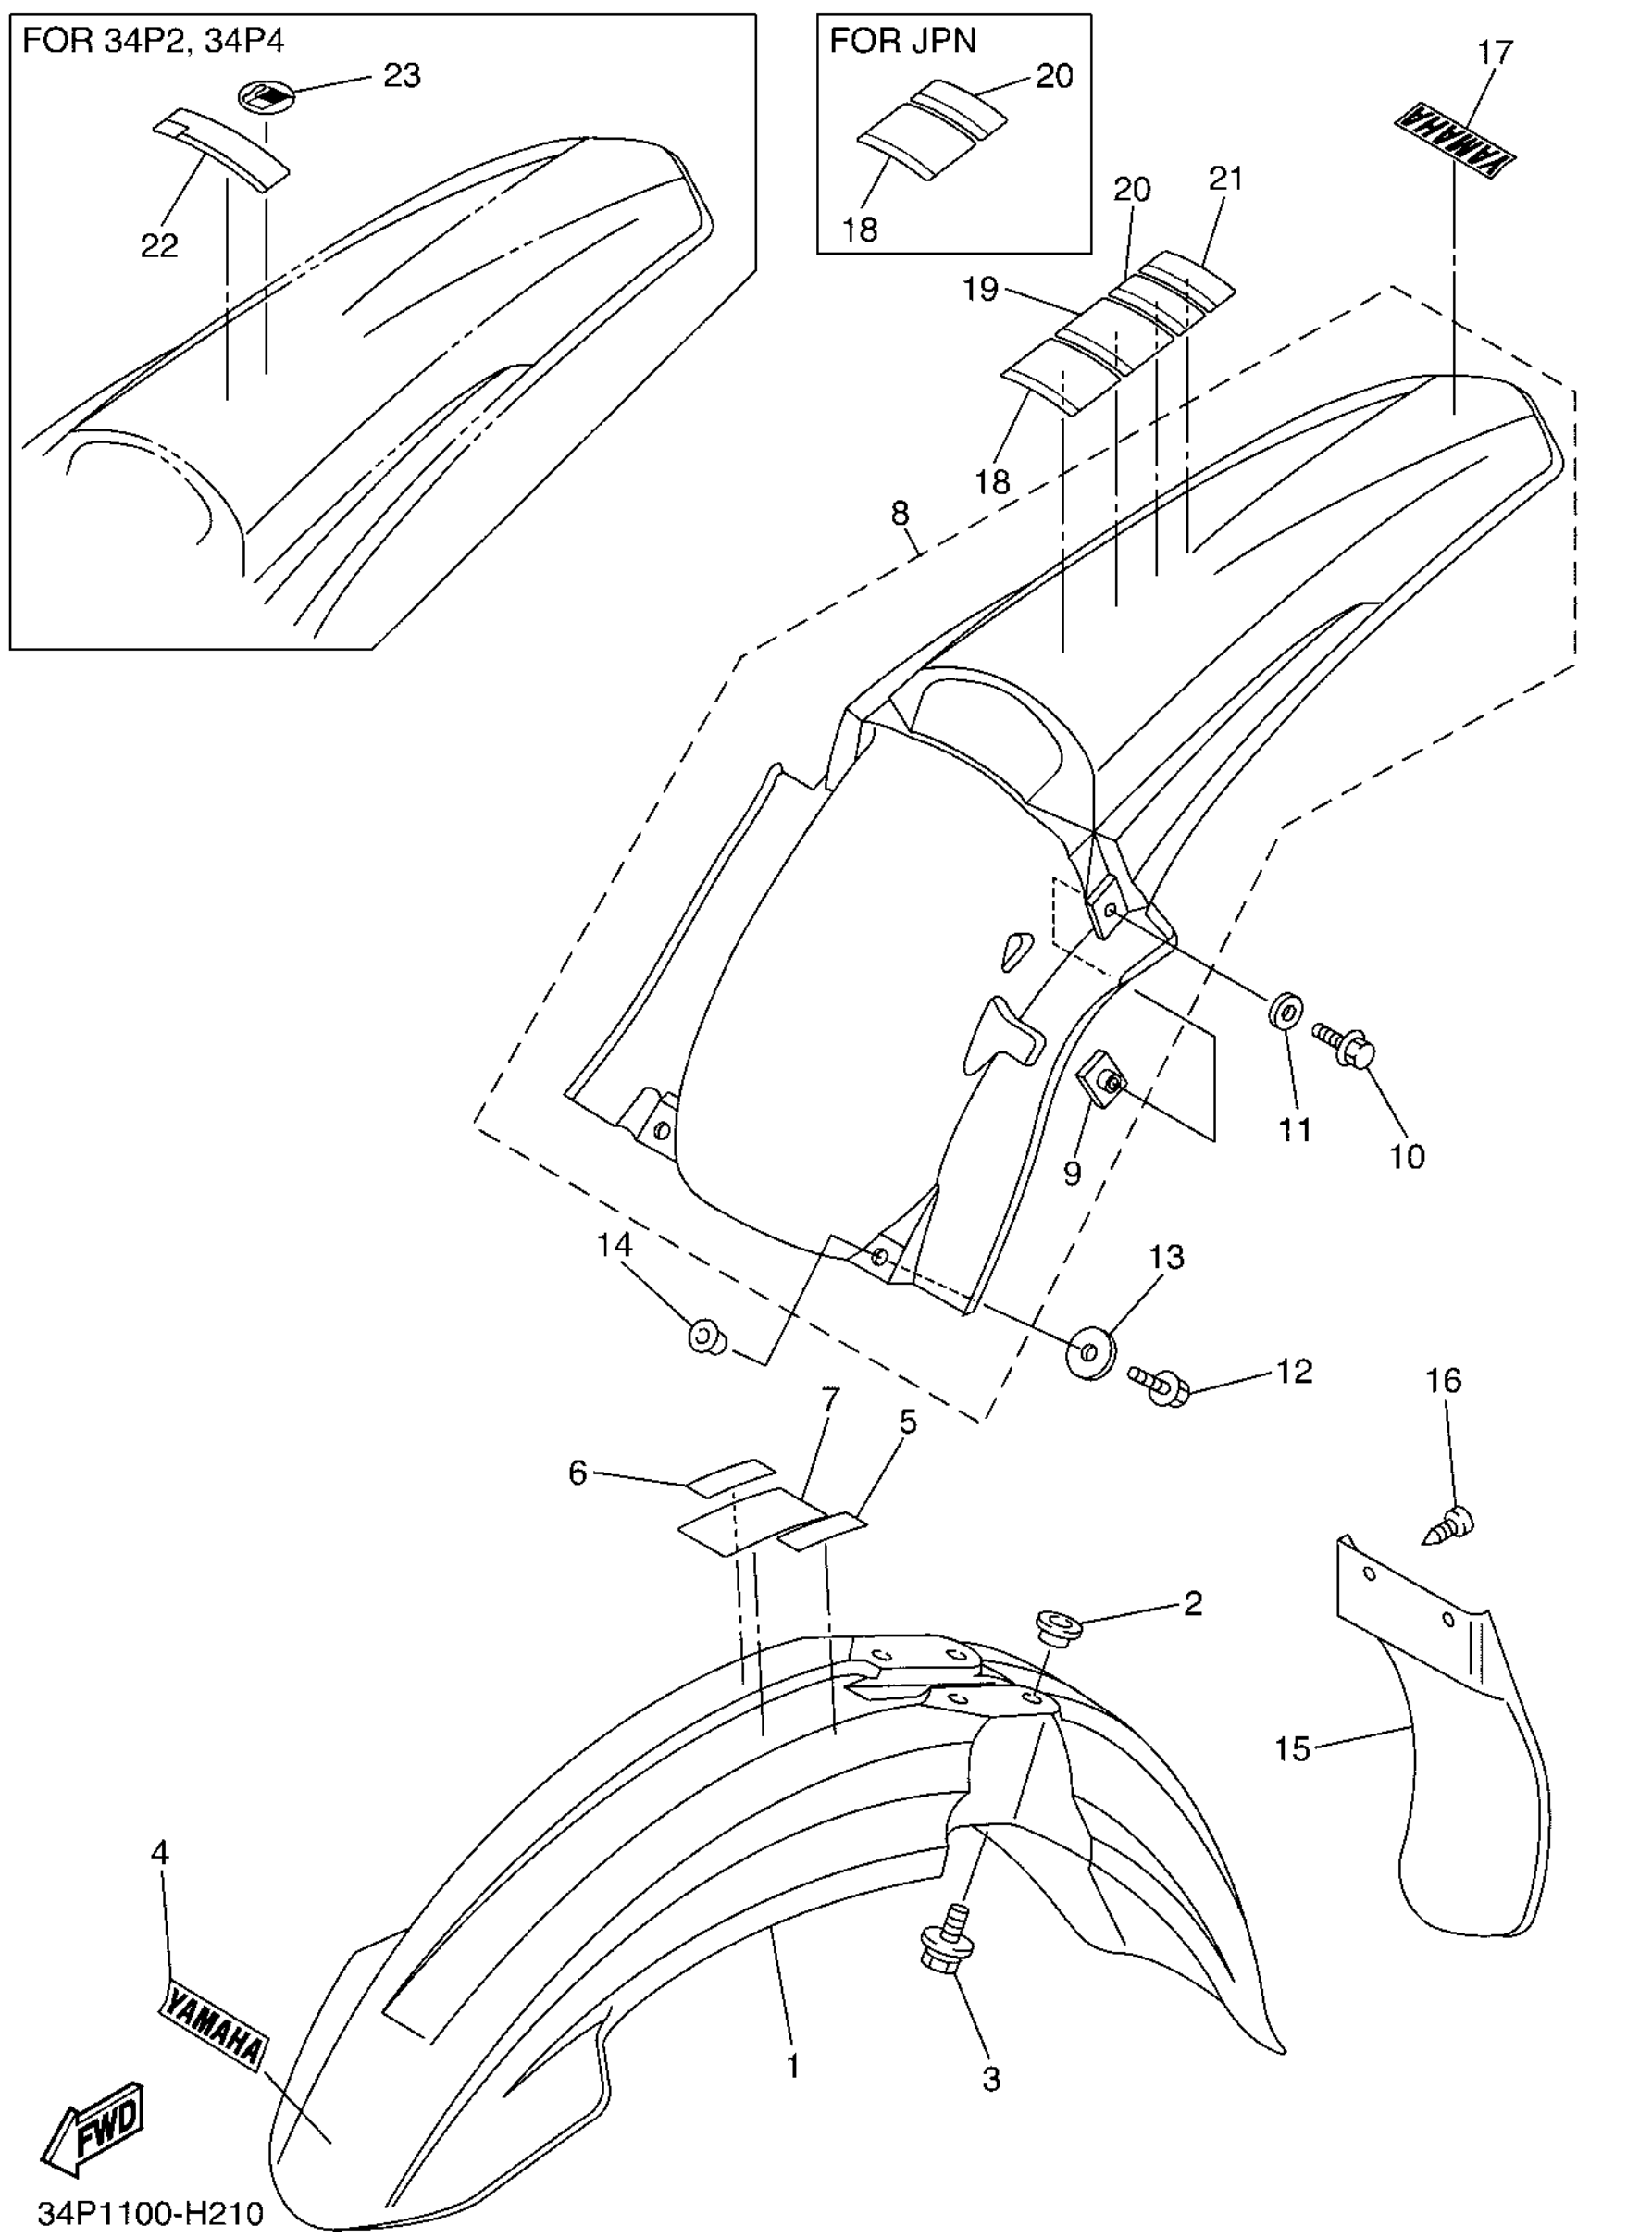


FIG. 21 FENDER

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	1C3–21511–51	FENDER, FRONT	1	1	1	1		UR FOR DPBSE
	2S2–21511–70	FENDER, FRONT	1	1	1	1		UR FOR PWS1
2	90387–06090	COLLAR	4	4	4	4		
3	90119–06147	BOLT, WITH WASHER	4	4	4	4		
4	4ES–2153E–01	EMBLEM, YAMAHA	1	1	1	1		UR FOR DPBSE
	4ES–2153E–20	EMBLEM, YAMAHA	1	1	1	1		UR FOR PWS1
5	3FB–2415E–02	LABEL, CAUTION	1					
	3FB–2415E–C1	LABEL, CAUTION			1			JAPANESE
6	3FB–2415E–12	LABEL, CAUTION	1					
7	4SR–2416E–00	LABEL, CAUTION CANADA	1					
8	5XC–21610–90	REAR FENDER COMP.	1	1	1	1		UR FOR DPBSE
	2S2–21610–70	REAR FENDER COMP.	1	1	1	1		UR FOR PWS1
9	5XE–21635–10	.NUT, REAR FENDER	2	2	2	2		
10	90105–06100	BOLT, FLANGE	2	2	2	2		
11	90201–06104	WASHER, PLATE	2	2	2	2		
12	90105–06106	BOLT, FLANGE	2	2	2	2		
13	90201–06085	WASHER, PLATE	2	2	2	2		
14	90387–06009	COLLAR	2	2	2	2		
15	5TA–21642–00	GUARD, FLAP	1	1	1	1		
16	97702–60016	SCREW, TAPPING	2	2	2	2		
17	3WF–2153E–10	EMBLEM, YAMAHA	1	1	1	1		UR FOR DPBSE
	3WF–2153E–40	EMBLEM, YAMAHA	1	1	1	1		UR FOR PWS1
18	5PA–2118K–00	LABEL, CAUTION	1					
	5PA–2118K–20	LABEL, CAUTION			1			
19	5PA–2118K–10	LABEL, CAUTION	1					
20	3XJ–2151H–A1	LABEL 5	1					
	4LB–2151H–02	LABEL 5			1			JAPANESE

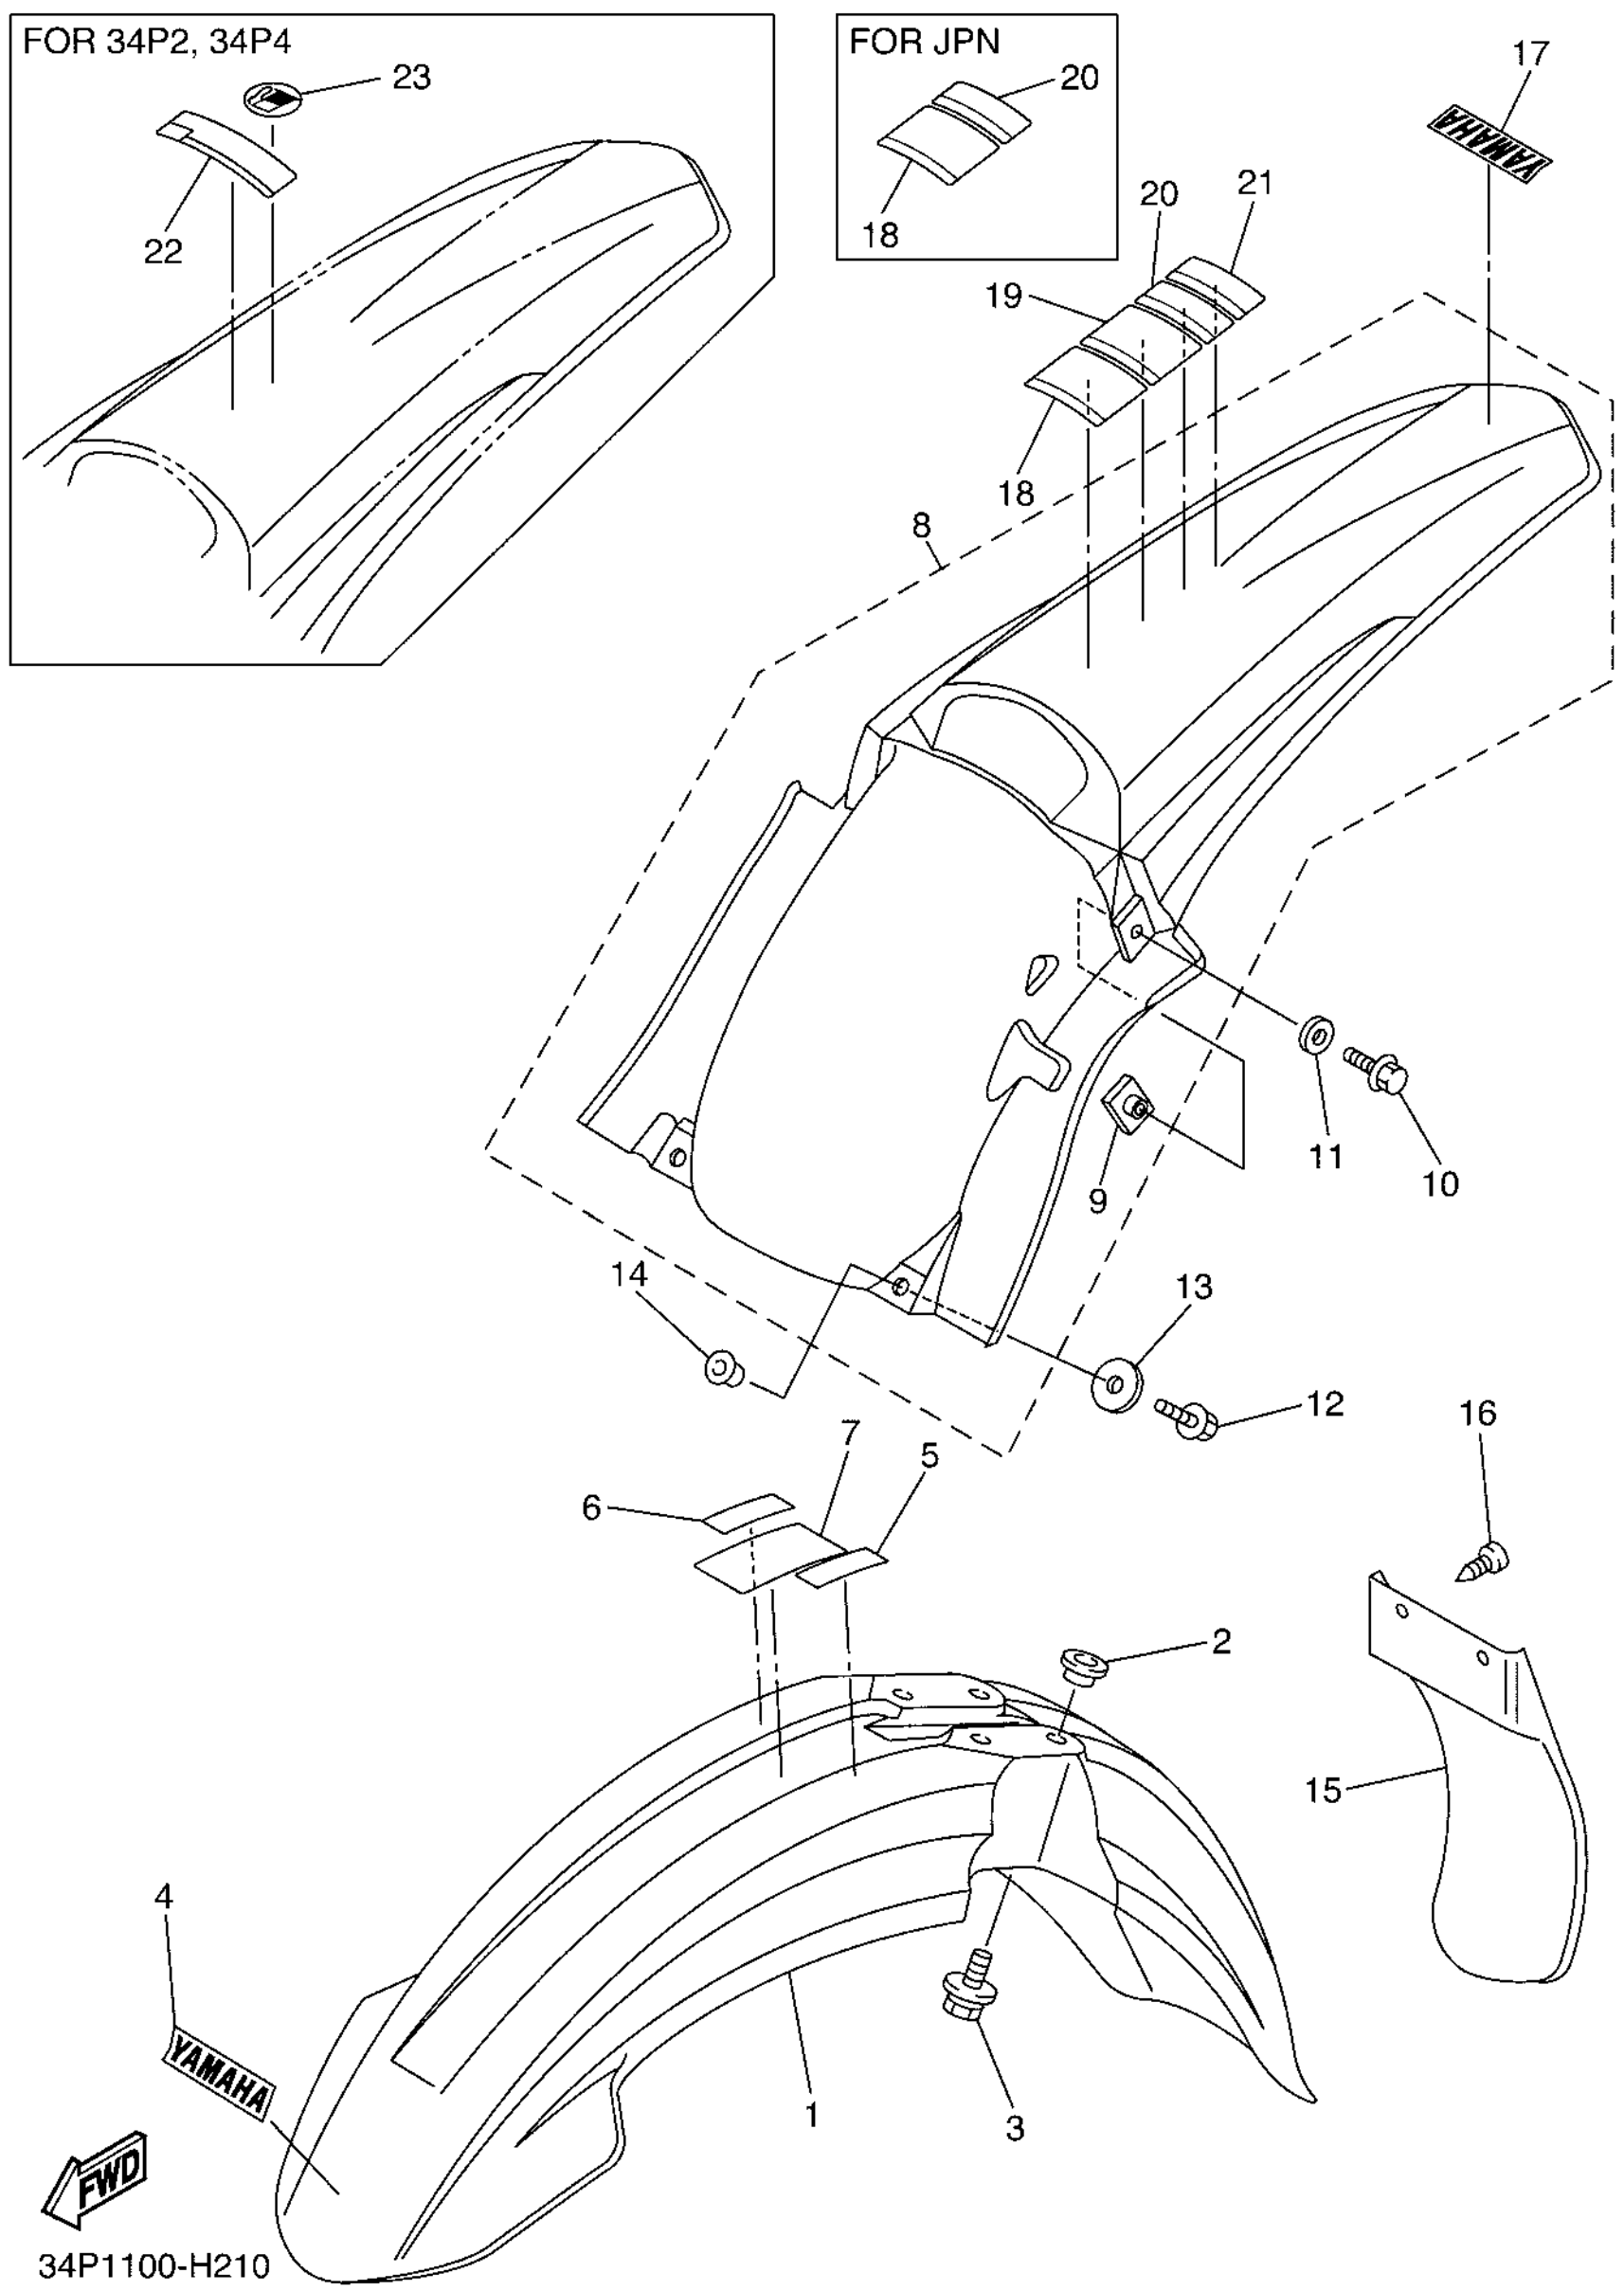


FIG. 21 FENDER

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
21	3XJ–2151H–B1	LABEL 5	1					
22	5RU–21568–01	LABEL, WARNING		1		1		
23	3ME–2415E–01	LABEL, CAUTION		1				

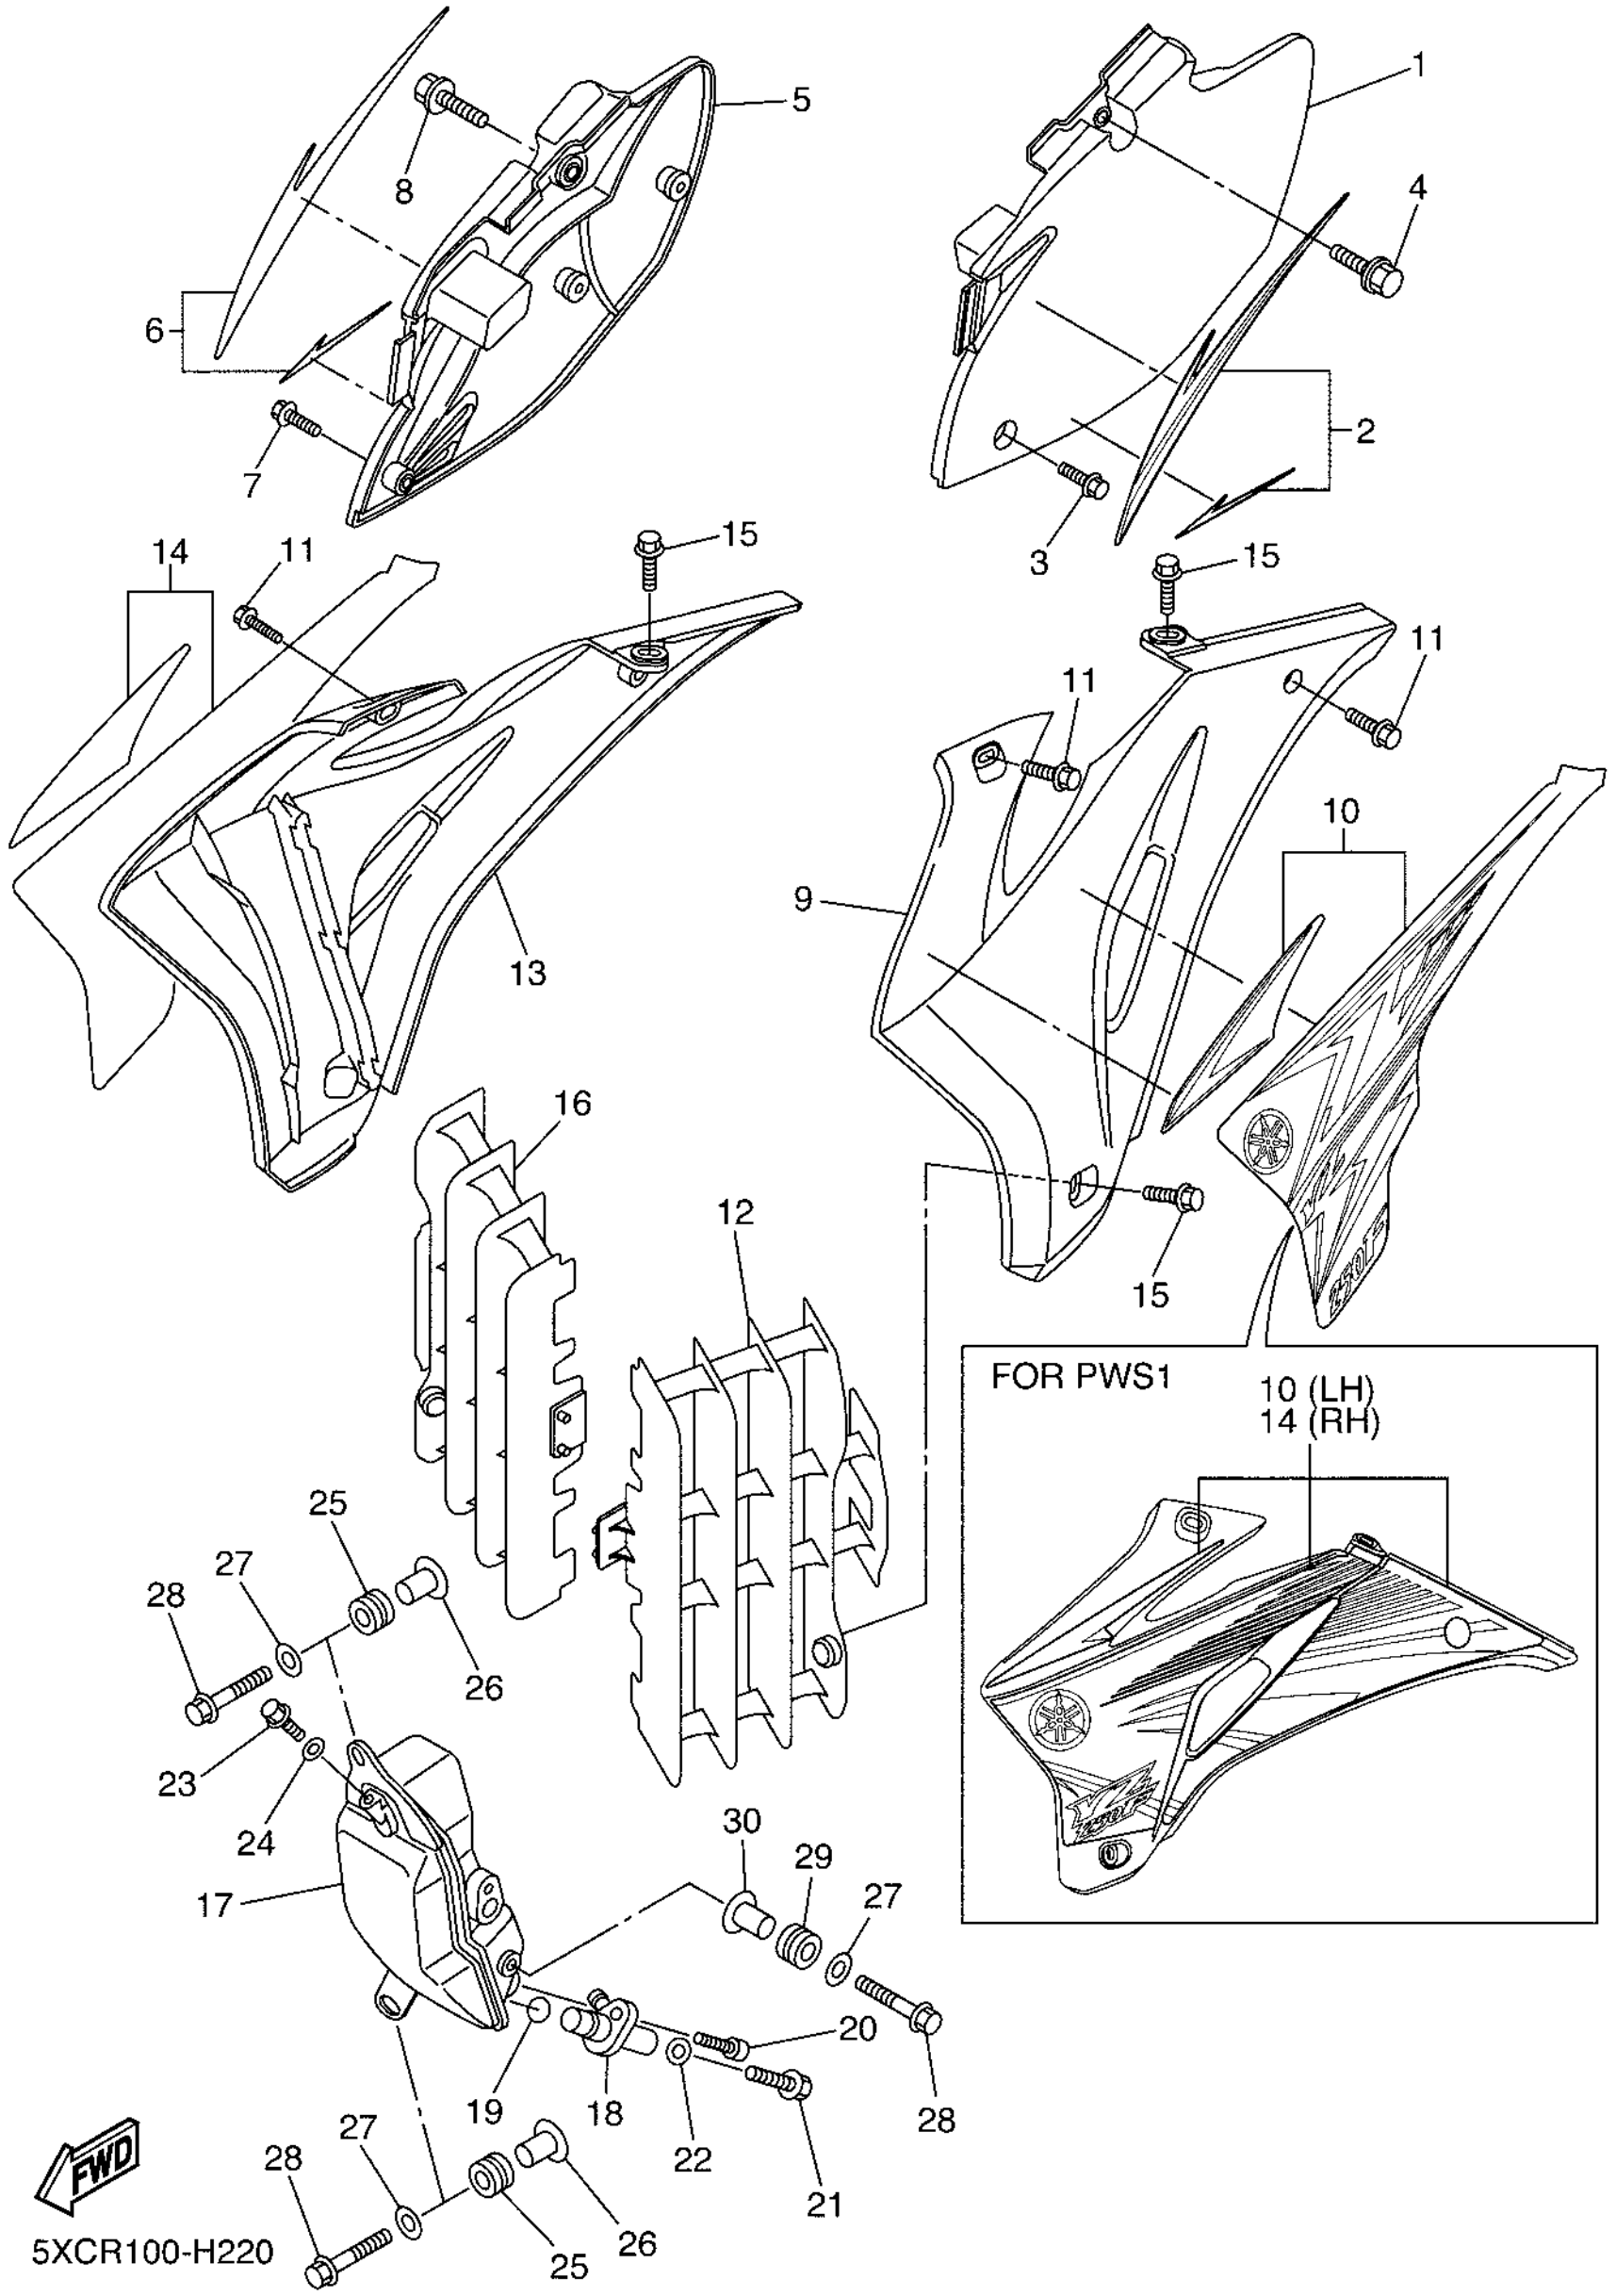


FIG. 22 SIDE COVER & OIL TANK

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5XC–21710–90	SIDE COVER ASSY 1	1	1	1	1		
2	34P–2167A–00	GRAPHIC SET	1	1	1	1		UR FOR DPBSE
	34P–2167A–10	GRAPHIC SET	1	1	1	1		UR FOR PWS1
3	90105–06103	BOLT, FLANGE	1	1	1	1		
4	90119–08095	BOLT, WITH WASHER	1	1	1	1		
5	5XC–21720–90	SIDE COVER ASSY 2	1	1	1	1		
6	34P–2167B–00	GRAPHIC SET 2	1	1	1	1		UR FOR DPBSE
	34P–2167B–10	GRAPHIC SET 2	1	1	1	1		UR FOR PWS1
7	90105–06103	BOLT, FLANGE	1	1	1	1		
8	90119–08095	BOLT, WITH WASHER	1	1	1	1		
9	5XC–21730–90	SIDE COVER ASSY 3	1	1	1	1		UR FOR DPBSE
	2S2–21730–70	SIDE COVER ASSY 3	1	1	1	1		UR FOR PWS1
10	34P–2173L–10	GRAPHIC SET 1	1	1	1	1		UR FOR DPBSE
	5XC–2173L–40	GRAPHIC SET 1	1	1	1	1		UR FOR PWS1
11	90105–06064	BOLT, FLANGE	4	4	4	4		
12	2S2–2172A–70	PANEL 1	1	1	1	1		
13	5XC–21740–90	SIDE COVER ASSY 4	1	1	1	1		UR FOR DPBSE
	2S2–21740–70	SIDE COVER ASSY 4	1	1	1	1		UR FOR PWS1
14	34P–2174L–10	GRAPHIC SET 2	1	1	1	1		UR FOR DPBSE
	5XC–2174L–40	GRAPHIC SET 2	1	1	1	1		UR FOR PWS1
15	90105–06064	BOLT, FLANGE	4	4	4	4		
16	2S2–2172A–80	PANEL 1	1	1	1	1		
17	5XC–21751–G0	TANK, OIL	1	1	1	1		
18	5XC–13416–90	PIPE, OIL 1	1	1	1	1		
19	93210–14369	O-RING	1	1	1	1		
20	91312–06016	BOLT	1	1	1	1		
21	90105–08151	BOLT, FLANGE	1	1	1	1		

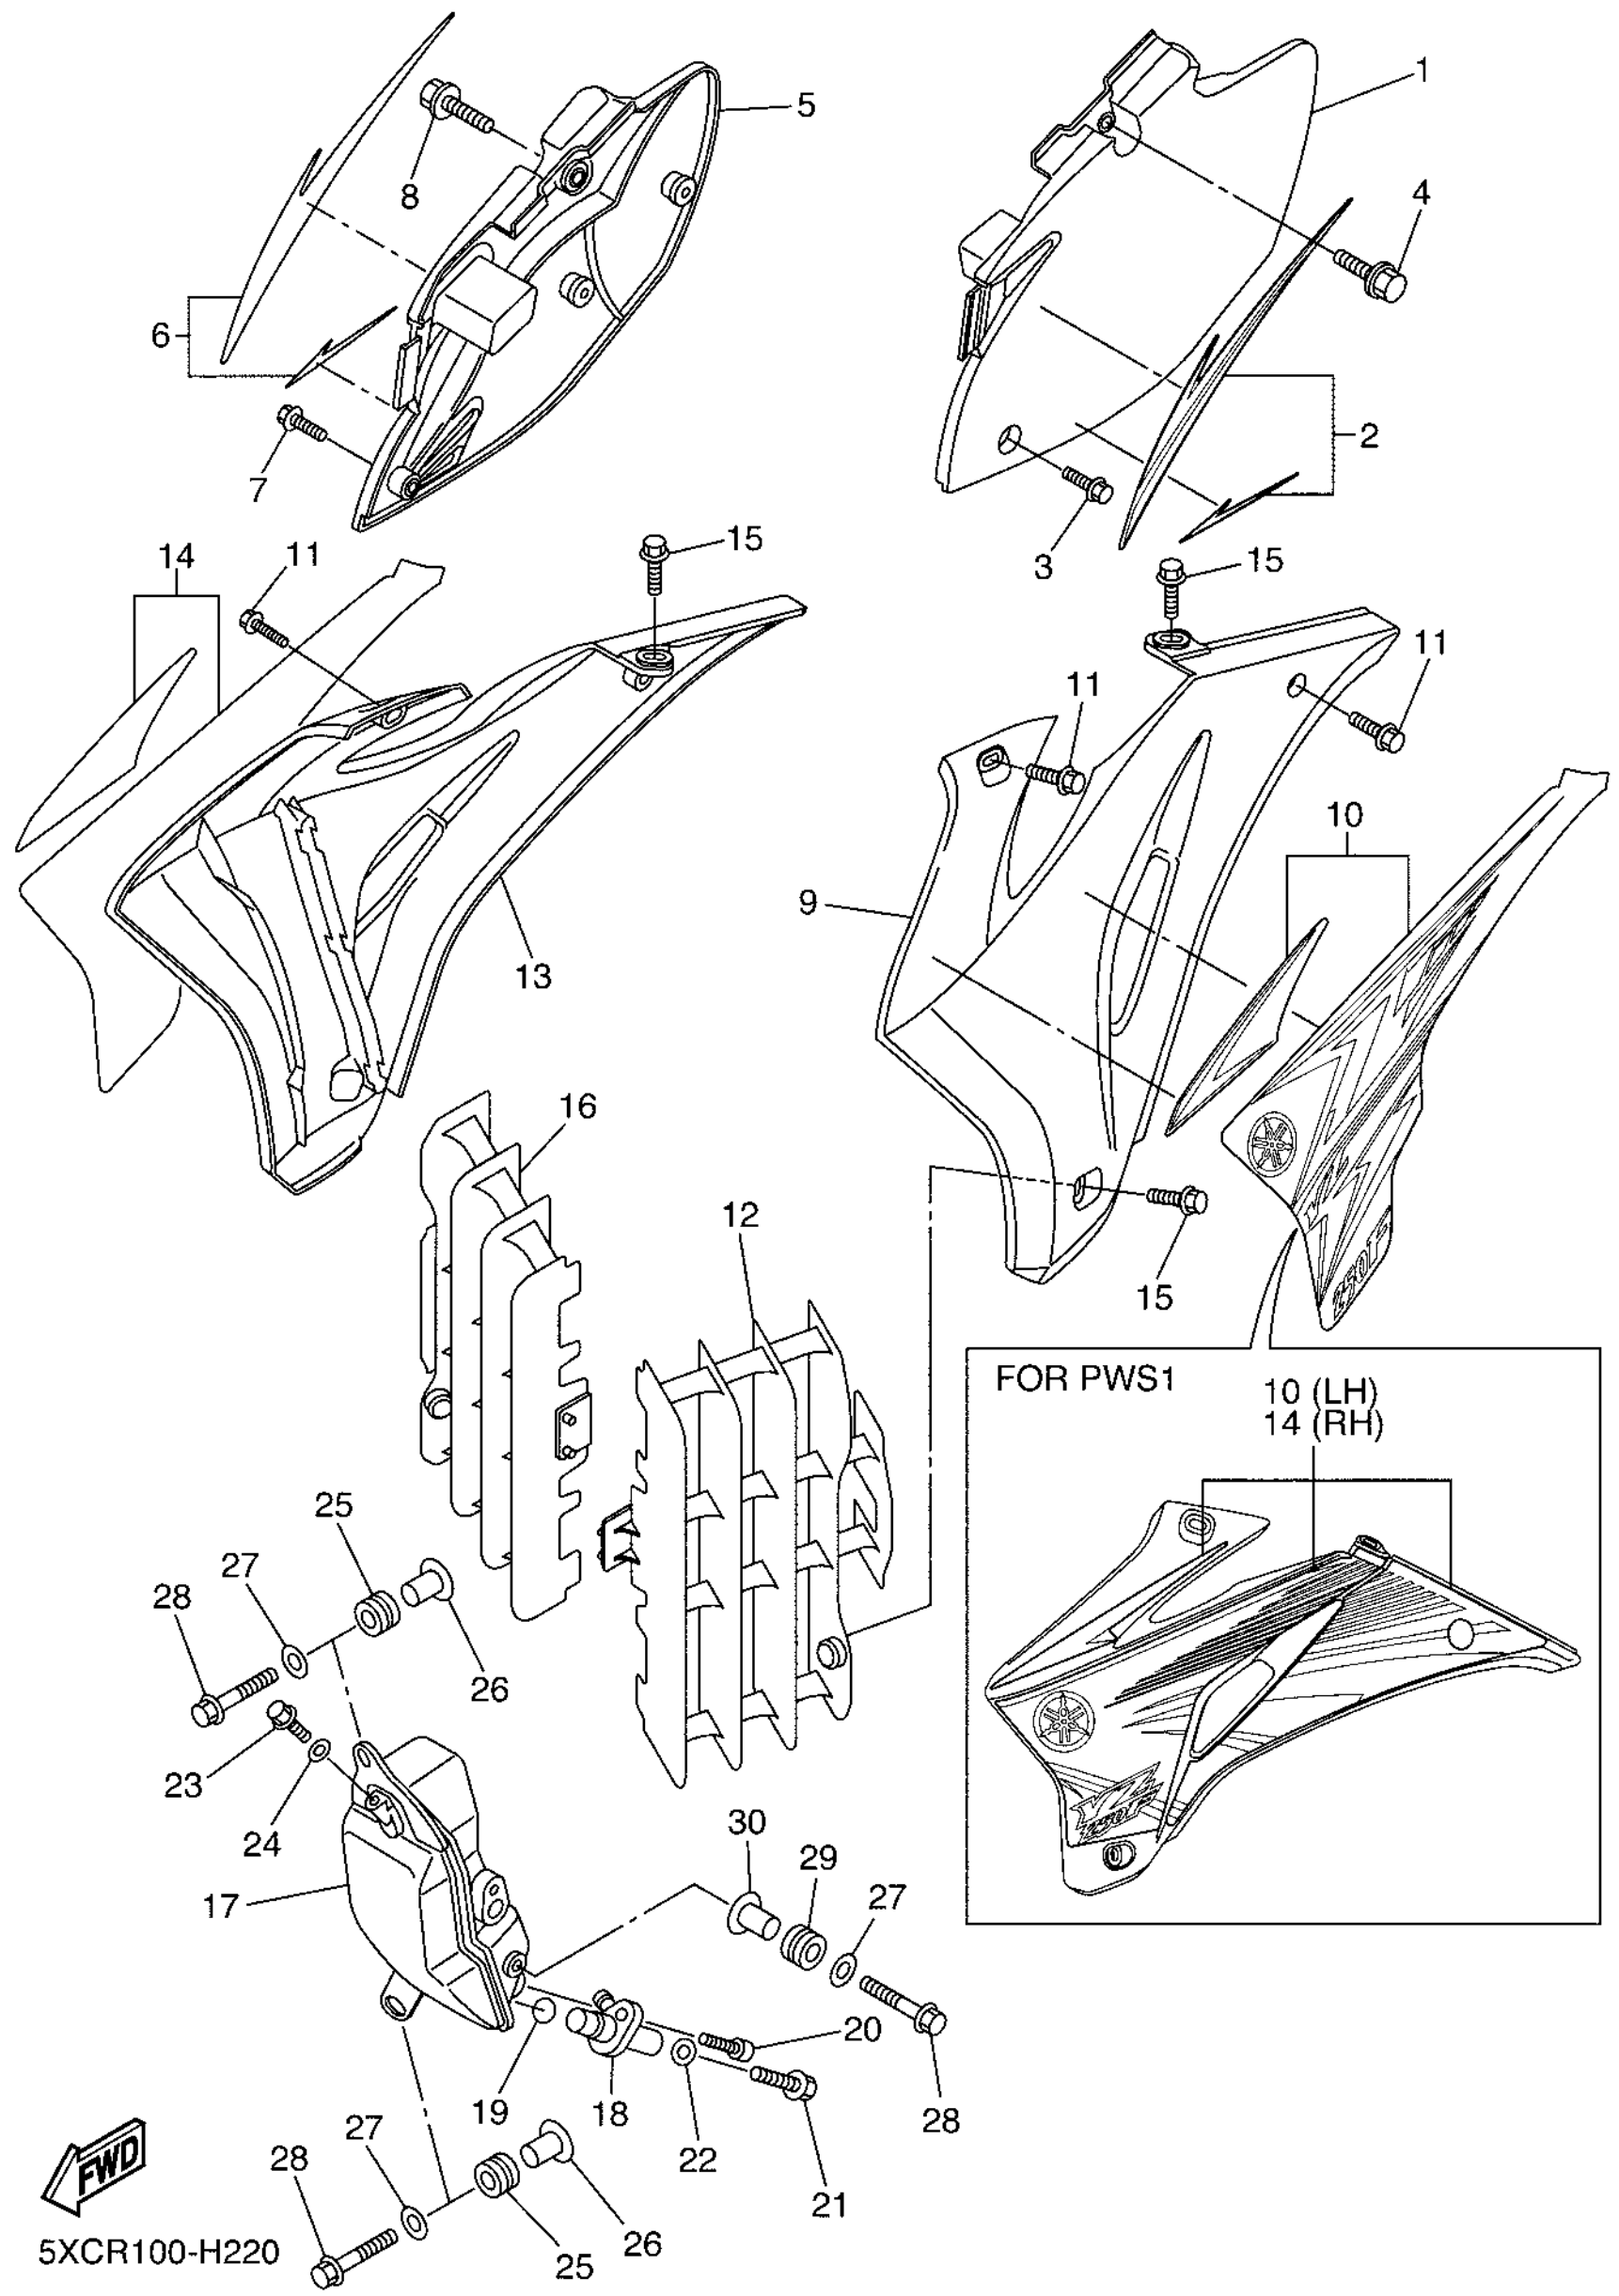


FIG. 22 SIDE COVER & OIL TANK

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
22	90201–082A6	WASHER, PLATE	1	1	1	1		
23	90105–06128	BOLT, FLANGE	1	1	1	1		
24	90201–06630	WASHER, PLATE	1	1	1	1		
25	90480–10289	GROMMET	2	2	2	2		
26	90387–06150	COLLAR	2	2	2	2		
27	90201–06571	WASHER, PLATE	3	3	3	3		
28	90105–06112	BOLT, FLANGE	3	3	3	3		
29	90480–14433	GROMMET	1	1	1	1		
30	90387–06161	COLLAR	1	1	1	1		


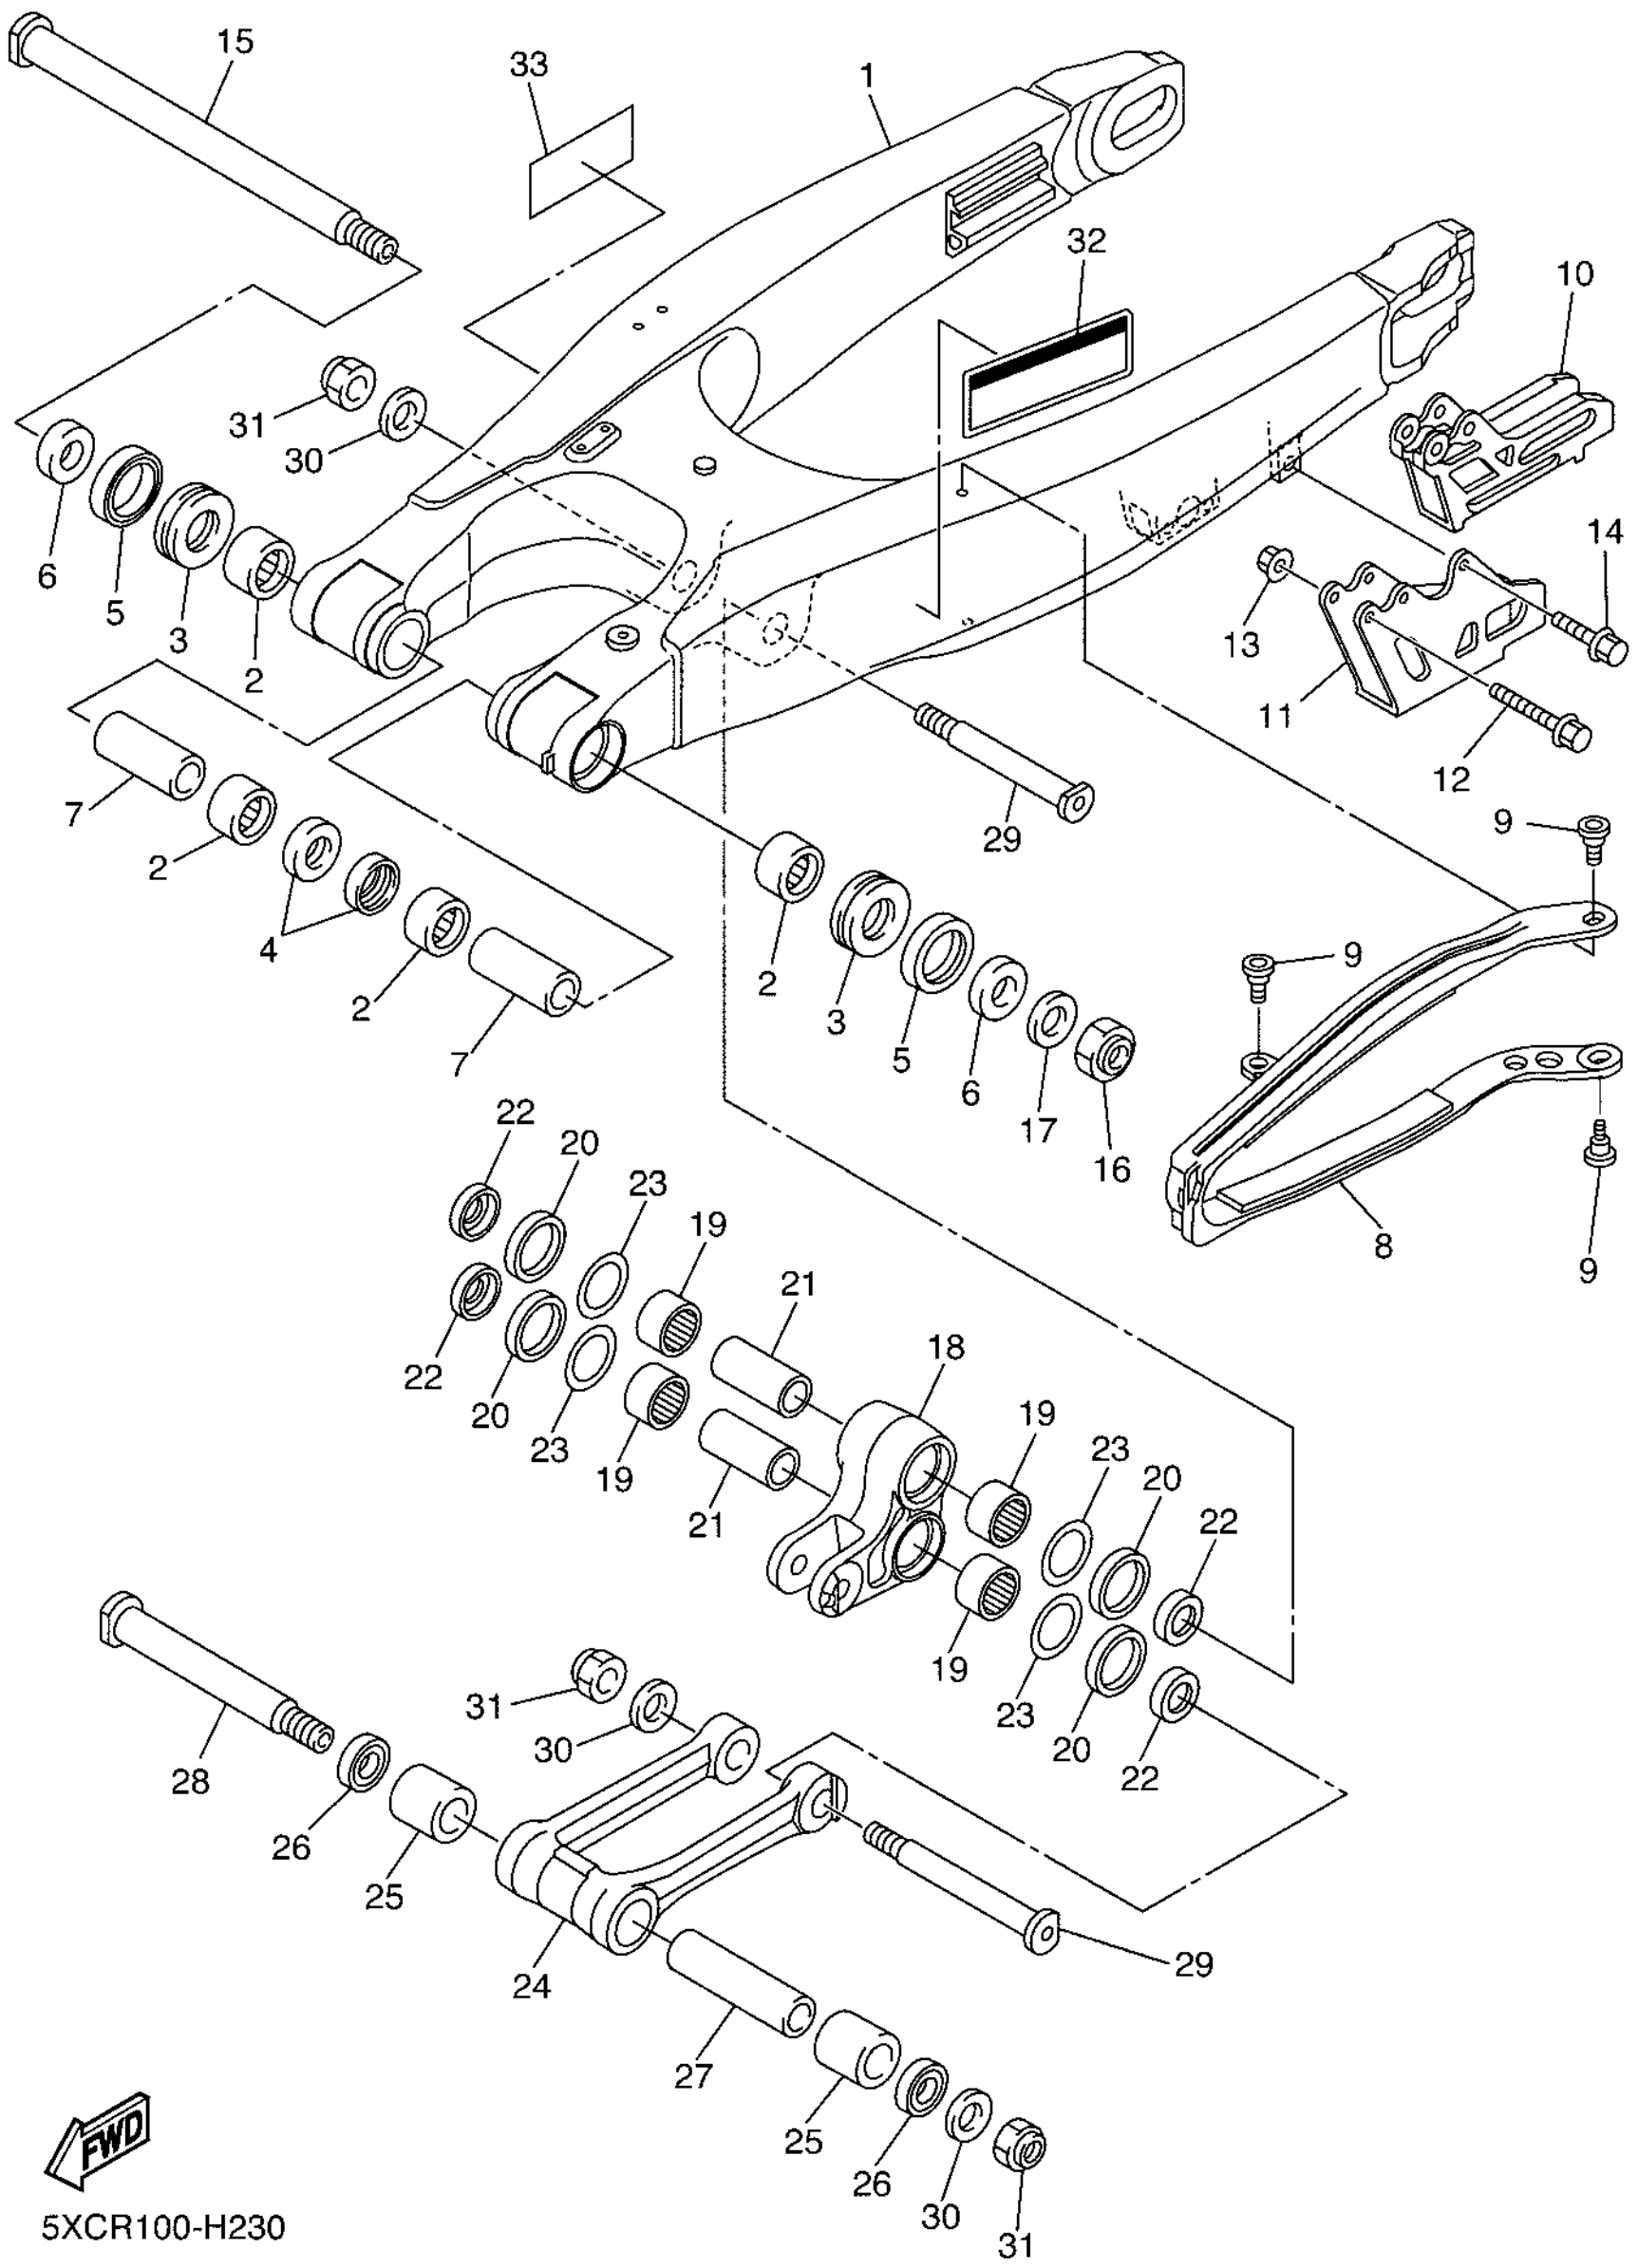


FIG. 23 REAR ARM


REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	17D–22110–00	REAR ARM COMP.	1	1	1	1		
2	93317–22262	BEARING	4	4	4	4		
3	93342–22217	BEARING	2	2	2	2		
4	93106–22002	OIL SEAL	2	2	2	2		
5	93109–28043	OIL SEAL	2	2	2	2		
6	90387–18012	COLLAR	2	2	2	2		
7	90387–18004	COLLAR	2	2	2	2		
8	34P–22151–00	SEAL, GUARD	1	1	1	1		
9	1C3–22969–90	SCREW, 1	3	3	3	3		
10	2S2–22199–70	SUPPORT, CHAIN	1	1	1	1		
11	2S2–22128–70	COVER, THRUST 1	1	1	1	1		
12	90105–06104	BOLT, FLANGE	2	2	2	2		
13	90179–06028	NUT	2	2	2	2		
14	90105–06105	BOLT, FLANGE	1	1	1	1		
15	1C3–22141–10	SHAFT, PIVOT	1	1	1	1		
16	90185–16002	NUT, SELF-LOCKING	1	1	1	1		
17	90201–16018	WASHER, PLATE	1	1	1	1		
18	17D–2217A–00	ARM, RELAY	1	1	1	1		
19	93315–32166	BEARING	4	4	4	4		
20	93109–25001	OIL SEAL	4	4	4	4		
21	90387–16026	COLLAR	2	2	2	2		
22	90209–16011	WASHER	4	4	4	4		
23	90201–21014	WASHER, PLATE	4	4	4	4		
24	17D–2217F–00	ROD, CONNECTING 1	1	1	1	1		
25	93315–32166	BEARING	2	2	2	2		
26	93109–21001	OIL SEAL	2	2	2	2		
27	90387–14016	COLLAR	1	1	1	1		

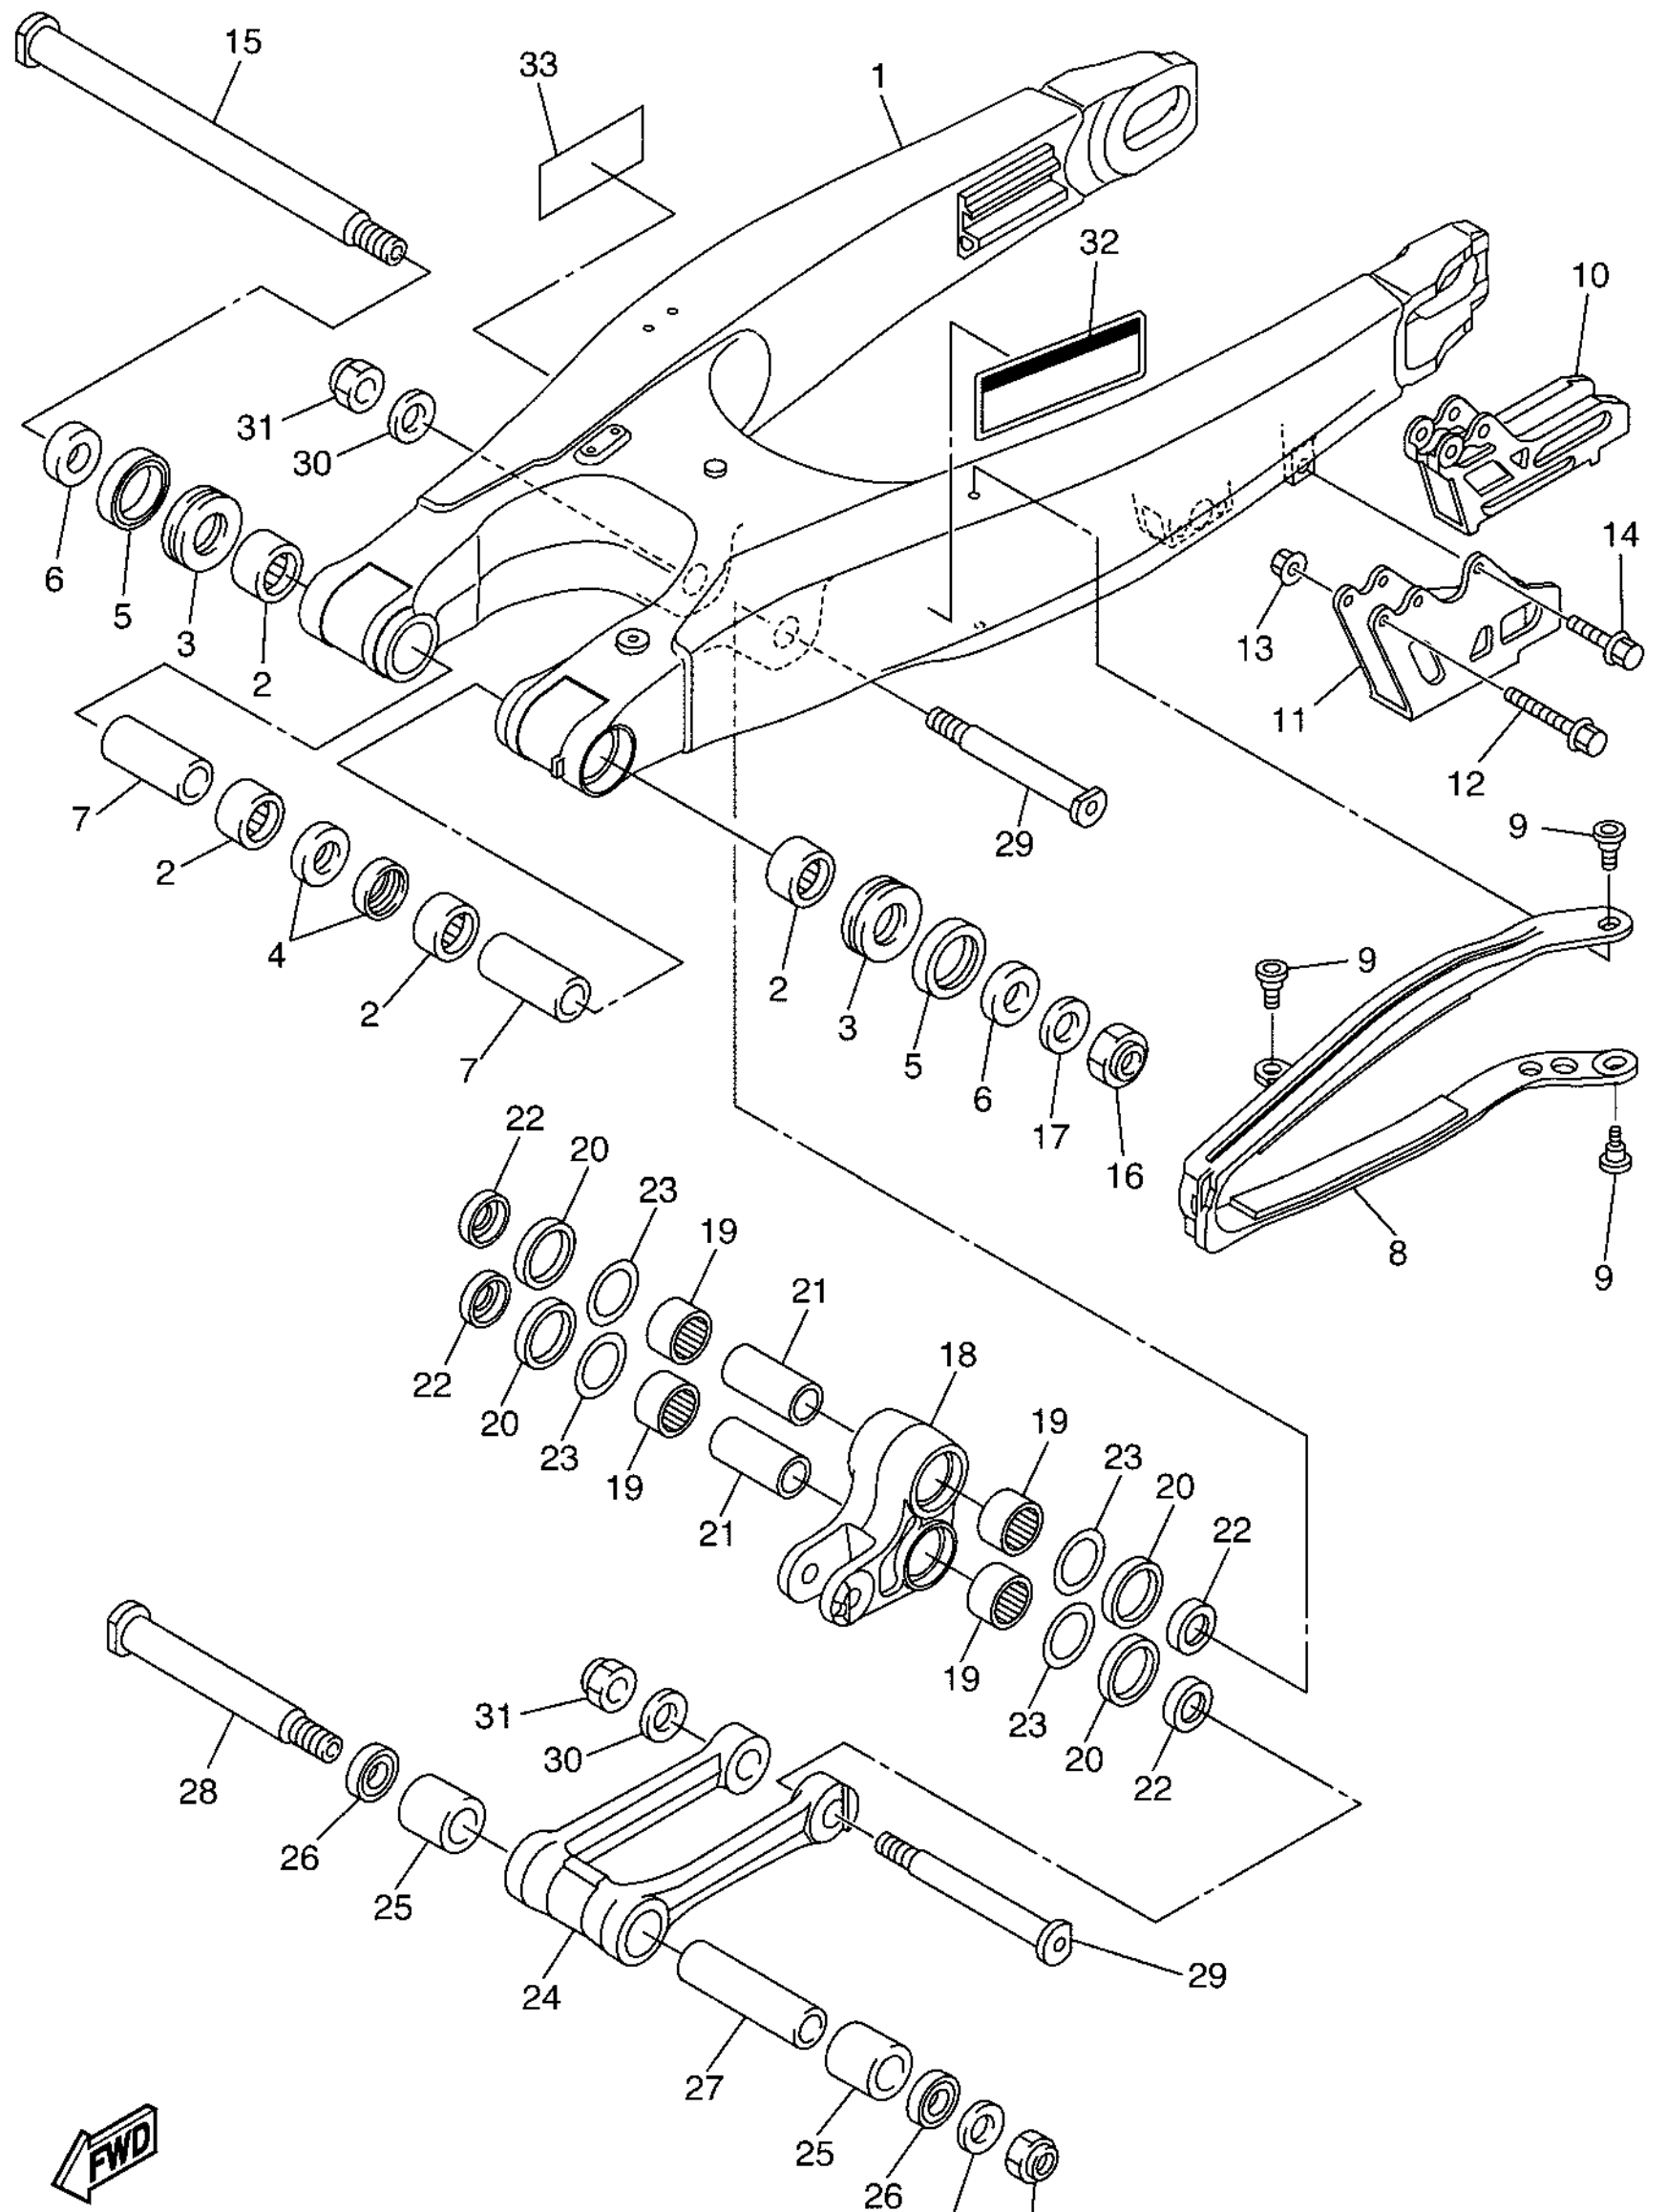

5XCR100-H230

FIG. 23 REAR ARM

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
28	5XC–22121–91	SHAFT 1	1	1	1	1		
29	34P–22122–00	SHAFT 2	2	2	2	2		
30	90201–14020	WASHER, PLATE	3	3	3	3		
31	90185–14010	NUT, SELF-LOCKING	3	3	3	3		
32	3RV–21668–A0	LABEL, TIRE	1	1		1		
33	3RV–21668–B0	LABEL, TIRE	1					

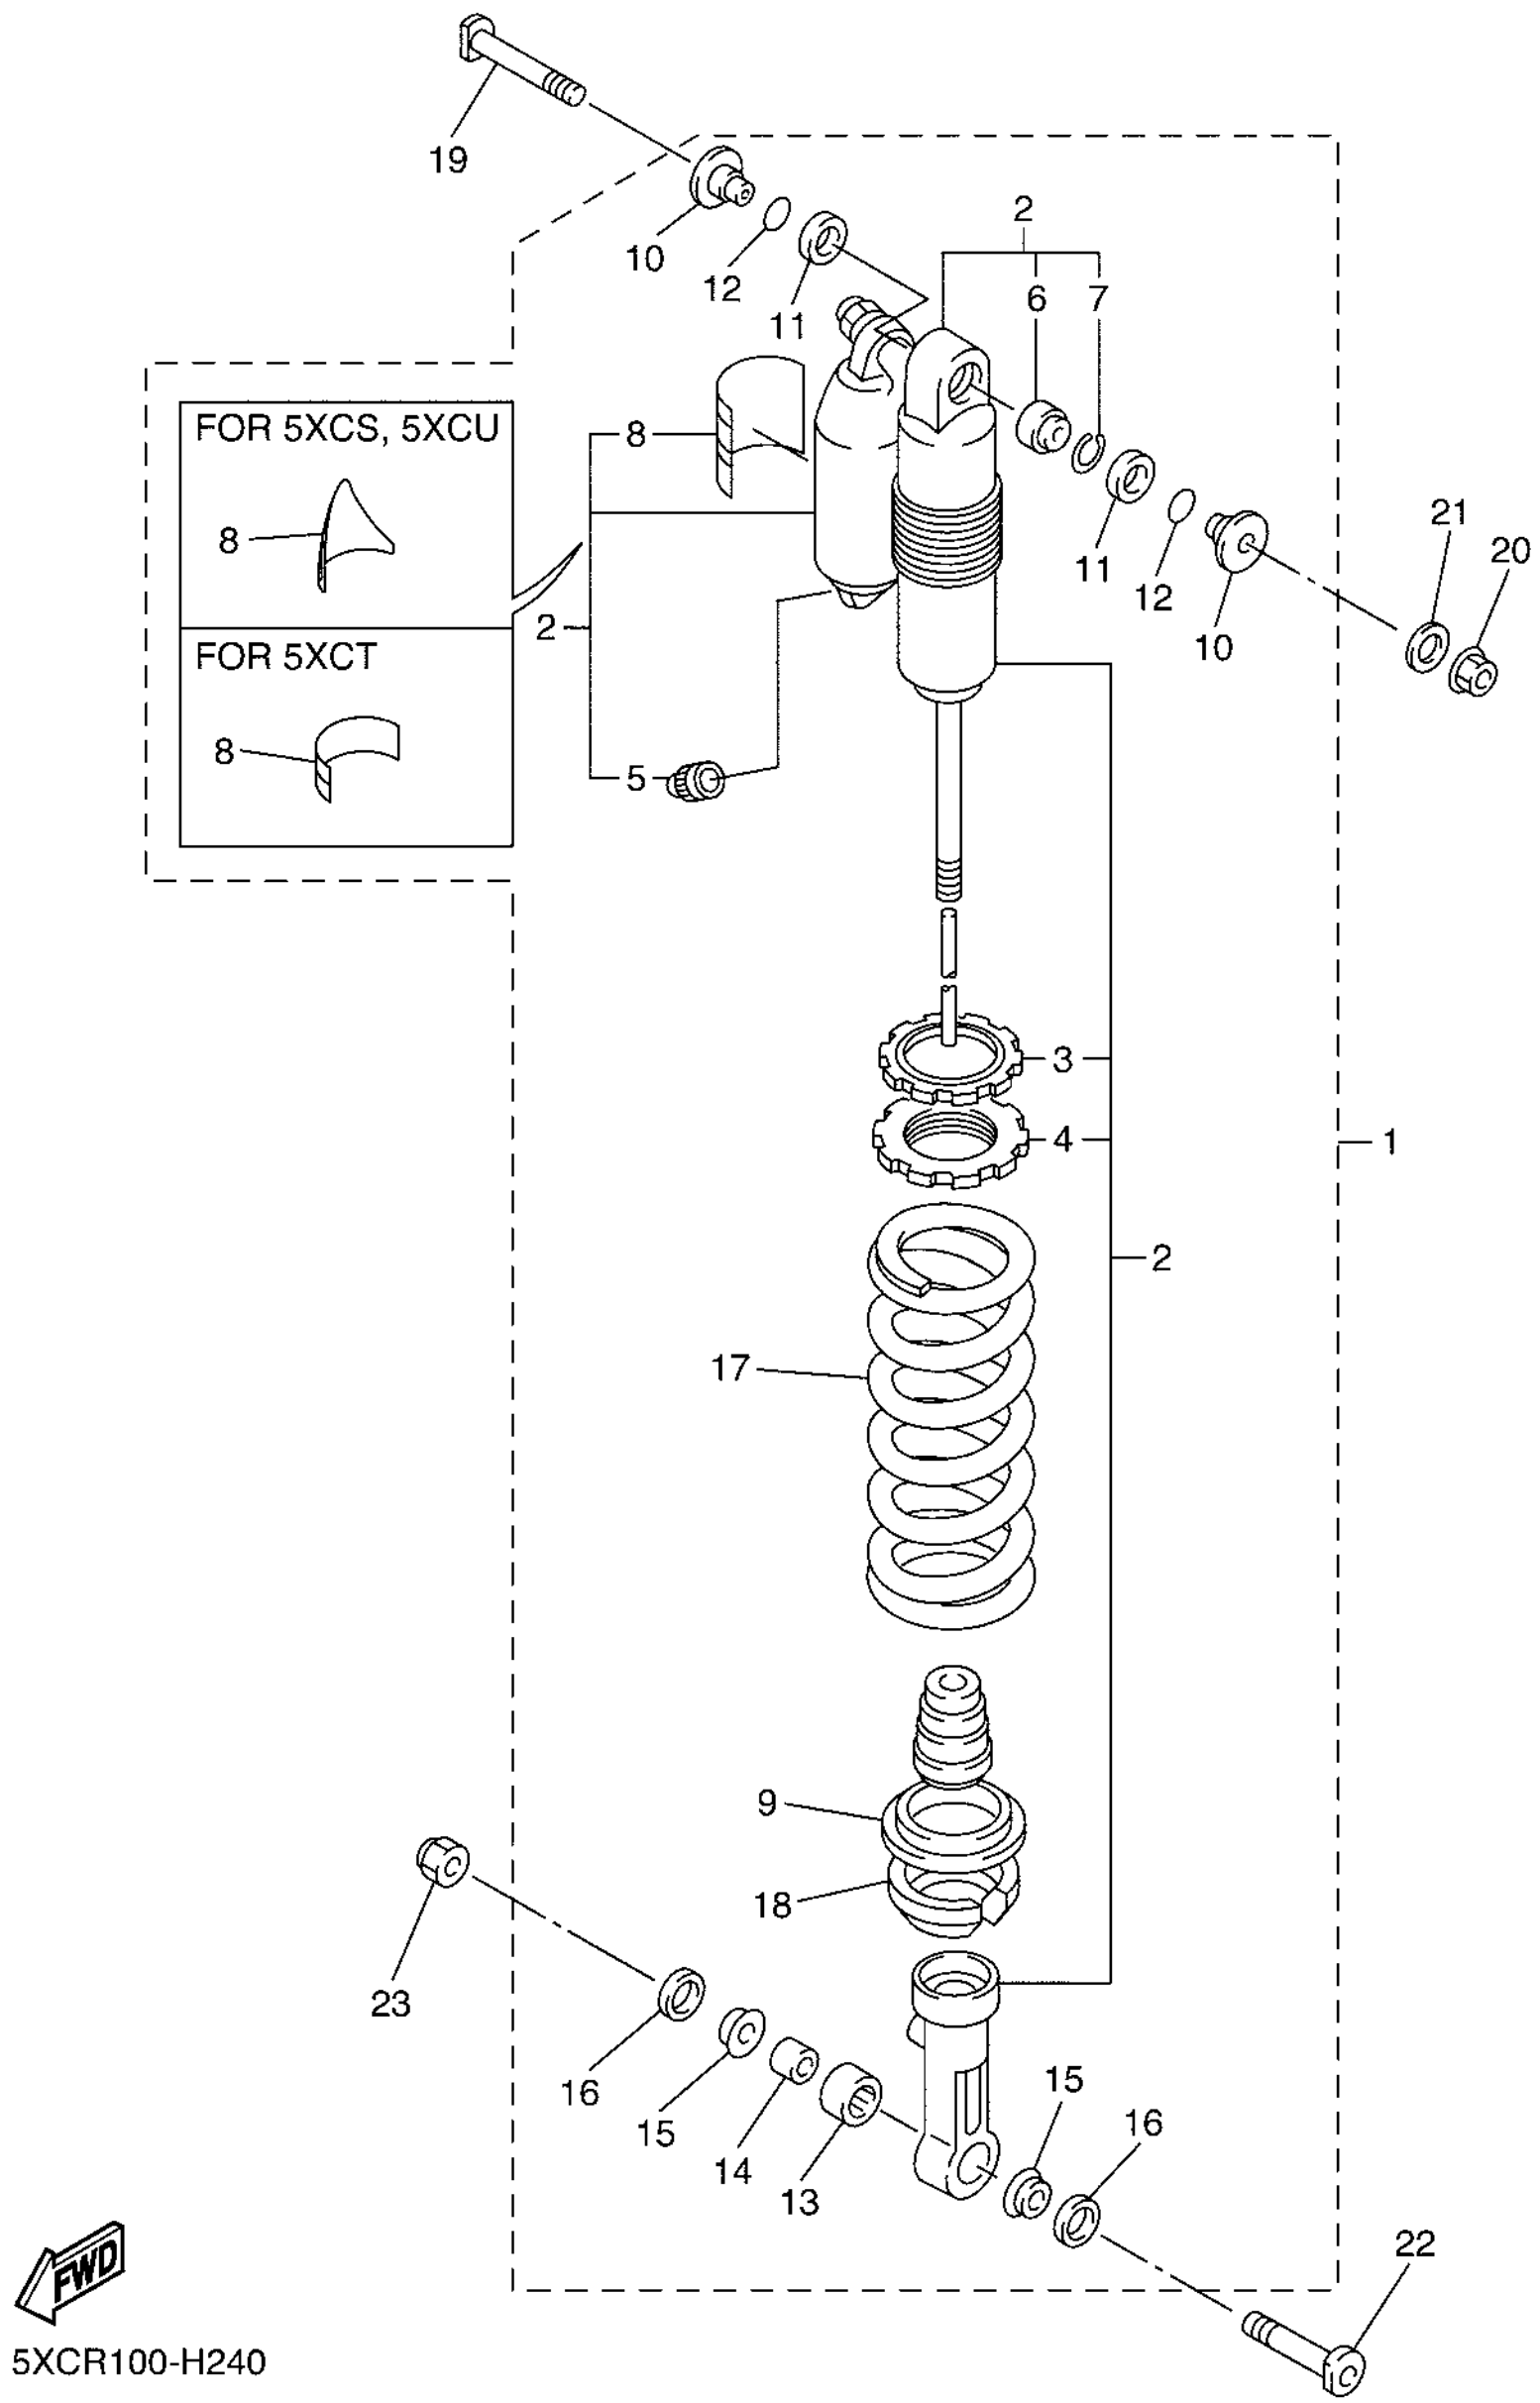

5XCR100-H240

FIG. 24 REAR SUSPENSION

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5XC–22200–60	SHOCK ABSORBER ASSY, REAR	1					UR FOR DPBSE
	5XC–22200–Y0	SHOCK ABSORBER ASSY, REAR	1					UR FOR PWS1
	5XC–22200–30	SHOCK ABSORBER ASSY, REAR		1		1		UR FOR DPBSE
	5XC–22200–80	SHOCK ABSORBER ASSY, REAR		1		1		UR FOR PWS1
	5XC–22200–40	SHOCK ABSORBER ASSY, REAR			1			UR FOR DPBSE
	5XC–22200–90	SHOCK ABSORBER ASSY, REAR			1			UR FOR PWS1
2	5XC–22201–60	.DAMPER SUB ASSY	1					UR FOR DPBSE
	5XC–22201–Y0	.DAMPER SUB ASSY	1					UR FOR PWS1
	5XC–22201–30	.DAMPER SUB ASSY		1		1		UR FOR DPBSE
	5XC–22201–80	.DAMPER SUB ASSY		1		1		UR FOR PWS1
	5XC–22201–40	.DAMPER SUB ASSY			1			UR FOR DPBSE
	5XC–22201–90	.DAMPER SUB ASSY			1			UR FOR PWS1
3	3SP–22234–00	..GUIDE, SPRING 3	1	1	1	1		
4	1C3–22213–L0	..SEAT, SPRING UPPER	1	1	1	1		
5	509–23184–L0	..CAP, AIR VALVE	1	1	1	1		
6	4JX–22226–00	..BUSH, SHOCK ABSORBER LOWER	1	1	1	1		
7	5DH–23183–00	..CIRCLIP	1	1	1	1		
8	4AA–22259–60	..LABEL, WARNING	1					
	4AA–22259–40	..LABEL, WARNING		1		1		
	4AA–22259–50	..LABEL, WARNING			1			
9	5MV–22224–00	.GUIDE, SPRING 2	1	1	1	1		
10	1C3–22253–50	.COLLAR, DISTANCE	2	2	2	2		
11	3JE–22475–00	.SEAL, DUST	2	2	2	2		
12	4EW–22474–00	.SEAL, RING	2	2	2	2		
13	5UN–22176–00	.BEARING	1	1	1	1		
14	5MV–22184–00	.BUSH	1	1	1	1		
15	1C3–22253–L0	.COLLAR, DISTANCE	2	2	2	2		

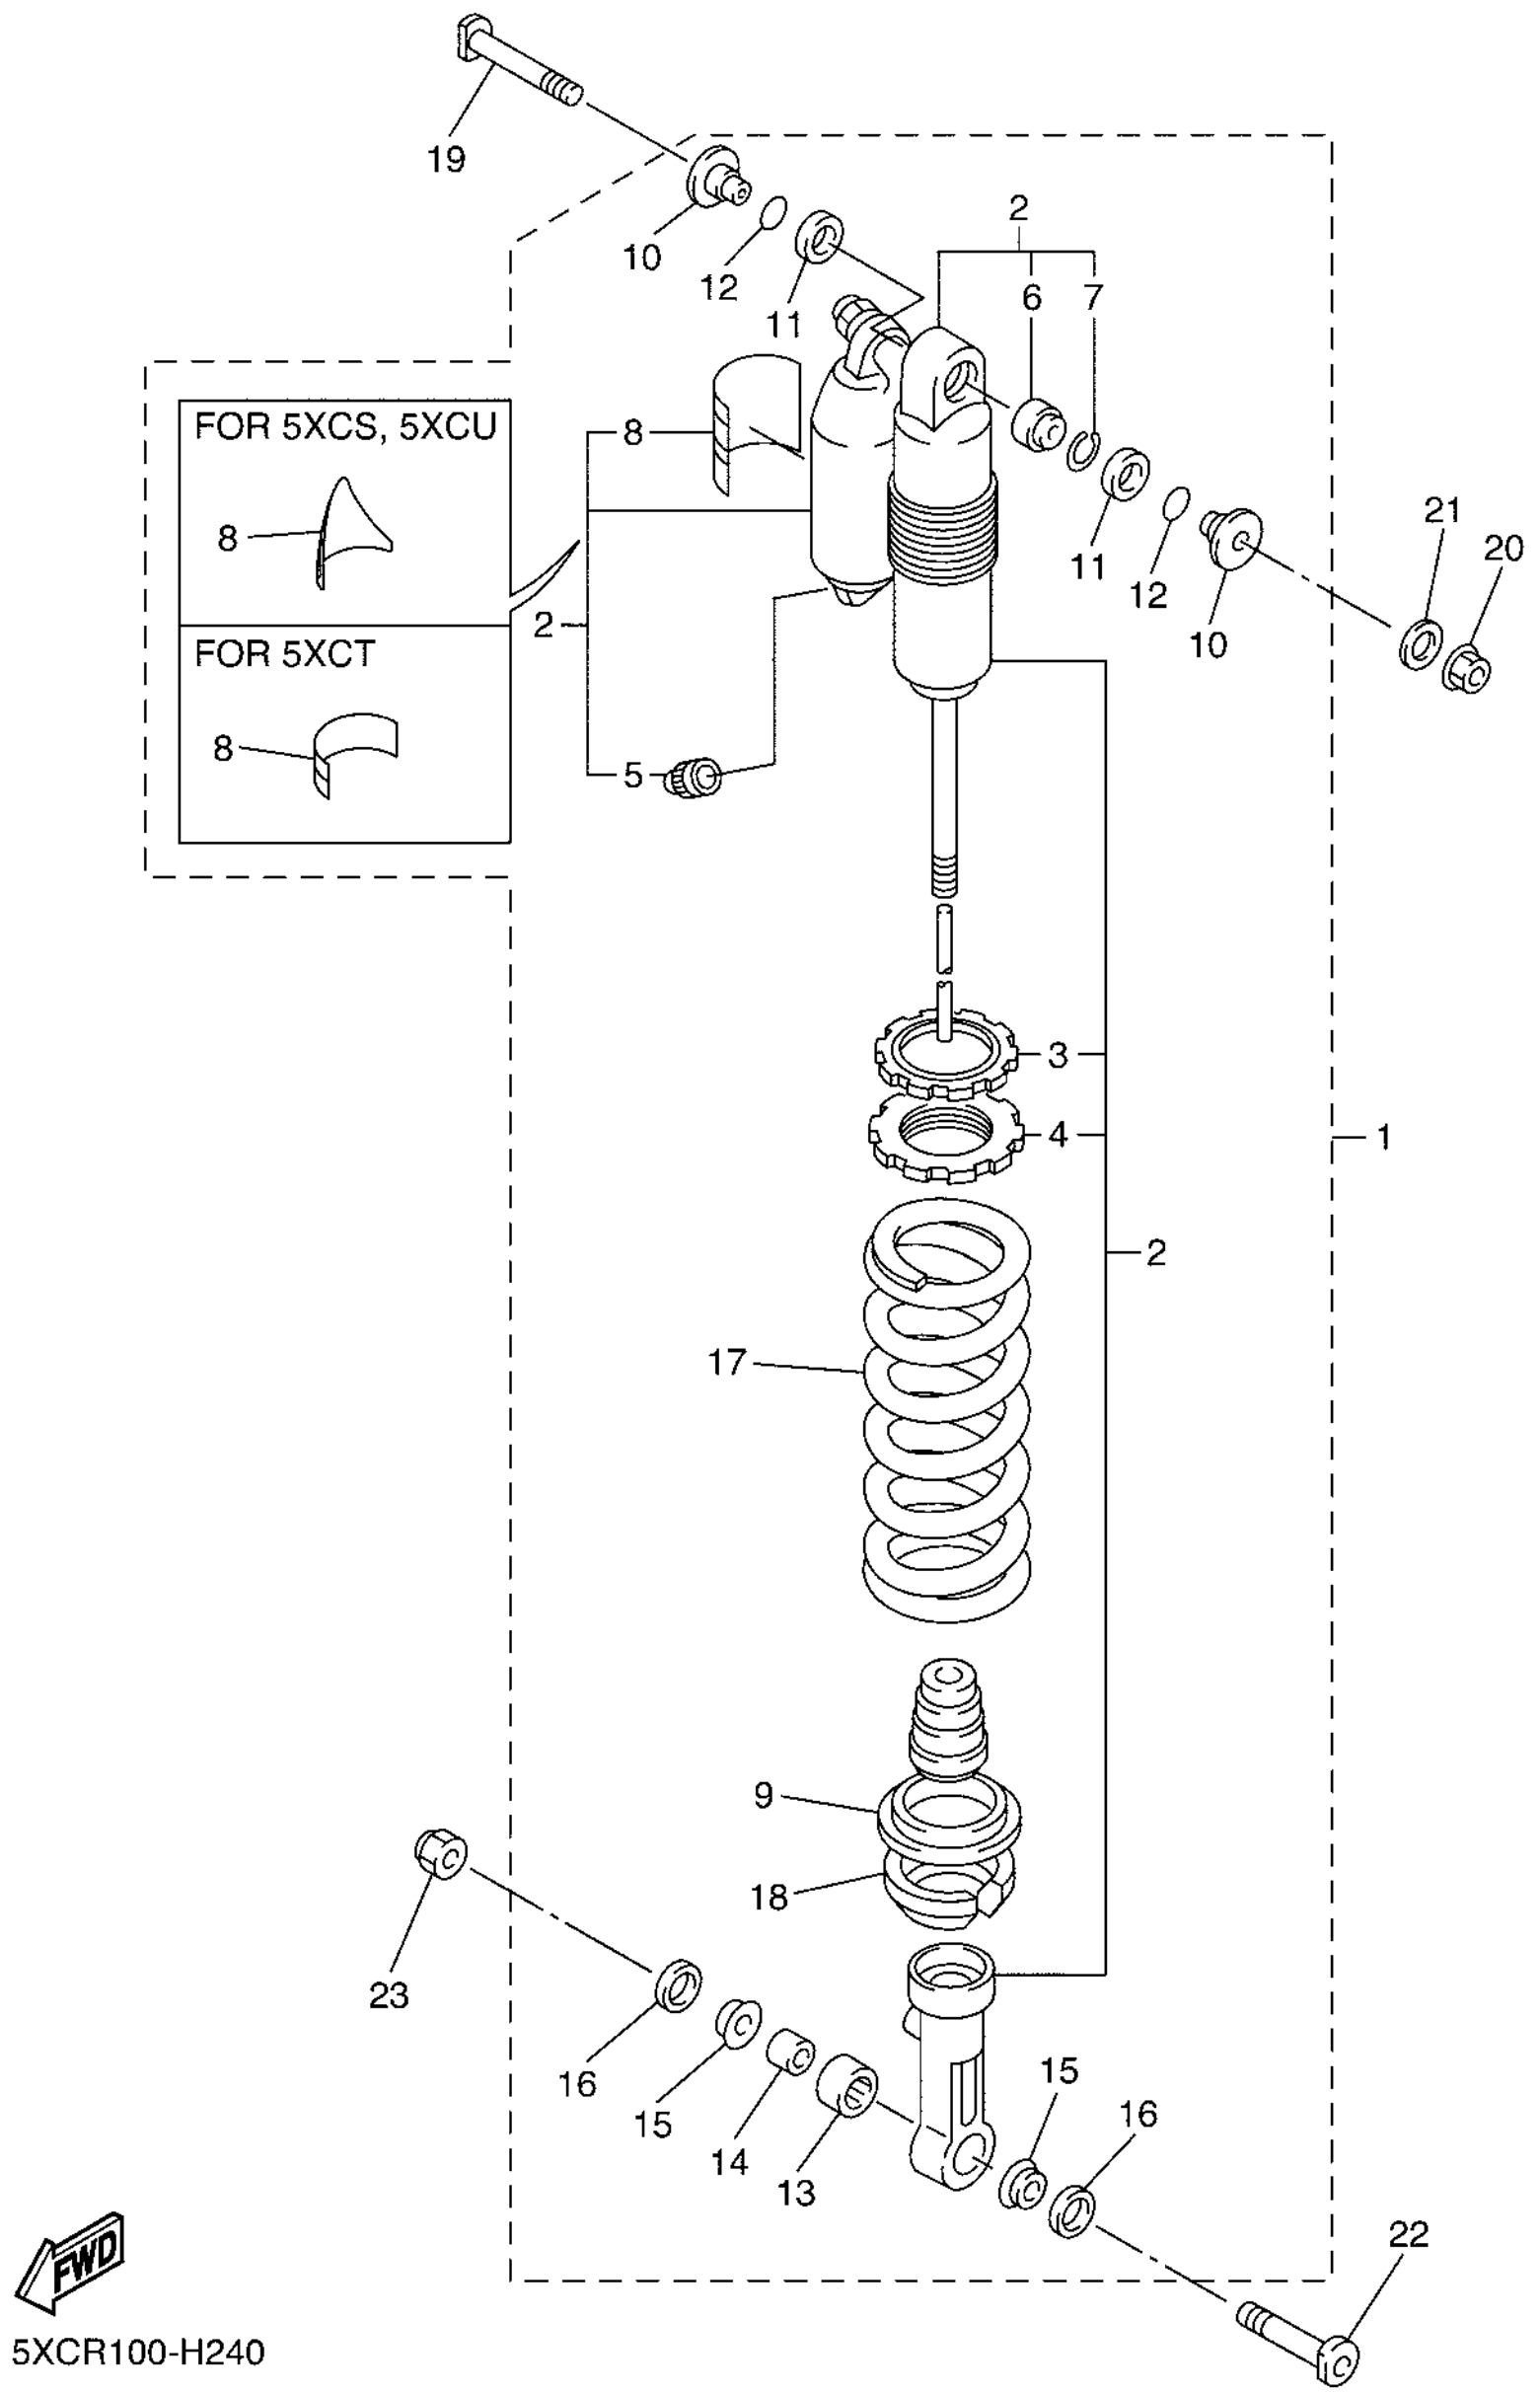


FIG. 24 REAR SUSPENSION

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
16	5NY–22475–00	.SEAL, DUST	2	2	2	2		
17	5UN–22212–50	.SPRING (K=52N/MM)	1	1	1	1		UR FOR DPBSE
	5UN–22212–K0	.SPRING (K=52N/MM)	1	1	1	1		UR FOR PWS1
18	1C3–22214–50	.GUIDE, SPRING 1	1	1	1	1		
19	5XE–22242–00	BOLT 2	1	1	1	1		
20	95602–10200	NUT, U FLANGE	1	1	1	1		
21	92902–10200	WASHER	1	1	1	1		
22	5NY–22241–00	BOLT 1	1	1	1	1		
23	90185–10012	NUT, SELF-LOCKING	1	1	1	1		


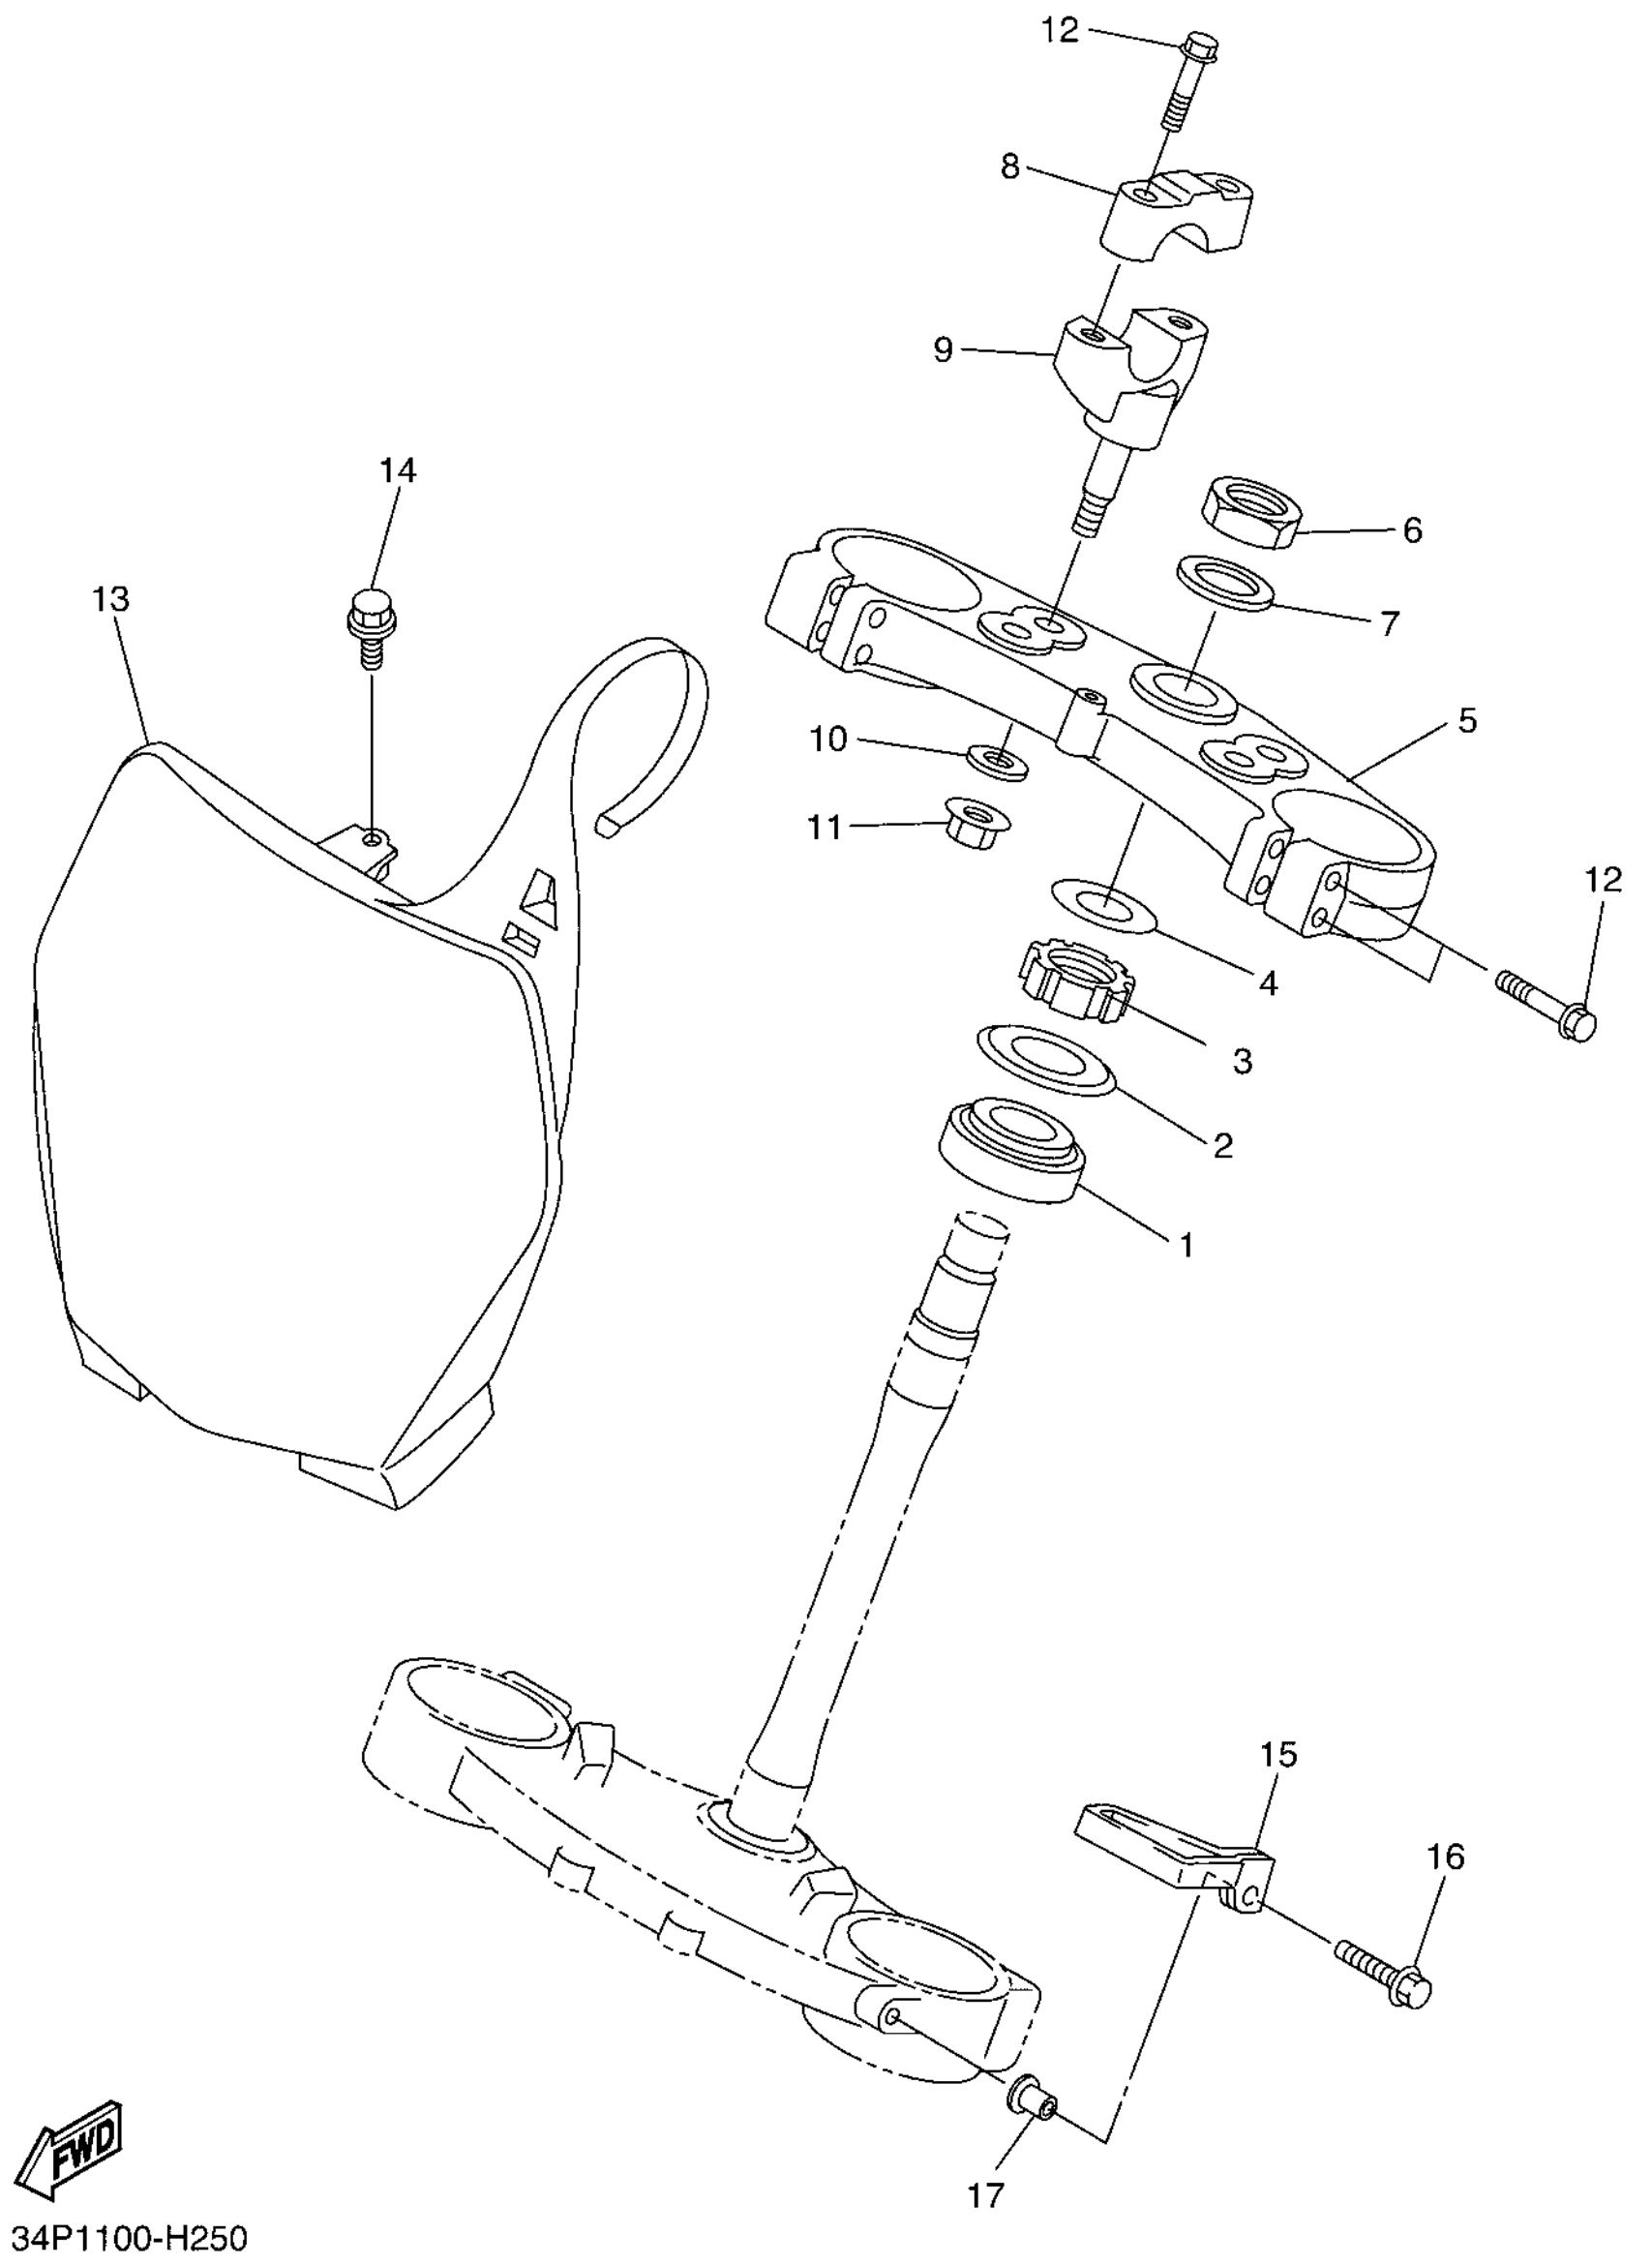


FIG. 25 STEERING


REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	93332–00068	BEARING	1	1	1	1		
2	4EW–23416–00	COVER, BALL RACE 2	1	1	1	1		
3	90179–28013	NUT	1	1	1	1		
4	90201–286K9	WASHER, PLATE (T1.0)	1	1	1	1		
5	17D–23435–00	CROWN, HANDLE	1	1	1	1		
6	90170–24003	NUT	1	1	1	1		
7	90201–24016	WASHER, PLATE	1	1	1	1		
8	5XC–23441–90	HOLDER, HANDLE UPPER	2	2	2	2		
9	5UM–23442–E0	HOLDER, HANDLE LOWER	2	2	2	2		
10	92902–10200	WASHER	2	2	2	2		
11	95602–10200	NUT, U FLANGE	2	2	2	2		
12	90105–08154	BOLT, FLANGE	8	8	8	8		
13	1C3–23485–61	PLATE, NUMBER	1	1	1	1		
14	90119–06151	BOLT, WITH WASHER	1	1	1	1		
15	5XE–23389–00	GUIDE, CABLE	1	1	1	1		
16	90105–06107	BOLT, FLANGE	1	1	1	1		
17	90387–06104	COLLAR	1	1	1	1		

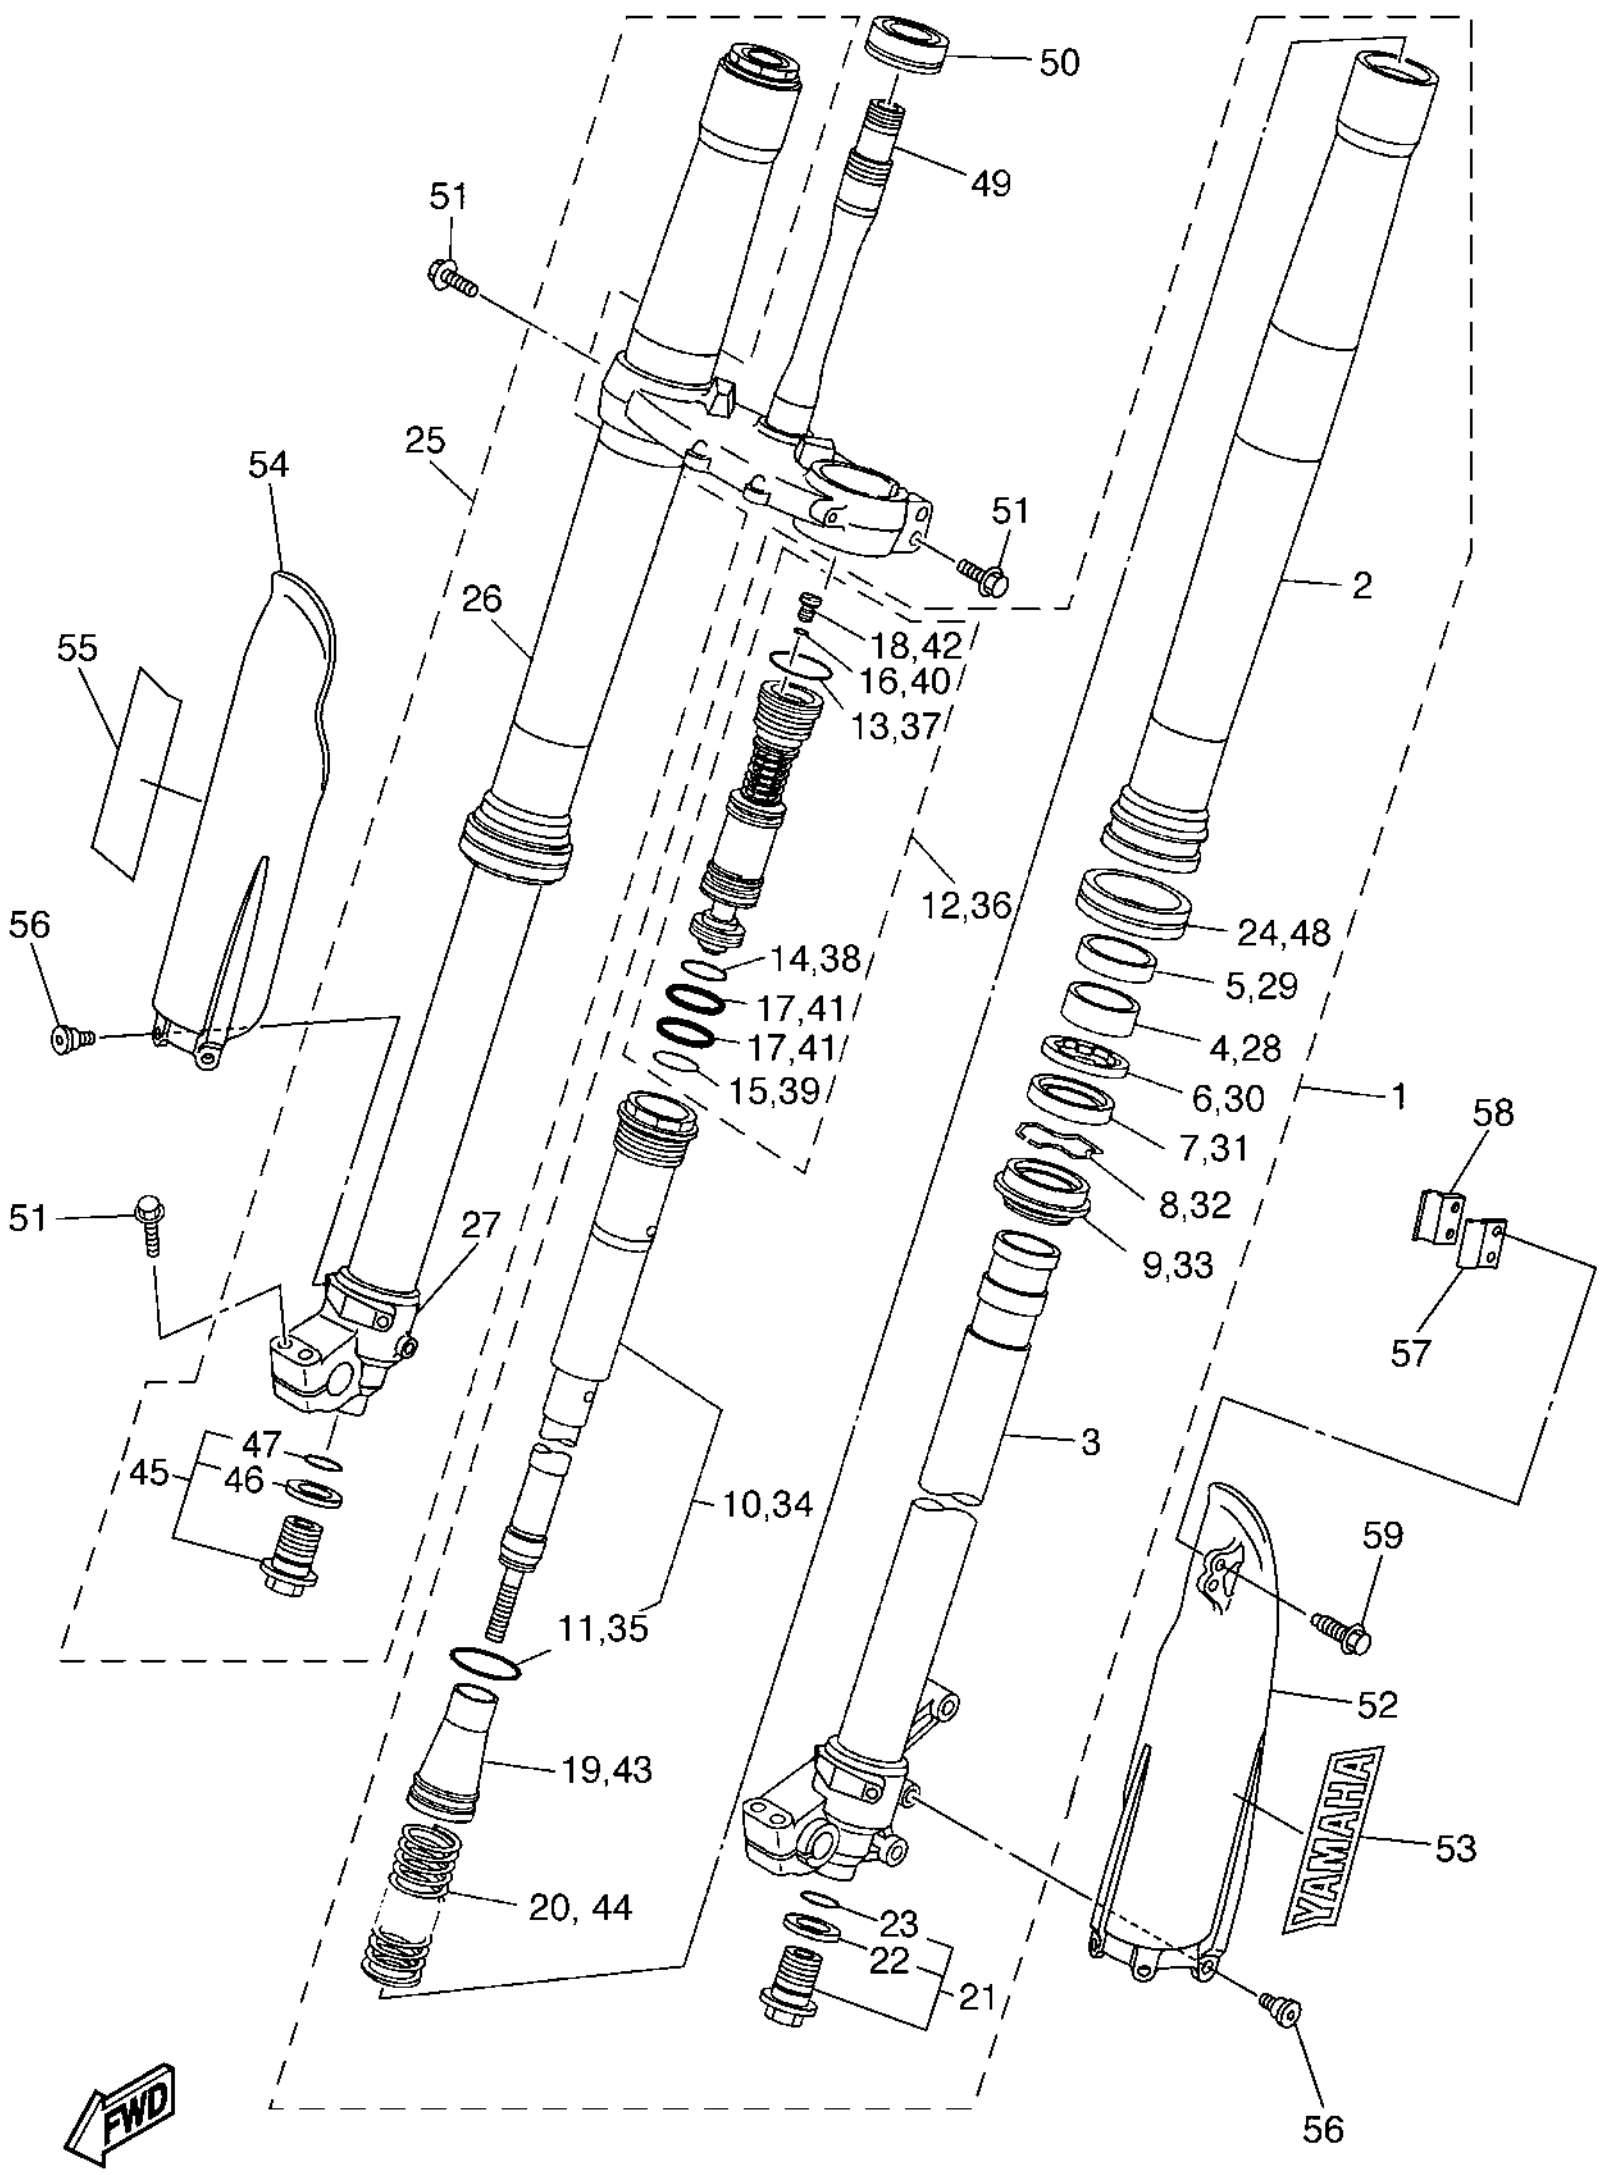

34P1100-H260

FIG. 26 FRONT FORK


REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5XC–23102–R0	FRONT FORK ASSY (L.H)	1		1			
	5XC–23102–S0	FRONT FORK ASSY (L.H)		1		1		
2	5XC–23136–00	.TUBE, OUTER (RIGHT)	1	1	1	1		
3	5XC–23120–N0	.INNER TUBE COMP.2	1	1	1	1		
4	5XE–23171–L0	.PISTON, FRONT FORK	1	1	1	1		
5	5XE–23125–L0	.METAL, SLIDE 1	1	1	1	1		
6	5XC–23146–10	.WASHER, OIL SEAL	1	1	1	1		
7	1C3–23145–M0	.OIL SEAL	1	1	1	1		
8	5XE–23153–L0	.RING, SNAP	1	1	1	1		
9	5XE–23144–L0	.SEAL, DUST	1	1	1	1		
10	5XC–23170–R0	.CYLINDER COMP., FRONT FORK	1		1			
	5XC–23170–S0	.CYLINDER COMP., FRONT FORK		1		1		
11	1C3–23147–L0	..O-RING	1	1	1	1		
12	5XC–2316A–V0	.VALVE COMP.	1		1			
	5XC–2316A–W0	.VALVE COMP.		1		1		
13	1C3–23188–L0	..O-RING	1	1	1	1		
14	1C3–23188–N0	..O-RING	1	1	1	1		
15	1C3–23188–P0	..O-RING	1	1	1	1		
16	1C3–23188–R0	..O-RING	1	1	1	1		
17	1AE–23147–00	..O-RING	2	2	2	2		
18	1C3–23190–L0	..AIR VALVE COMP.	1	1	1	1		
19	1C3–23142–L0	.SEAT, SPRING UPPER	1	1	1	1		
20	5XC–23141–N0	.SPRING, FRONT FORK(K=4.4N/MM)	1		1			
	2S2–23141–M1	.SPRING, FRONT FORK(K=4.5N/MM)		1		1		
21	5XC–23111–00	.BOLT, CAP	1	1	1	1		
22	2HH–23158–L0	..GASKET	1	1	1	1		
23	276–23114–00	..GASKET	1	1	1	1		

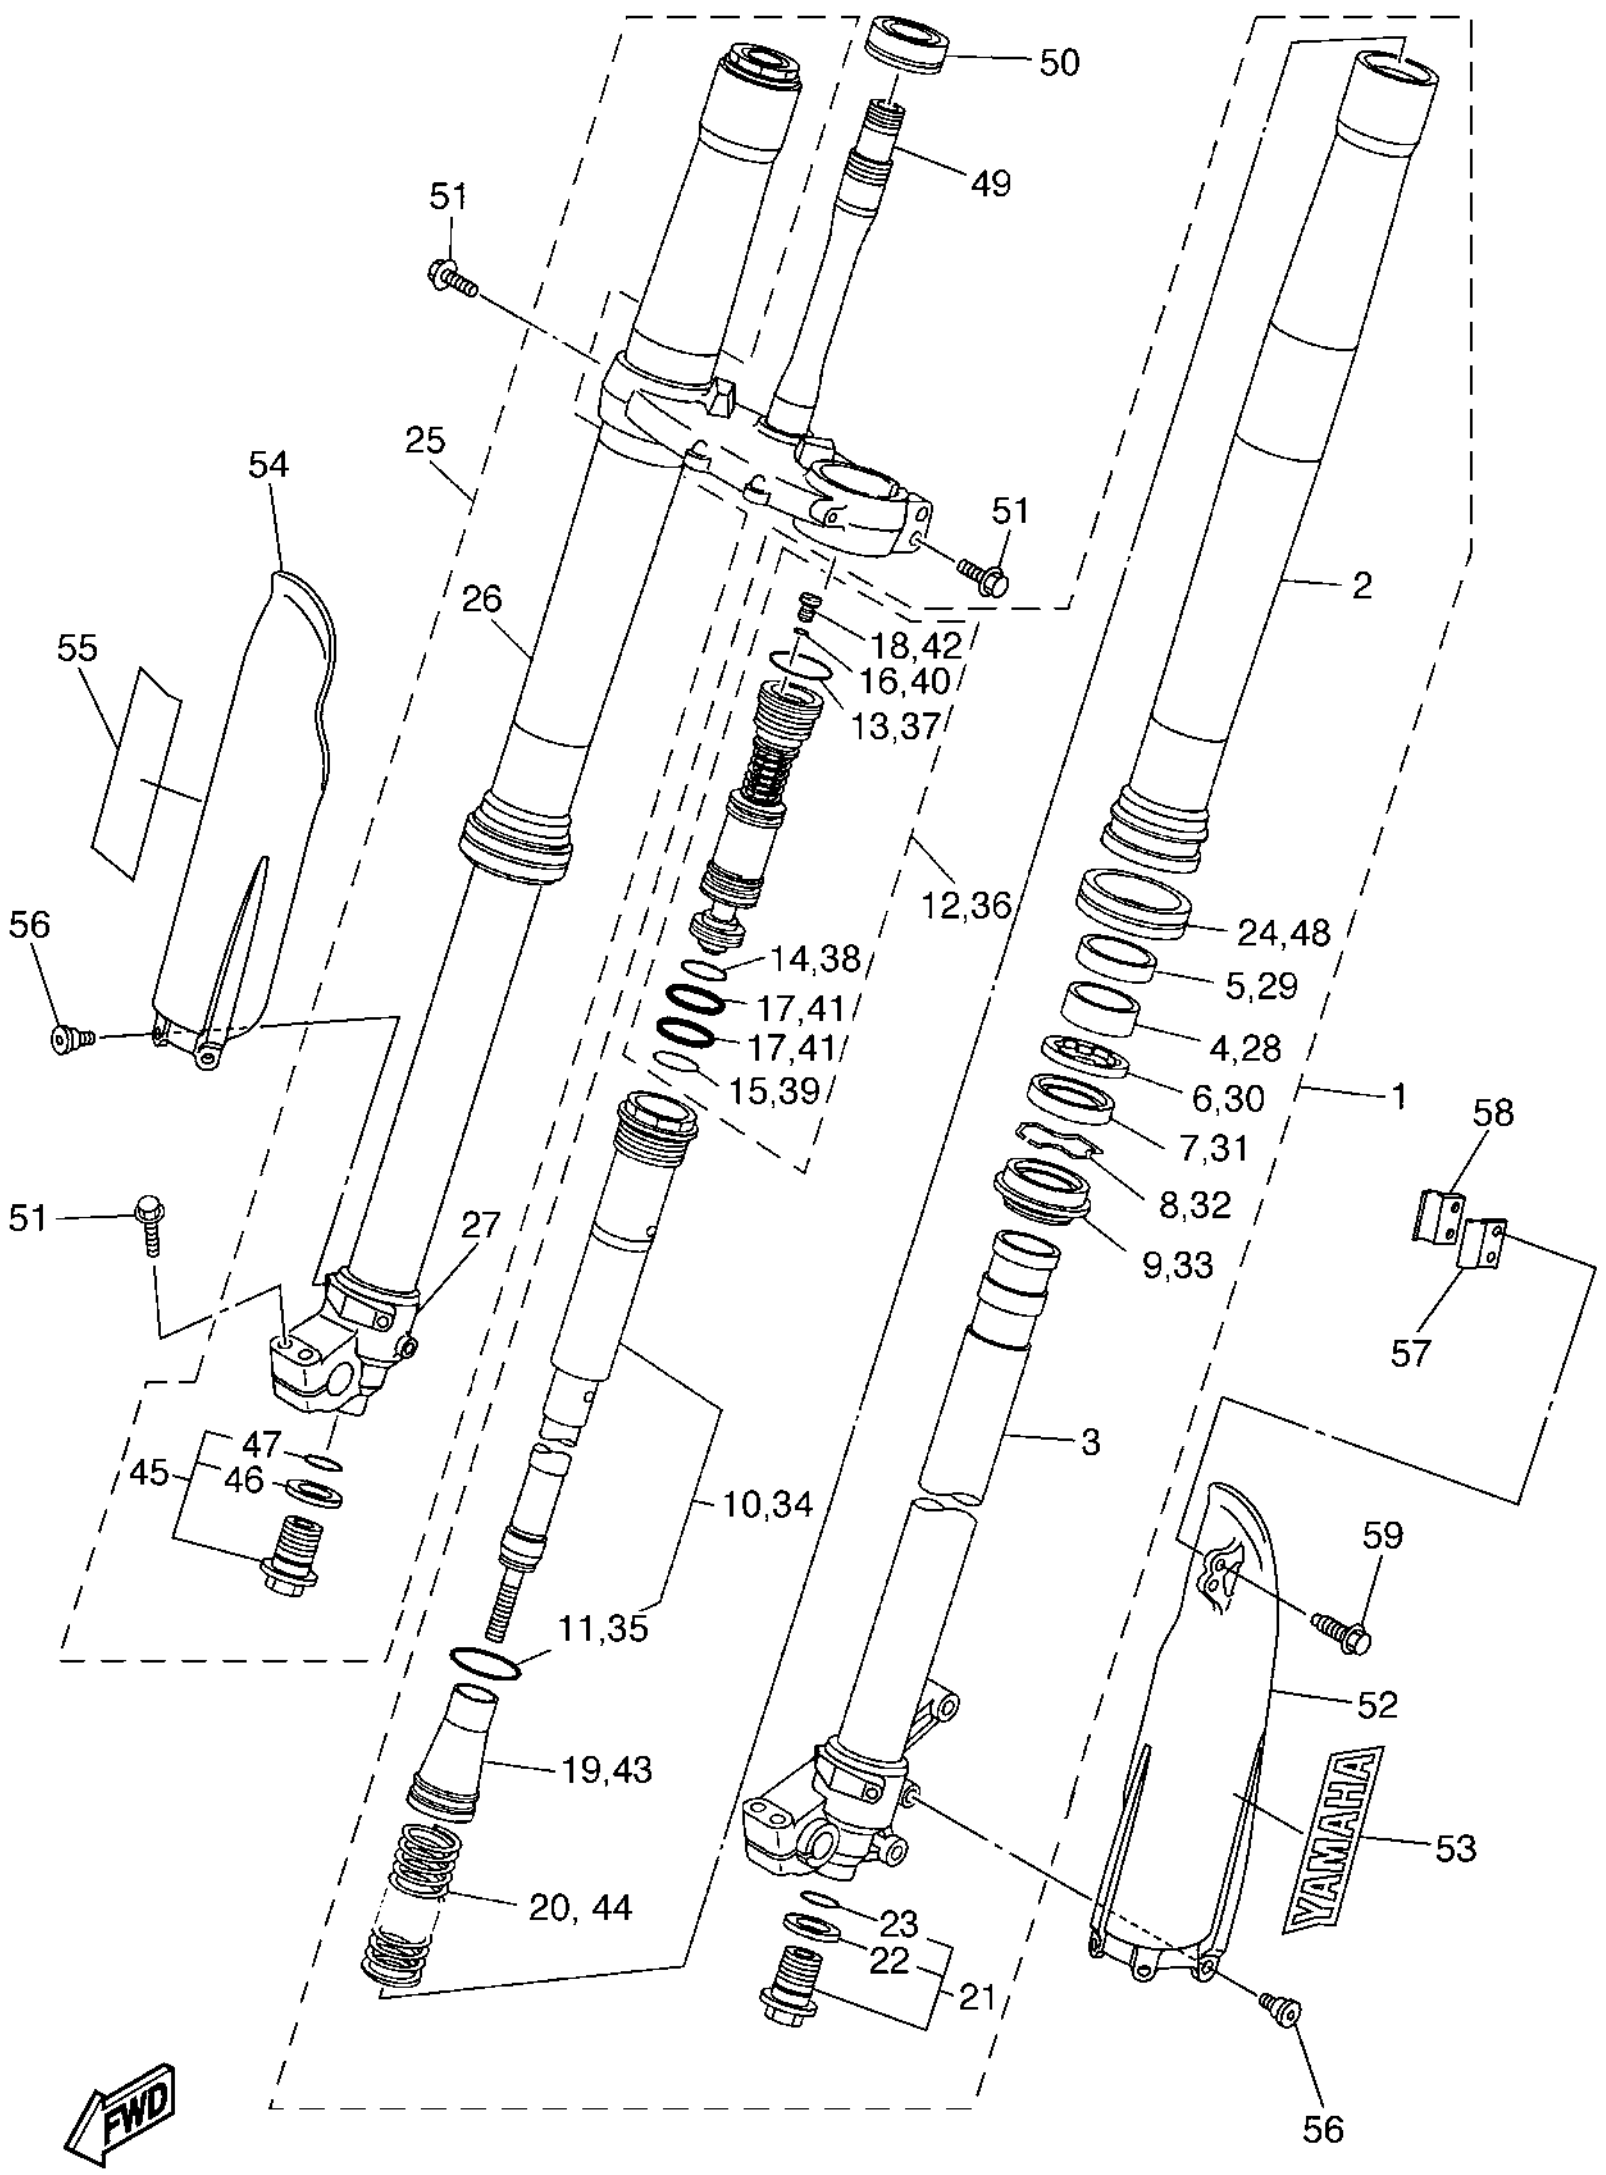

34P1100-H260

FIG. 26 FRONT FORK

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
24	5XC–2314F–00	.PROTECTER GUIDE COMP., 1	1	1	1	1		
25	5XC–23103–R0	FRONT FORK ASSY (R.H)	1		1			
	5XC–23103–S0	FRONT FORK ASSY (R.H)		1		1		
26	5XC–23136–00	.TUBE, OUTER (RIGHT)	1	1	1	1		
27	5XC–23110–N0	.INNER TUBE COMP.1	1	1	1	1		
28	5XE–23171–L0	.PISTON, FRONT FORK	1	1	1	1		
29	5XE–23125–L0	.METAL, SLIDE 1	1	1	1	1		
30	5XC–23146–10	.WASHER, OIL SEAL	1	1	1	1		
31	1C3–23145–M0	.OIL SEAL	1	1	1	1		
32	5XE–23153–L0	.RING, SNAP	1	1	1	1		
33	5XE–23144–L0	.SEAL, DUST	1	1	1	1		
34	5XC–23170–R0	.CYLINDER COMP., FRONT FORK	1		1			
	5XC–23170–S0	.CYLINDER COMP., FRONT FORK		1		1		
35	1C3–23147–L0	..O-RING	1	1	1	1		
36	5XC–2316A–V0	.VALVE COMP.	1		1			
	5XC–2316A–W0	.VALVE COMP.		1		1		
37	1C3–23188–L0	..O-RING	1	1	1	1		
38	1C3–23188–N0	..O-RING	1	1	1	1		
39	1C3–23188–P0	..O-RING	1	1	1	1		
40	1C3–23188–R0	..O-RING	1	1	1	1		
41	1AE–23147–00	..O-RING	2	2	2	2		
42	1C3–23190–L0	..AIR VALVE COMP.	1	1	1	1		
43	1C3–23142–L0	.SEAT, SPRING UPPER	1	1	1	1		
44	5XC–23141–N0	.SPRING, FRONT FORK(K=4.4N/MM)	1		1			
	2S2–23141–M1	.SPRING, FRONT FORK(K=4.5N/MM)		1		1		
45	5XC–23111–00	.BOLT, CAP	1	1	1	1		
46	2HH–23158–L0	..GASKET	1	1	1	1		

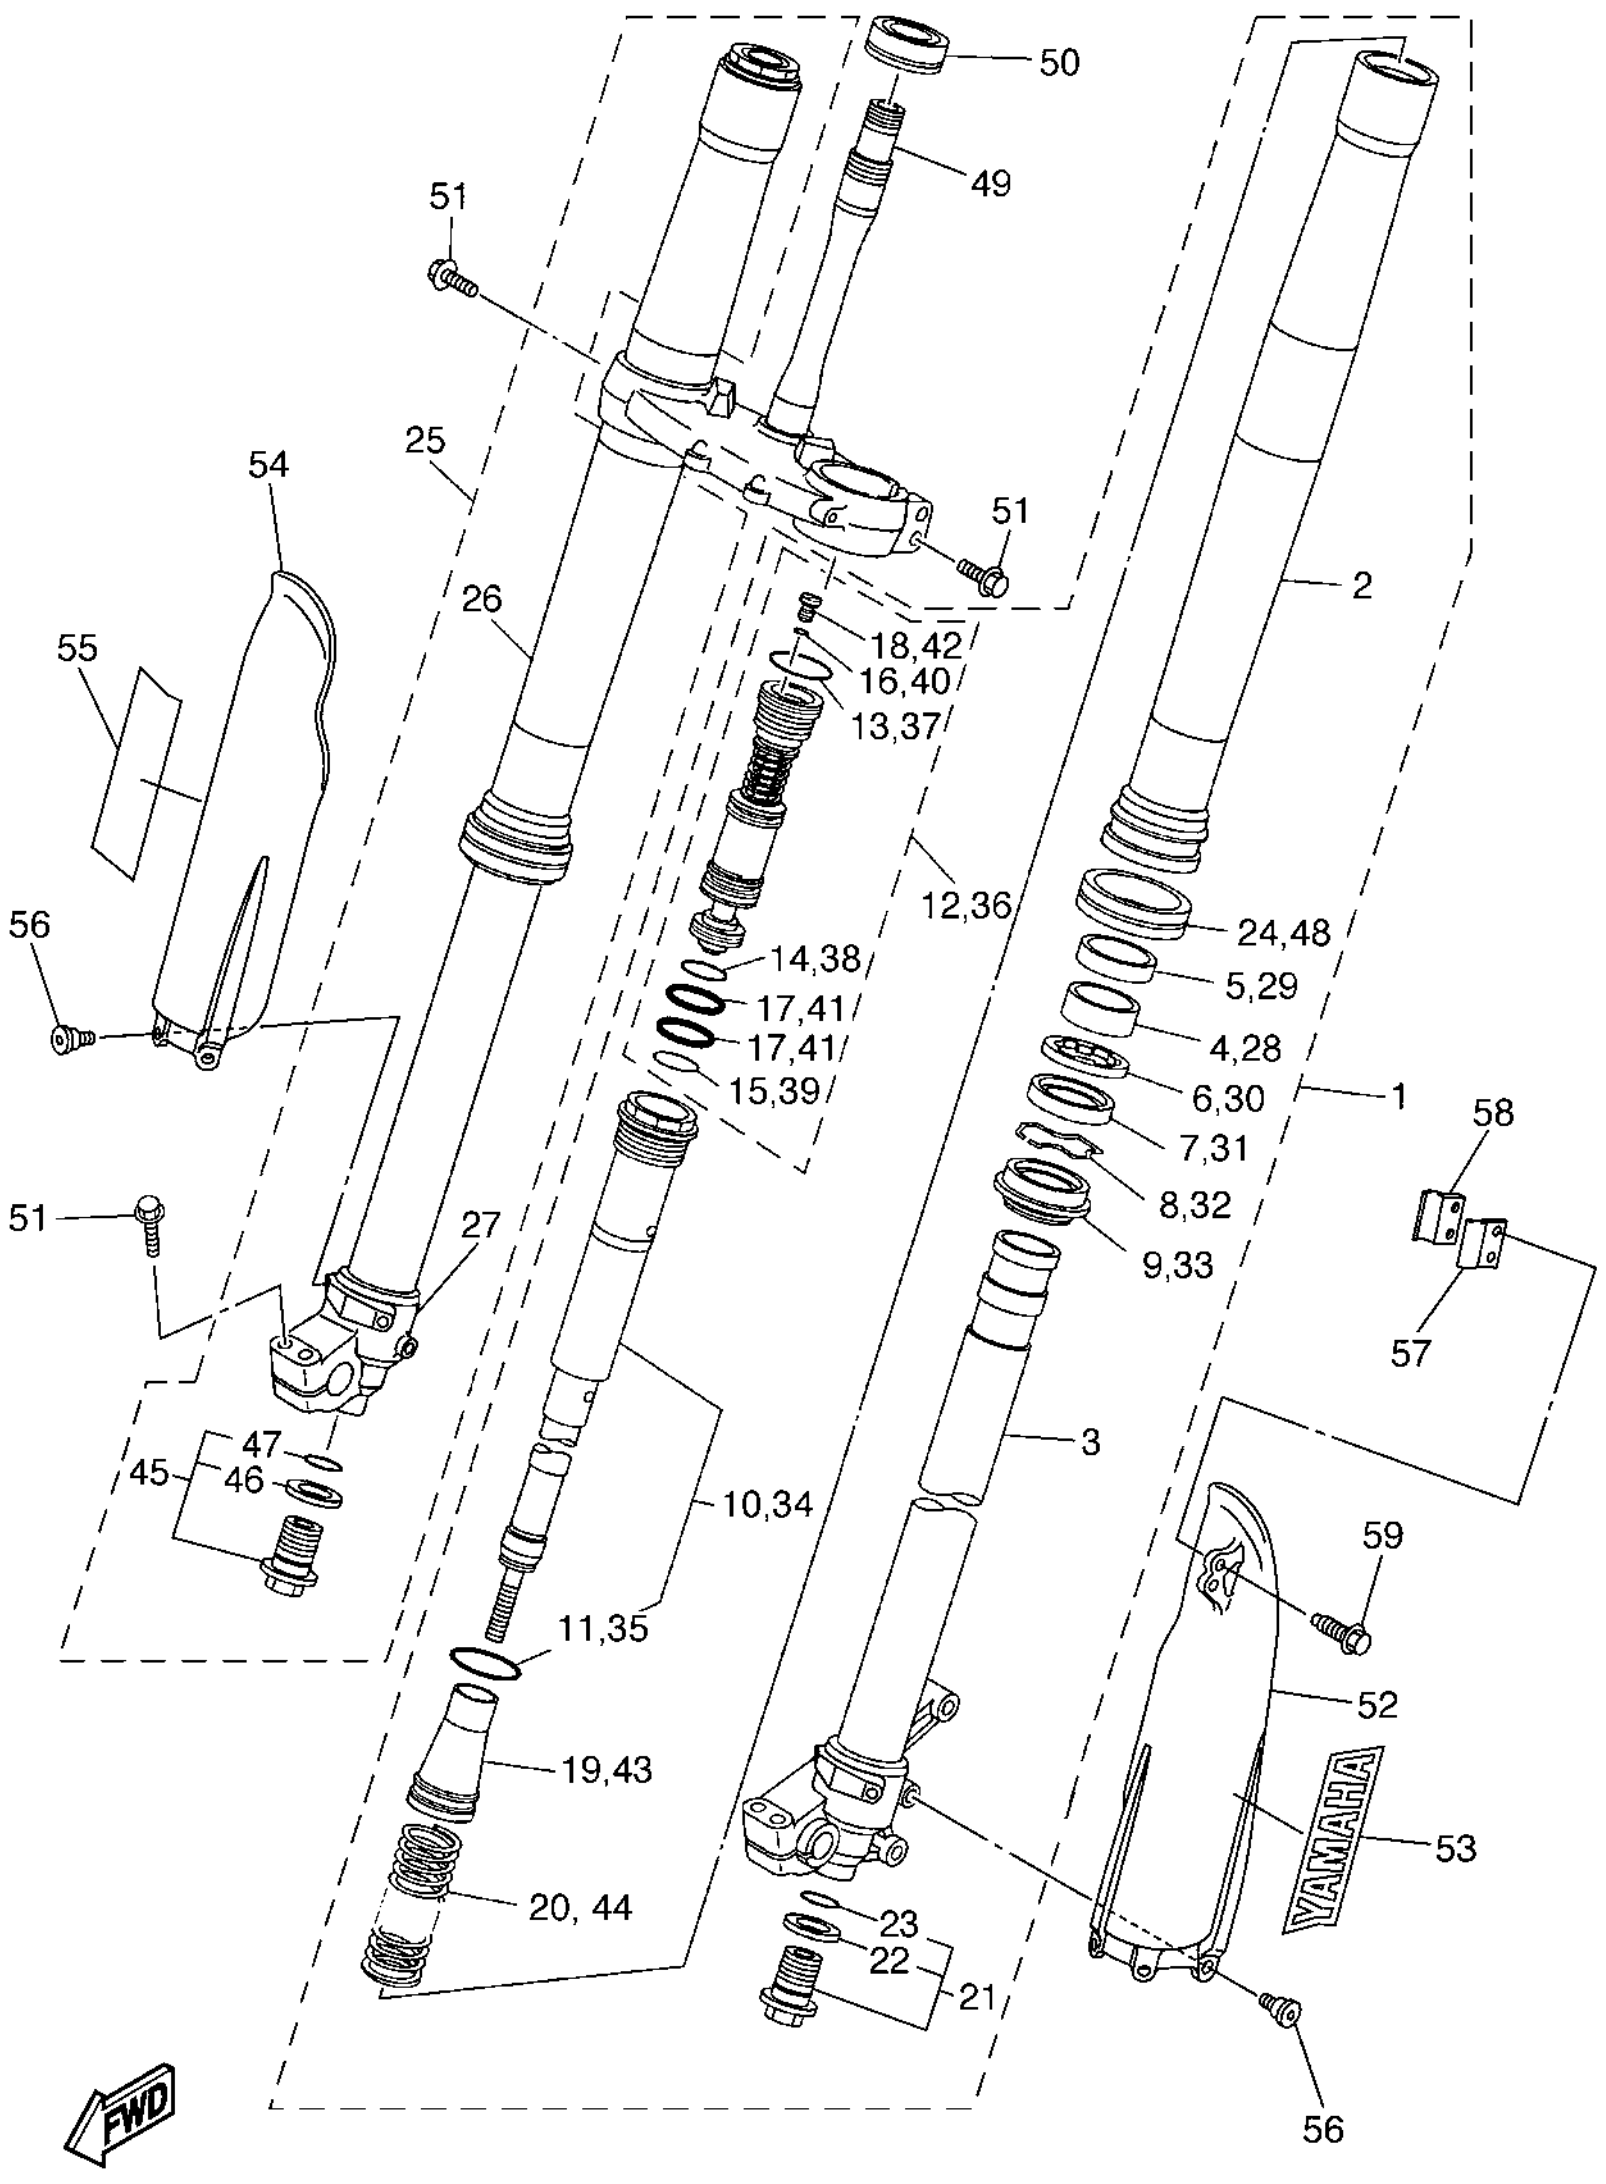

34P1100-H260

FIG. 26 FRONT FORK

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
47	276–23114–00	..GASKET	1	1	1	1		
48	5XC–2314F–00	.PROTECTER GUIDE COMP., 1	1	1	1	1		
49	5XC–23340–P0	UNDER BRACKET COMP.	1	1	1	1		
50	93332–00081	BEARING	1	1	1	1		
51	90105–08154	BOLT, FLANGE	8	8	8	8		
52	5XC–2315H–00	PROTECTOR 1	1	1	1	1		
53	4XL–2153A–10	EMBLEM, YAMAHA	1	1	1	1		
54	5XC–2315J–00	PROTECTOR 2	1	1	1	1		
55	4XL–2153A–10	EMBLEM, YAMAHA	1	1	1	1		
56	90109–06232	BOLT	6	6	6	6		
57	17D–23466–00	CLAMP	1	1	1	1		
58	17D–23467–00	CLAMP	1	1	1	1		
59	90105–06178	BOLT, FLANGE	2	2	2	2		


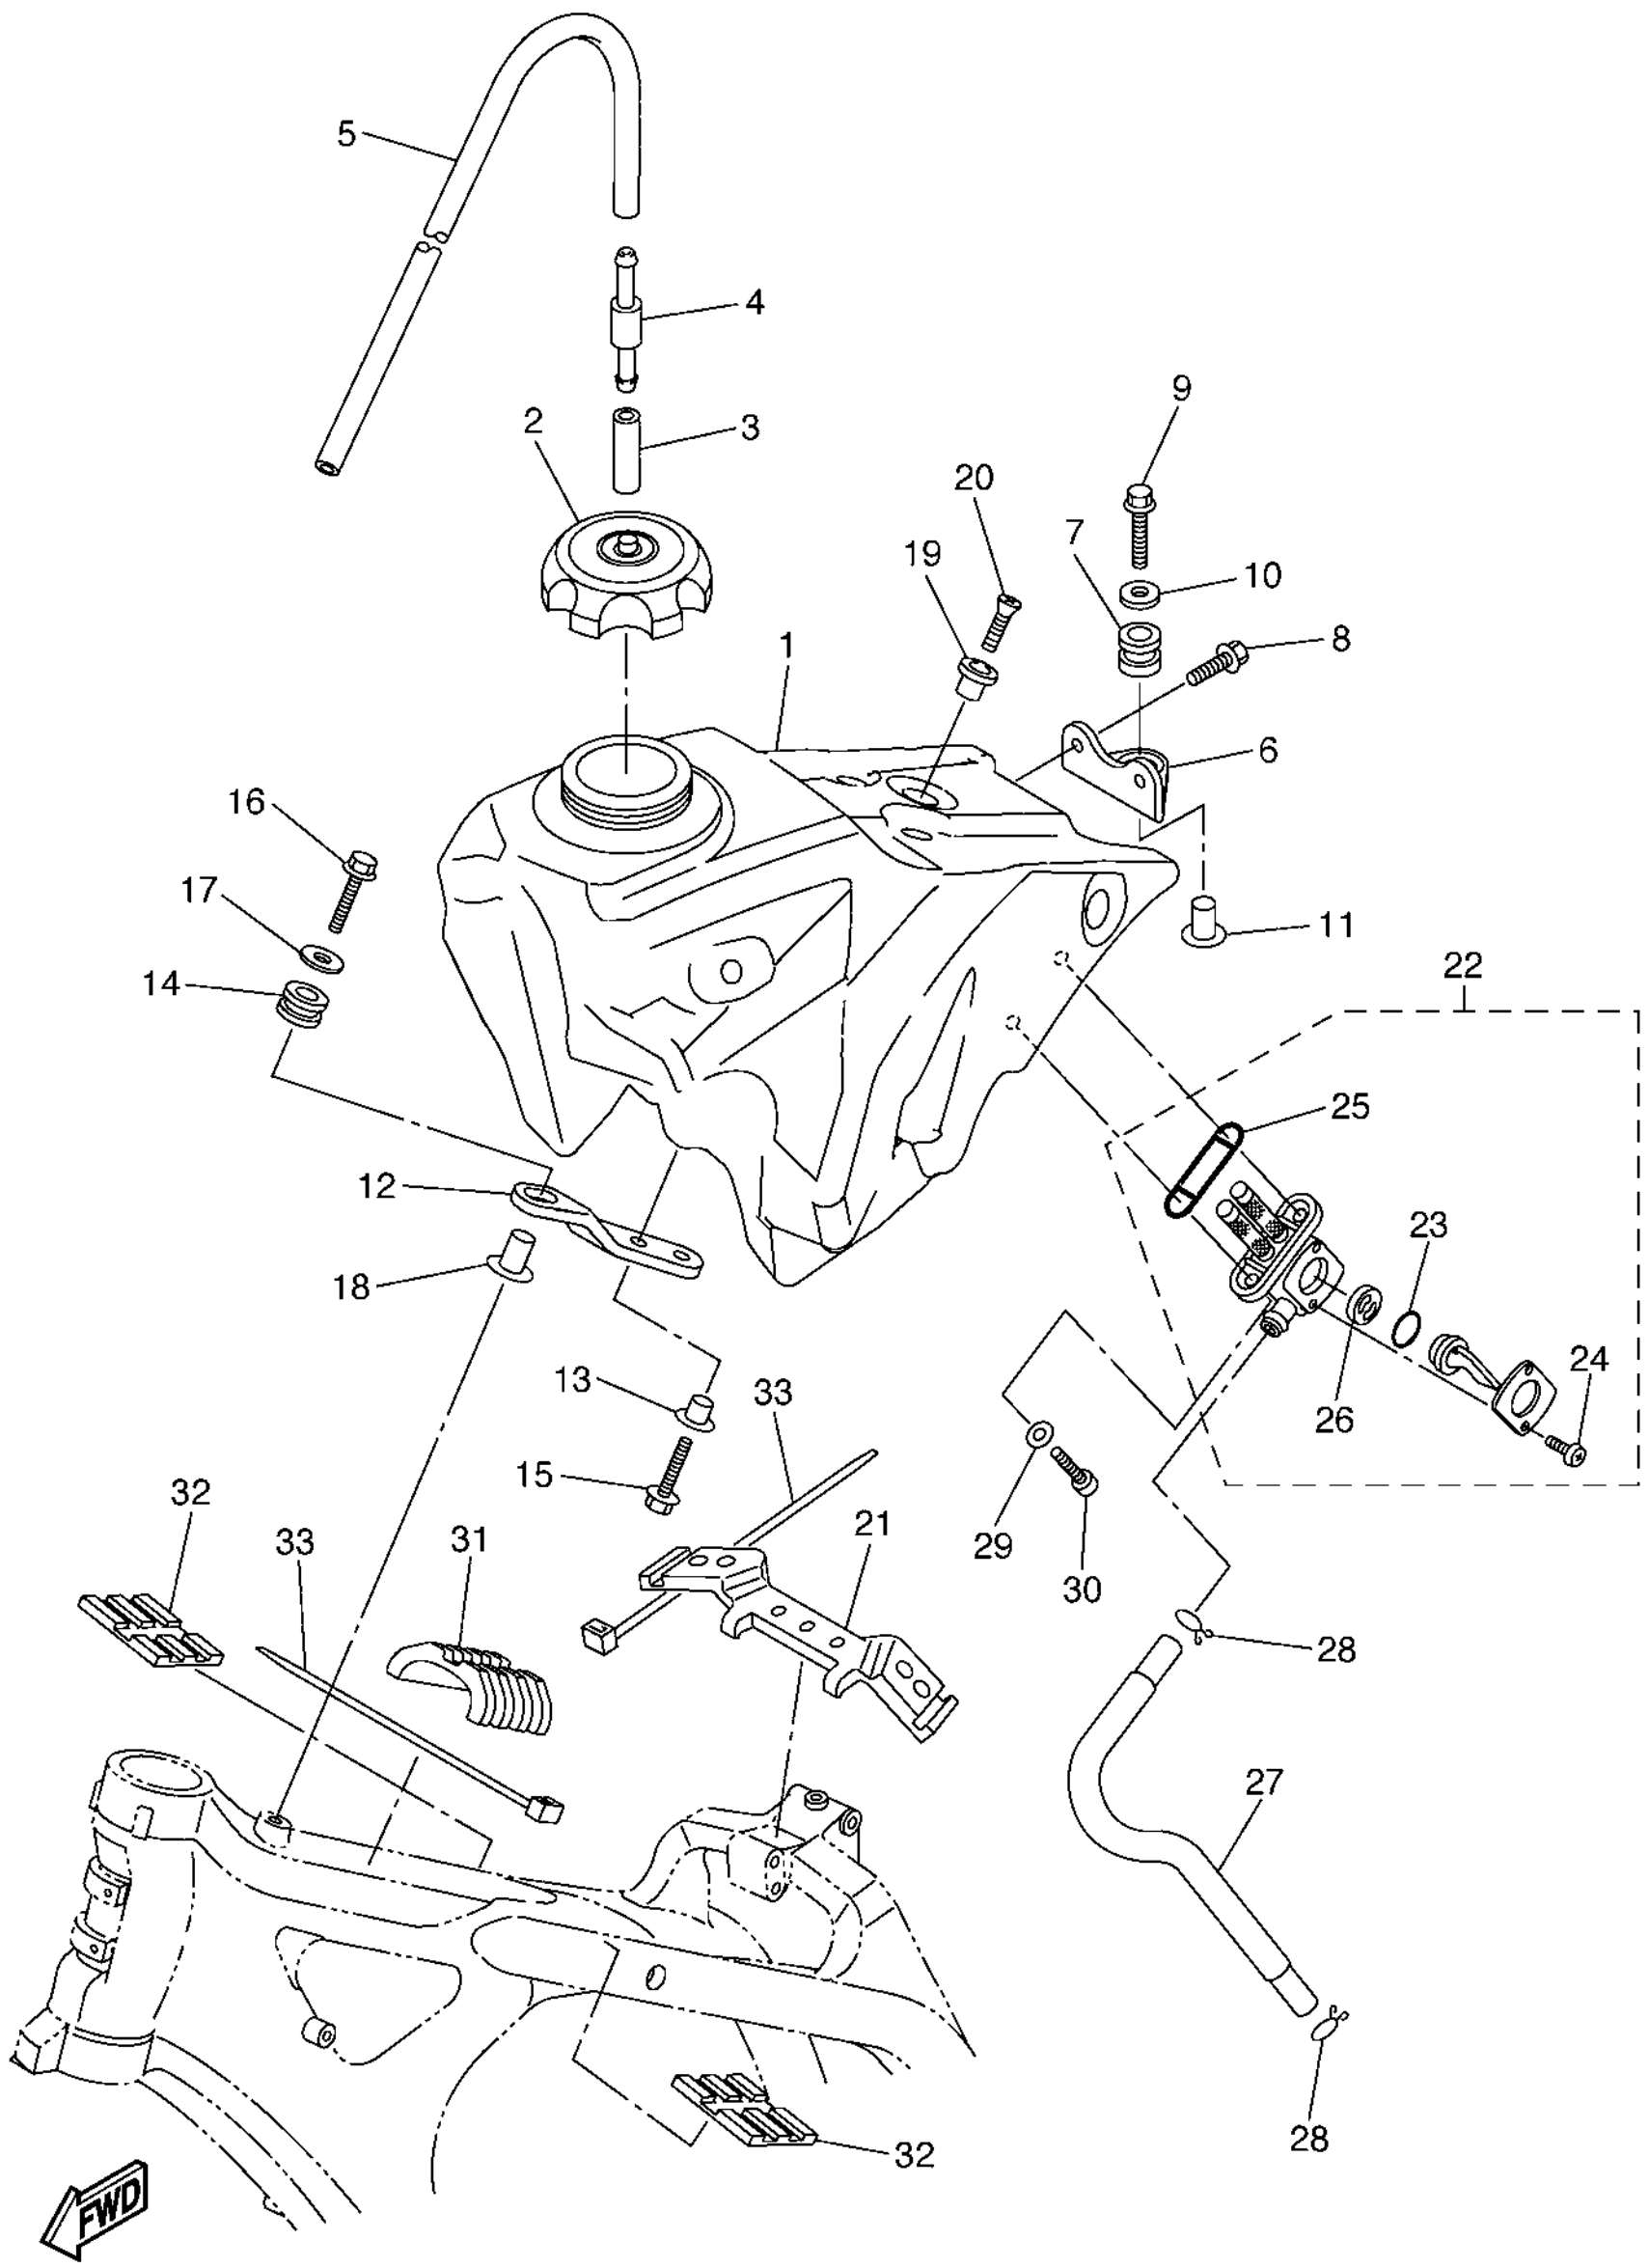


FIG. 27 FUEL TANK


REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	2S2–24110–70	FUEL TANK COMP.	1	1	1	1		
2	5NY–24610–00	CAP ASSY	1	1	1	1		
3	90445–09220	HOSE (L30)	1	1	1	1		
4	3XJ–24380–00	PIPE JOINT ASSY	1	1	1	1		
5	90445–09251	HOSE (L350)	1	1	1	1		
6	5XE–24144–00	HOLDER, DAMPER	1	1	1	1		
7	90480–18549	GROMMET	1	1	1	1		
8	90105–06107	BOLT, FLANGE	2	2	2	2		
9	90105–06111	BOLT, FLANGE	1	1	1	1		
10	90201–06570	WASHER, PLATE	1	1	1	1		
11	3JD–24186–00	WASHER, SPECIAL	1	1	1	1		
12	5UM–2419A–E0	HOLDER	1	1	1	1		
13	90387–06090	COLLAR	2	2	2	2		
14	5XC–24339–90	GROMMET	1	1	1	1		
15	90105–06107	BOLT, FLANGE	2	2	2	2		
16	90105–06111	BOLT, FLANGE	1	1	1	1		
17	90201–06570	WASHER, PLATE	1	1	1	1		
18	90387–06065	COLLAR	1	1	1	1		
19	4EW–2412F–00	BRACKET, SEAT	1	1	1	1		
20	98702–06025	SCREW, FLAT HEAD	1	1	1	1		
21	5XC–24181–90	DAMPER, LOCATING 1	1	1	1	1		
22	4JT–24500–10	FUEL COCK ASSY 1	1	1	1	1		
23	3AJ–24534–01	.SEAL, COCK	1	1	1	1		
24	98502–03008	.SCREW, PAN HEAD	2	2	2	2		
25	4X8–24512–00	.O-RING	1	1	1	1		
26	3AC–24523–00	.VALVE PACKING	1	1	1	1		
27	5XC–24311–G0	PIPE, FUEL 1	1	1	1	1		

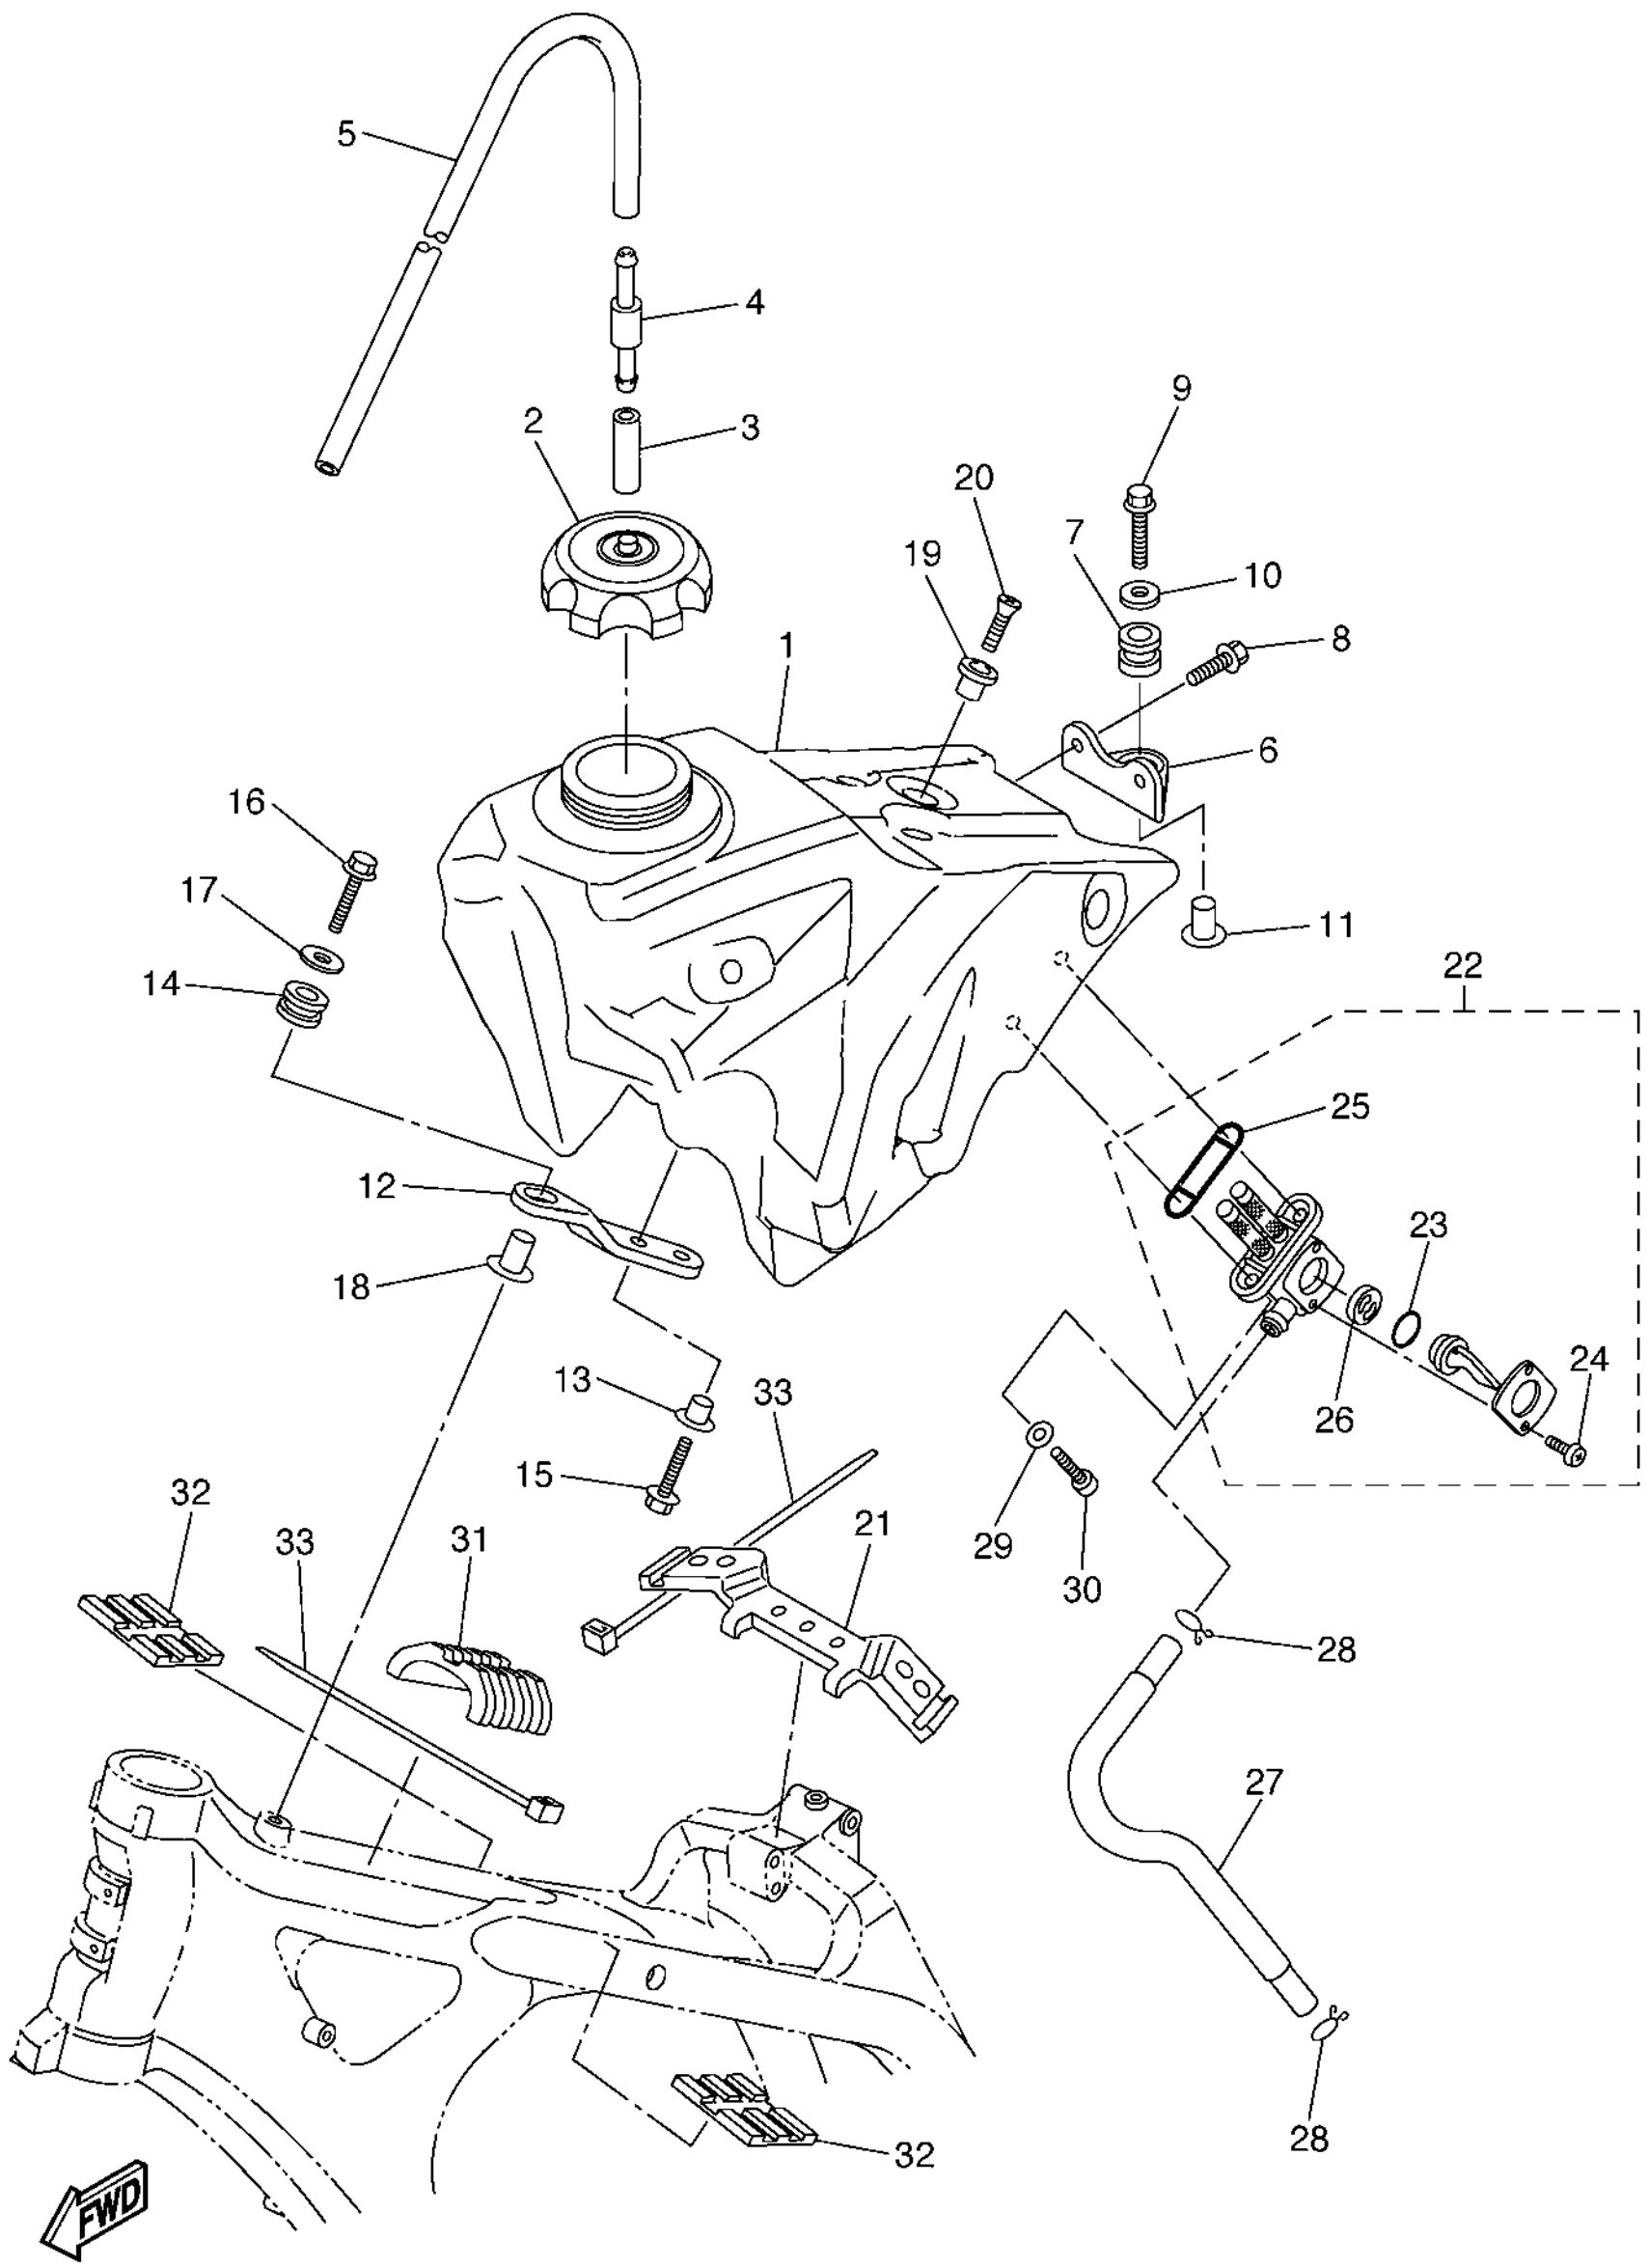

5XC9100-E260

FIG. 27 FUEL TANK


REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
28	90467–100A1	CLIP	2	2	2	2		
29	90202–05193	WASHER, PLATE	2	2	2	2		
30	90149–06108	SCREW	2	2	2	2		
31	5XC–24182–90	DAMPER, LOCATING 2	1	1	1	1		
32	5XC–24183–90	DAMPER, LOCATING 3	2	2	2	2		
33	90465–13275	CLAMP	3	3	3	3		

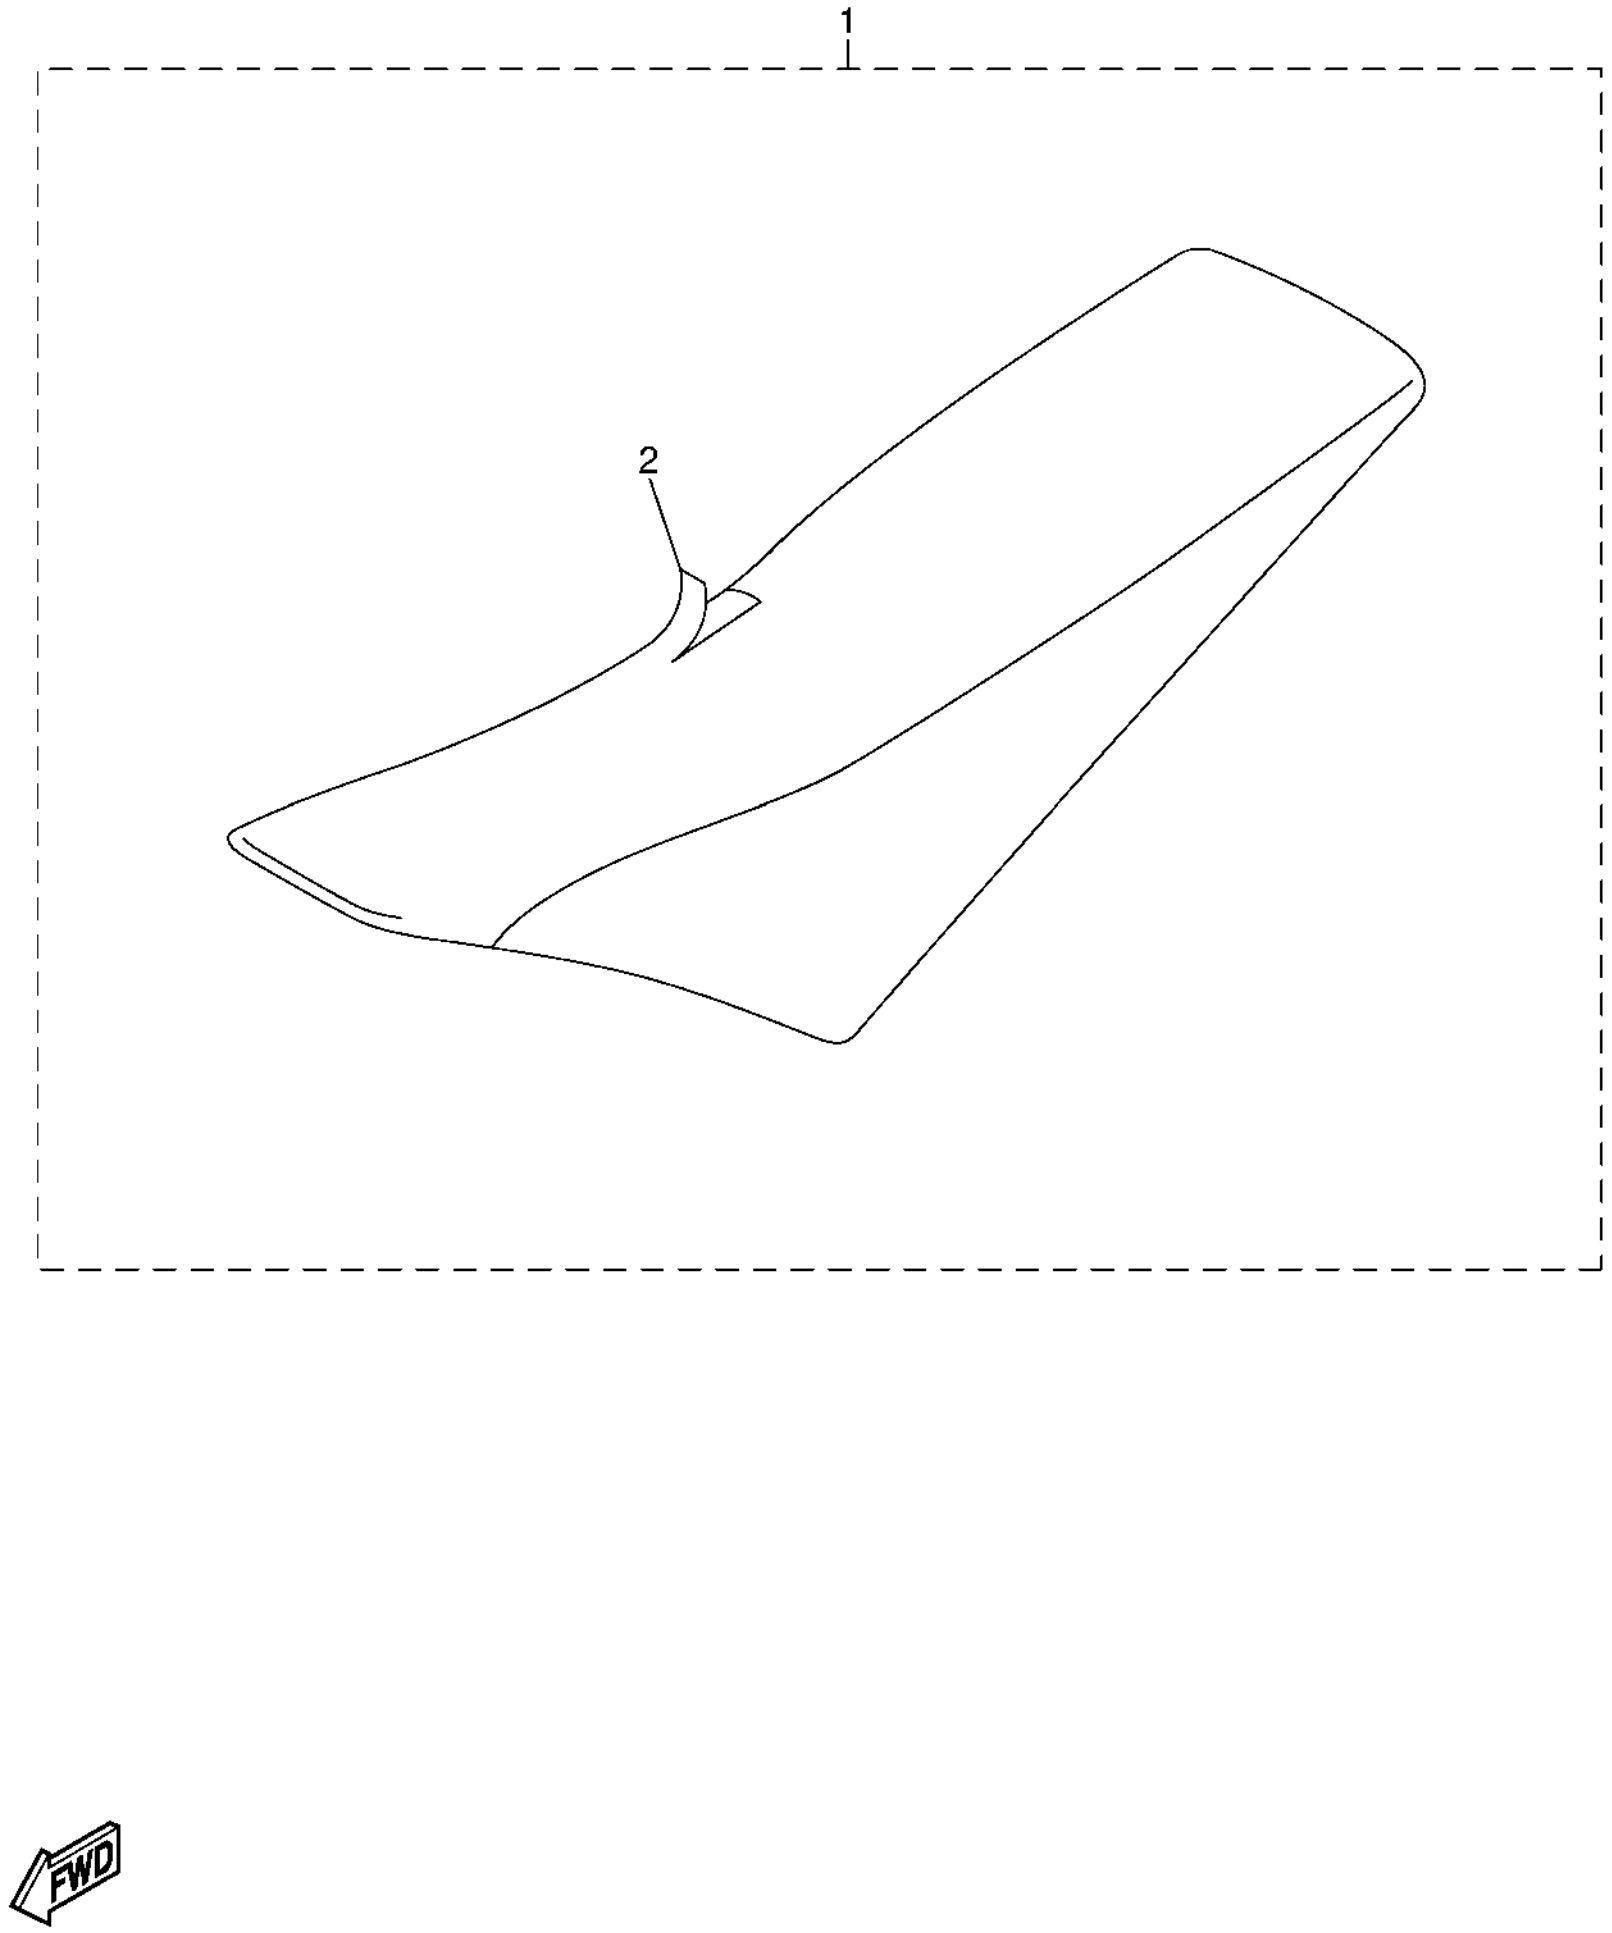

5XC9100-E270

FIG. 28 SEAT

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	34P–24710–00	SINGLE SEAT ASSY	1		1	1		UR FOR DPBSE
	34P–24710–20	SINGLE SEAT ASSY	1		1	1		UR FOR PWS1
	34P–24710–10	SINGLE SEAT ASSY		1				UR FOR DPBSE
	34P–24710–30	SINGLE SEAT ASSY		1				UR FOR PWS1
2	34P–2470F–00	.SEAT COVER COMP.	1		1	1		UR FOR DPBSE
	34P–2470F–20	.SEAT COVER COMP.	1		1	1		UR FOR PWS1
	34P–2470F–10	.SEAT COVER COMP.		1				UR FOR DPBSE
	34P–2470F–30	.SEAT COVER COMP.		1				UR FOR PWS1

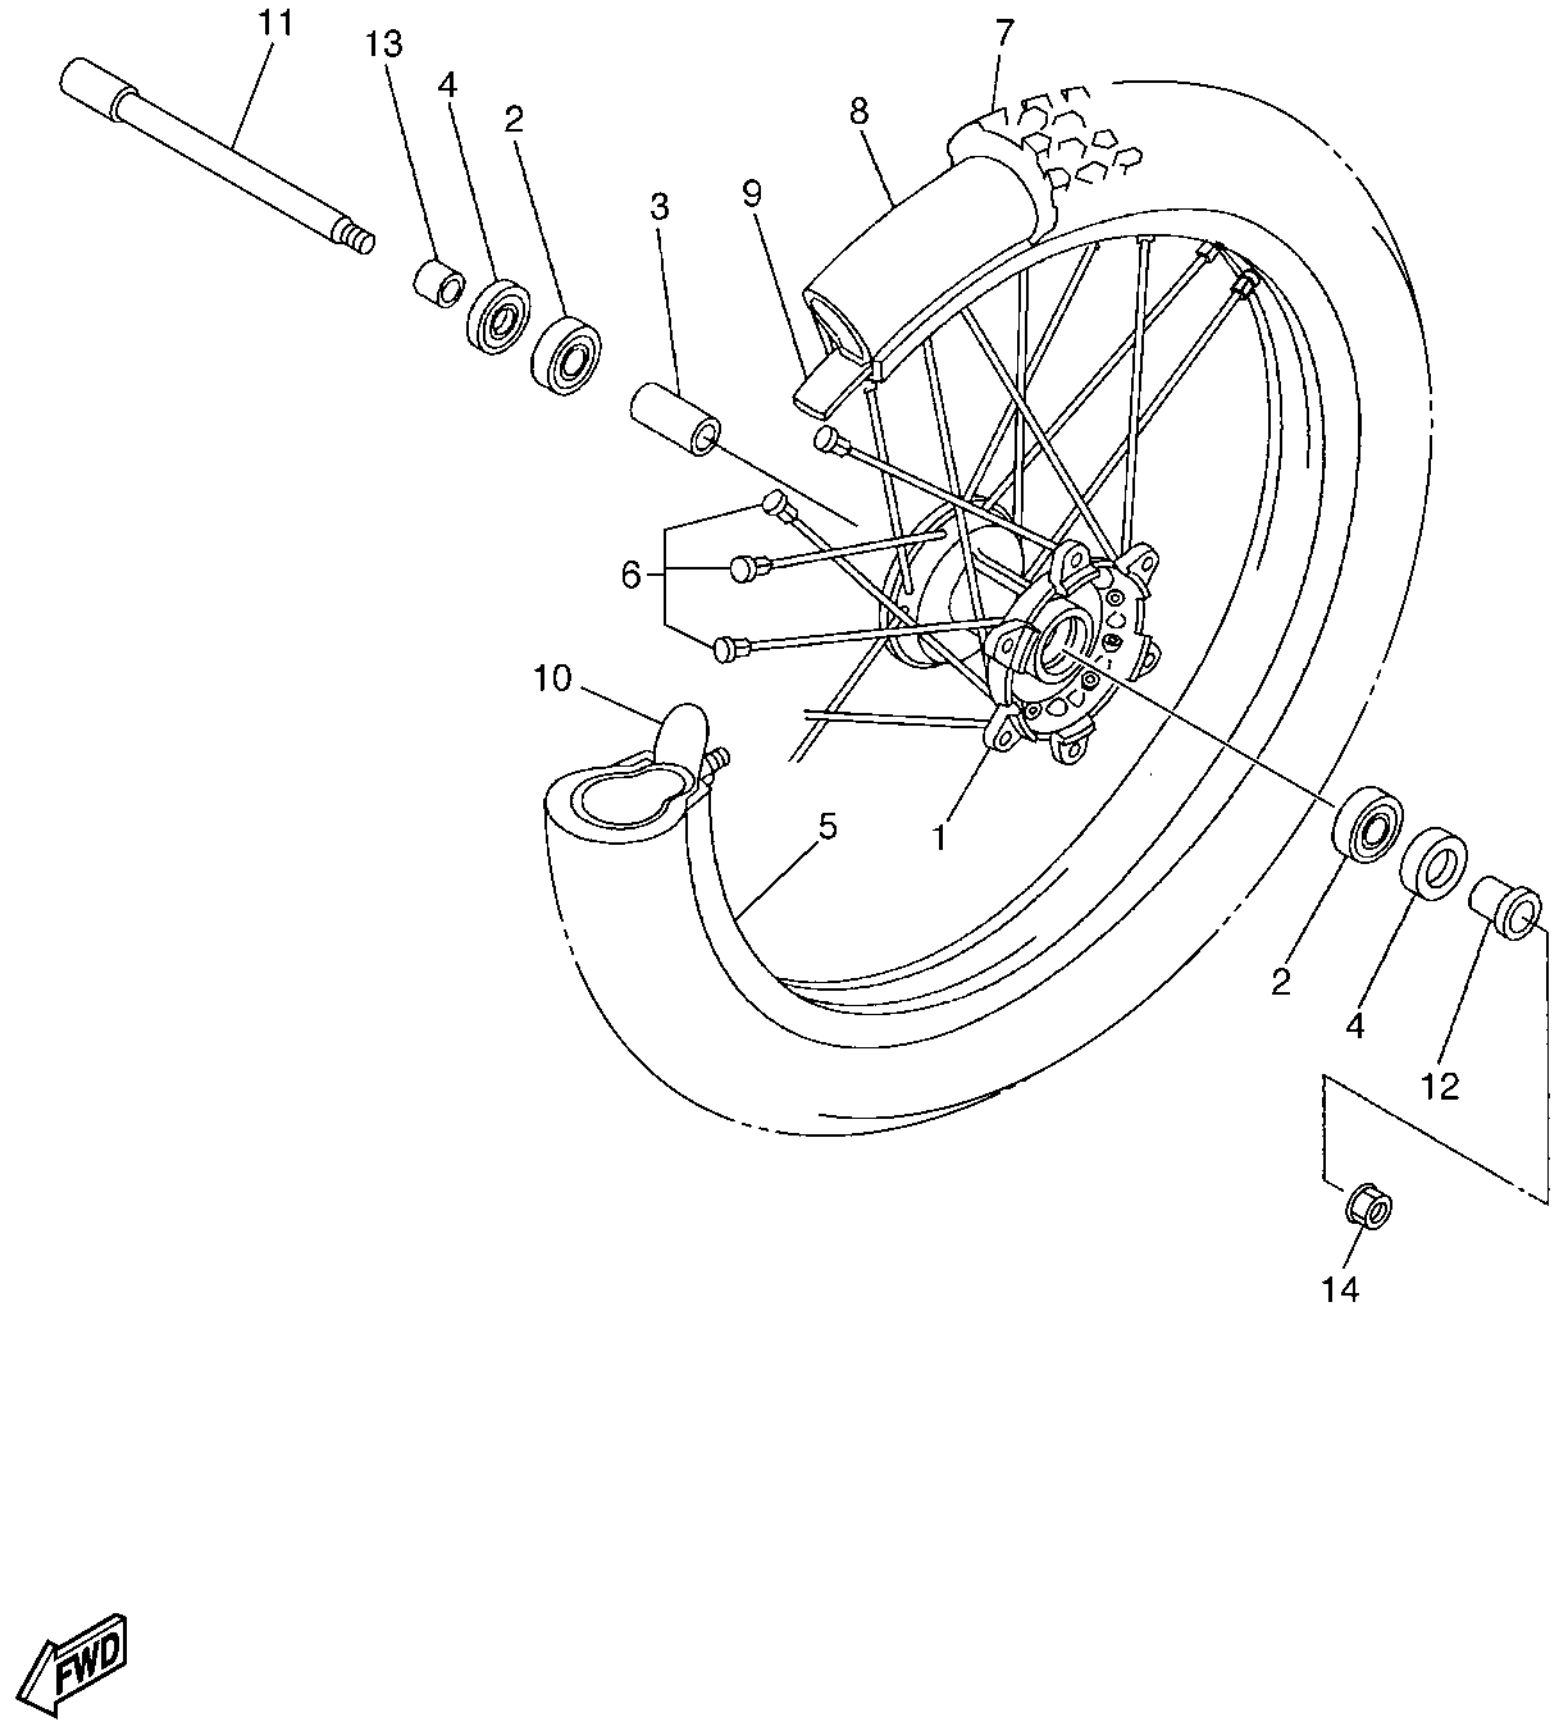

5XD5100-D280

FIG. 29 FRONT WHEEL

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5NY–25111–00	HUB, FRONT	1	1	1	1		
2	93306–90409	BEARING	2	2	2	2		
3	5NY–25117–00	SPACER, BEARING	1	1	1	1		
4	93102–26468	OIL SEAL	2	2	2	2		
5	94416–21034	RIM (1.60-21)	1	1	1	1		UR FOR DPBSE
	94416–21041	RIM (1.60-21)	1	1	1	1		UR FOR PWS1
6	5NY–25104–00	SPOKE SET, FRONT	1	1	1	1		
7	94108–21027	TIRE	1			1		BRIDGESTONE
	*	TIRE (80/100-21 51R MST)		1				LM PIRELLI
	*	TIRE (80/100-21 51M D742FA)			1			LM DUNLOP
8	94209–21229	TUBE (80/100-21 M/C TR4)	1			1		BRIDGESTONE
	*	TUBE (80/100-21)		1				LM PIRELLI
	*	TUBE (80/100-21 M/C TR4)			1			LM DUNLOP
9	94330–21084	BAND,RIM (1.60-21)	1			1		BRIDGESTONE
	*	BAND, RIM (80/100-21)		1				LM PIRELLI
	*	BAND, RIM (22-21)			1			LM DUNLOP
10	5SF–25394–00	SPACER, BEAD	1	1	1	1		
11	5XC–25181–G0	AXLE, WHEEL	1	1	1	1		
12	5XC–25183–G0	COLLAR, WHEEL	1	1	1	1		
13	5XC–25186–G0	COLLAR, WHEEL	1	1	1	1		
14	90179–16011	NUT	1	1	1	1		


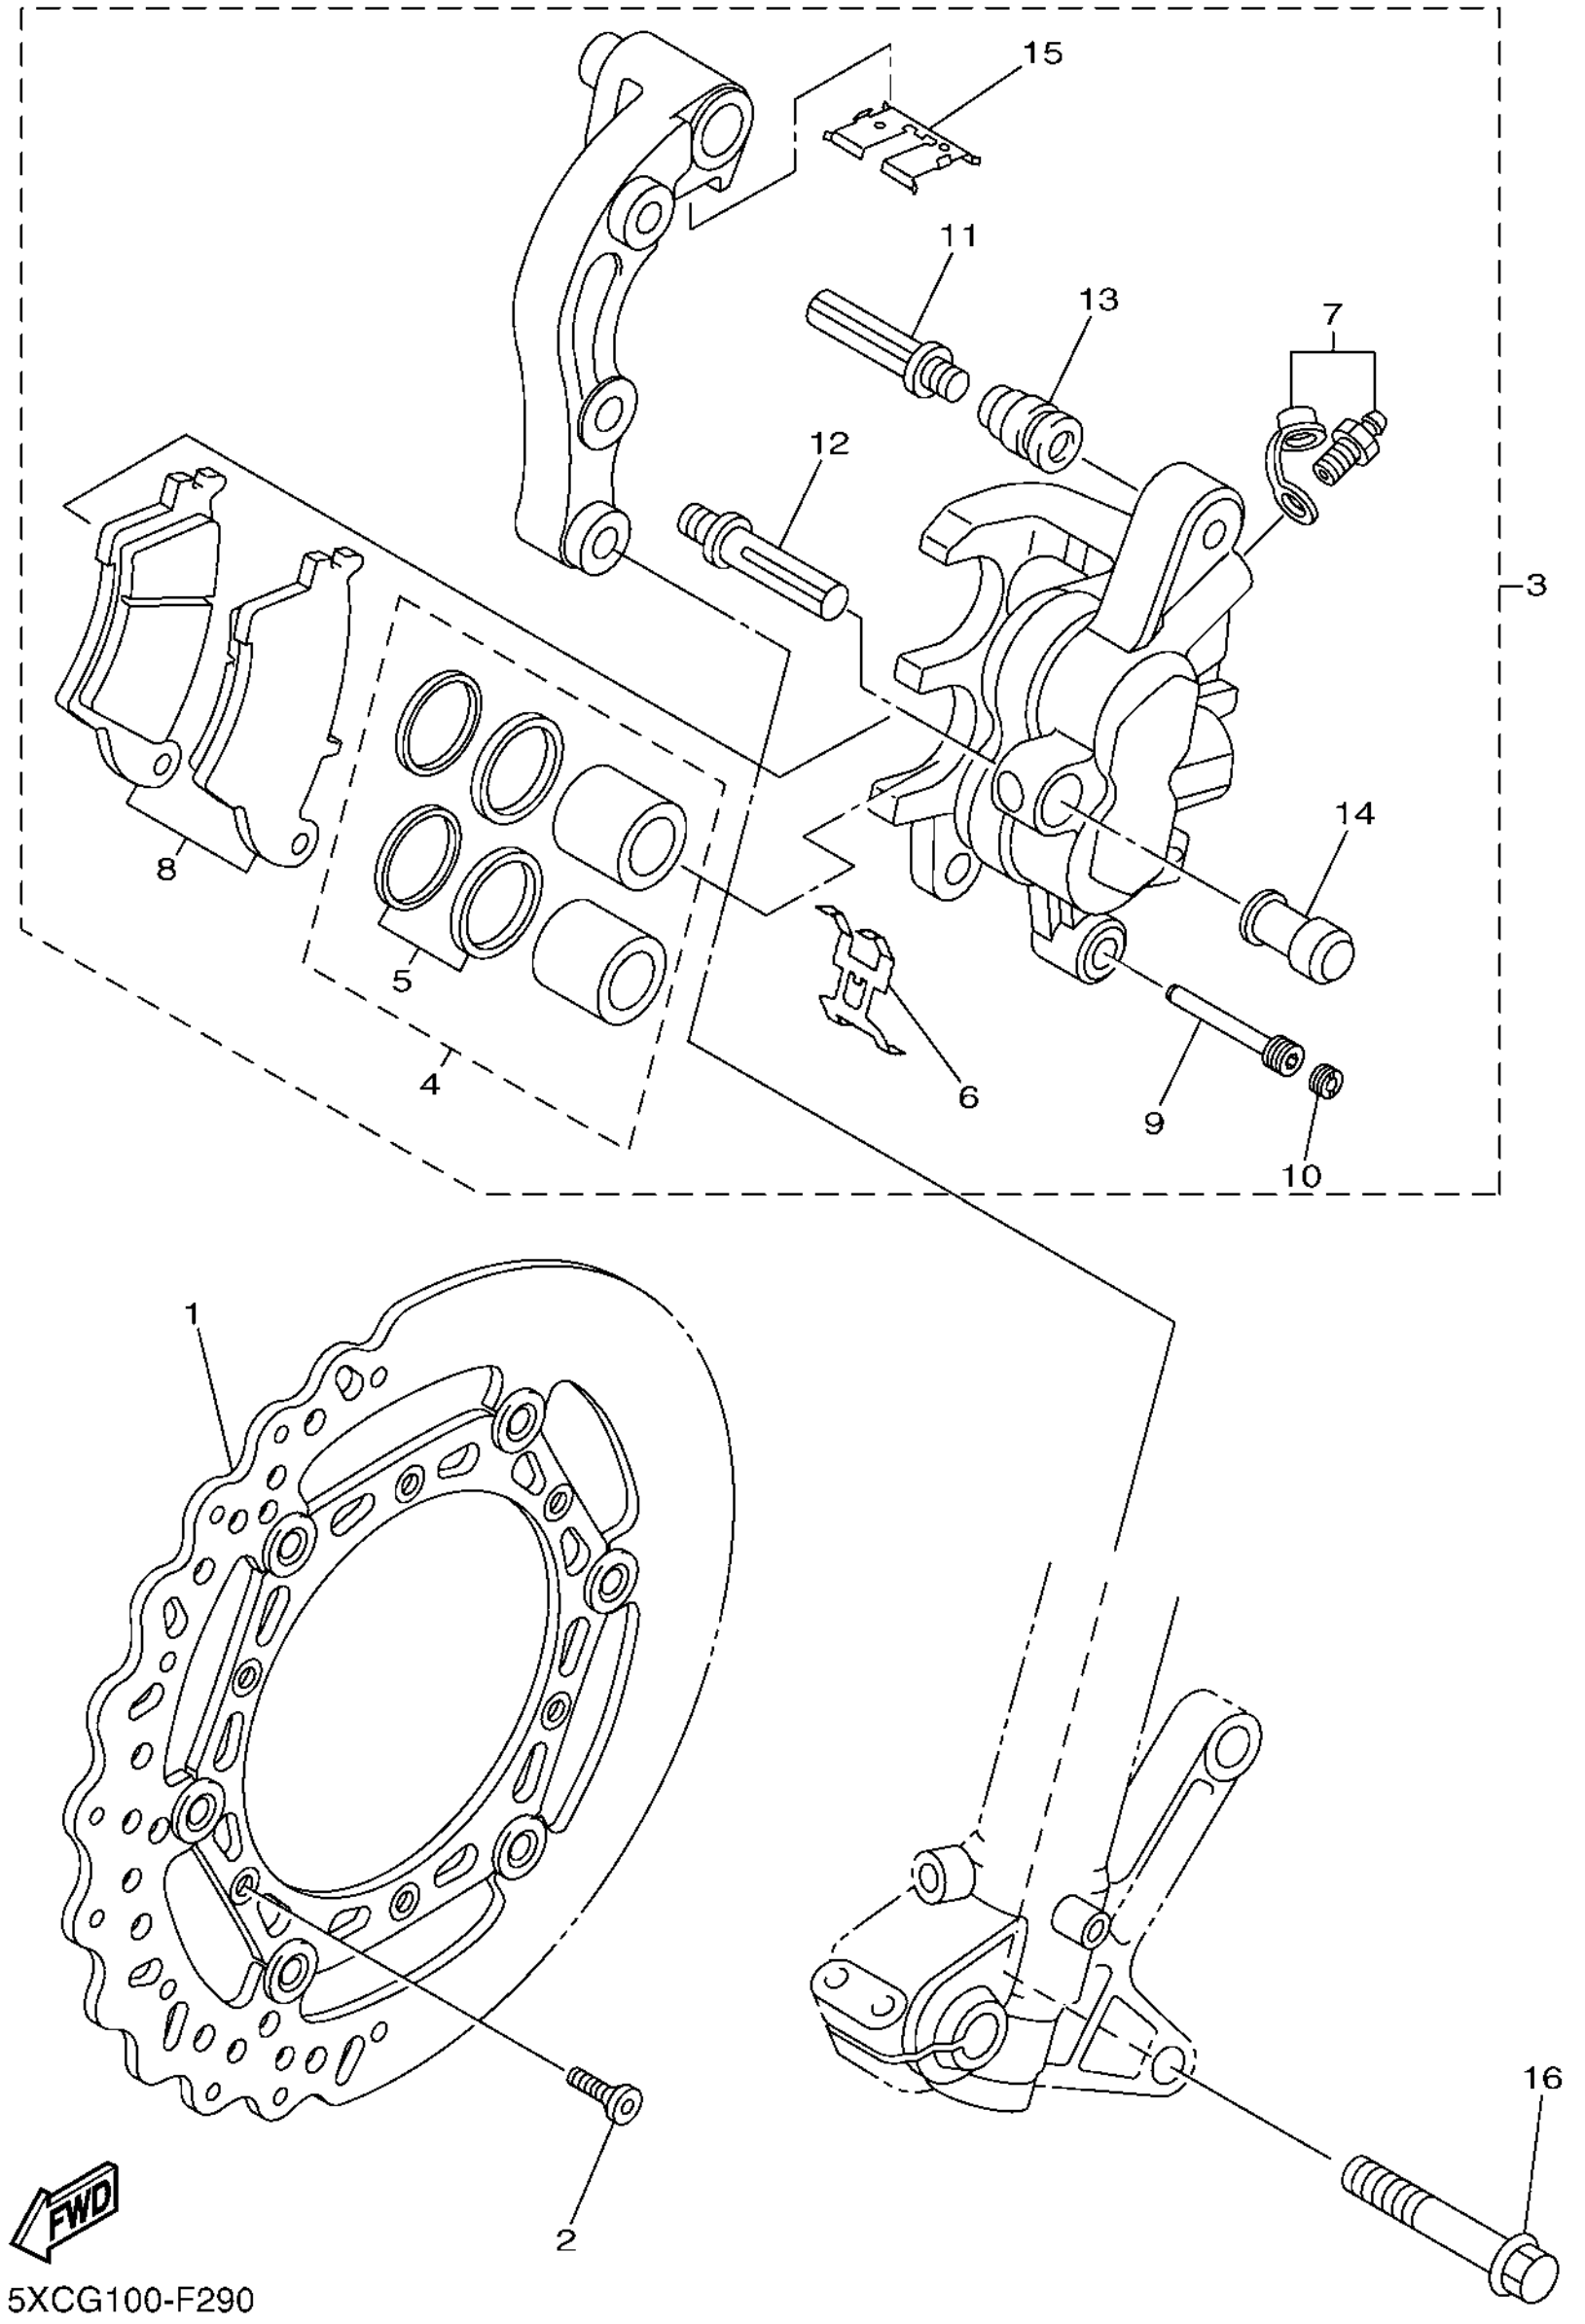


FIG. 30 FRONT BRAKE CALIPER


REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5XC–2581T–G0	DISK BRAKE ASSY	1	1	1	1		
2	90151–06051	SCREW, COUNTERSUNK	6	6	6	6		
3	5XC–2580T–G0	CALIPER ASSY (LEFT)	1	1	1	1		
4	5XC–W0057–00	.PISTON ASSY, CALIPER	1	1	1	1		
5	5KM–W0047–10	..CALIPER SEAL KIT	1	1	1	1		
6	5DH–25919–00	.SUPPORT, PAD	1	1	1	1		
7	1UY–W0048–50	.BLEED SCREW KIT	1	1	1	1		
8	5XC–W0045–00	.BRAKE PAD KIT	1	1	1	1		
9	5DH–25933–00	.PIN, PAD	1	1	1	1		
10	5DH–25916–00	.PLUG	1	1	1	1		
11	3SP–25926–51	.BOLT	1	1	1	1		
12	3SP–25914–51	.PIN, SLIDE	1	1	1	1		
13	3JD–25917–00	.BOOT, CALIPER	1	1	1	1		
14	1UY–25937–51	.BOOT 2	1	1	1	1		
15	5XC–25849–G0	.RETAINER, CALIPER	1	1	1	1		
16	90105–08137	BOLT, FLANGE	2	2	2	2		

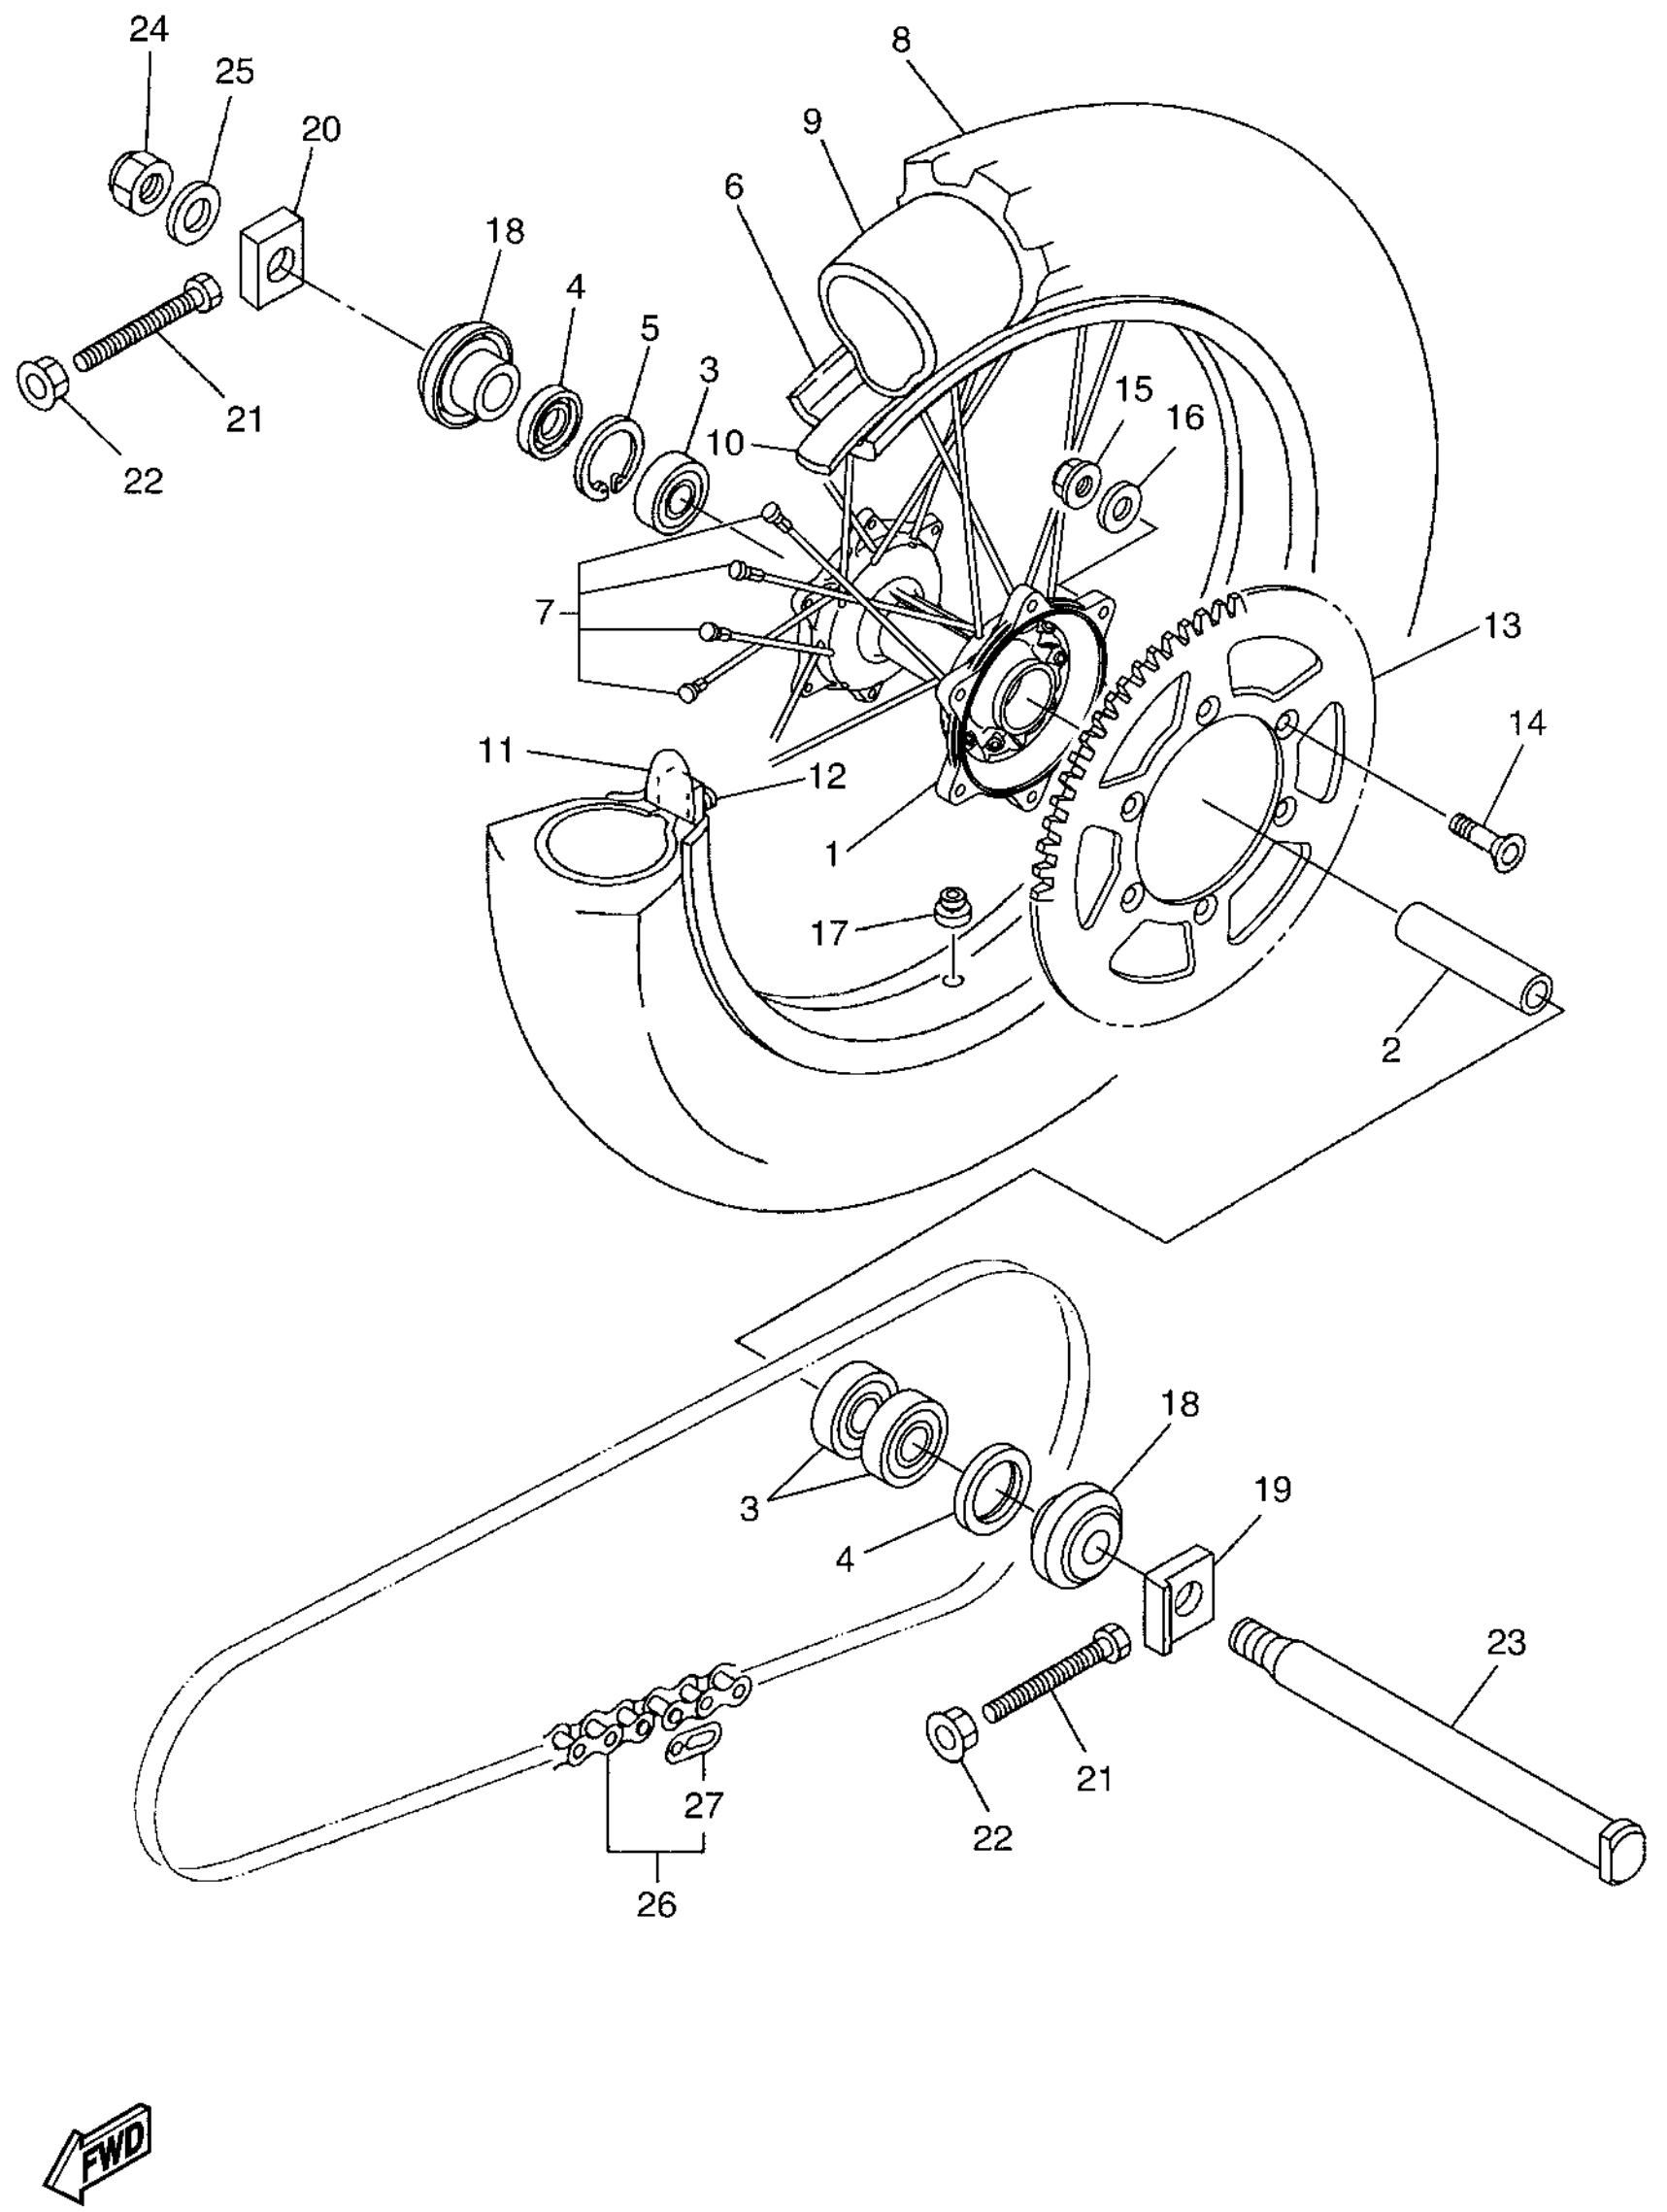

34P1100-H310

FIG. 31 REAR WHEEL

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	17D–25311–00	HUB, REAR	1	1	1	1		
2	17D–25317–00	SPACER, BEARING	1	1	1	1		
3	93306–90510	BEARING	3	3	3	3		
4	93102–32337	OIL SEAL	2	2	2	2		
5	99009–42700	CIRCLIP	1	1	1	1		
6	94418–19026	RIM (1.85-19)	1	1	1	1		UR FOR DPBSE
	94418–19035	RIM (1.85-19)	1	1	1	1		UR FOR PWS1
7	34P–25304–00	SPOKE SET, REAR	1	1	1	1		
8	94110–19019	TIRE (100/90-19 57M M404)	1			1		BRIDGESTONE
	*	TIRE (100/90-19 57M NHS)		1				LM PIRELLI
	*	TIRE (100/90-19 57M D756G)			1			LM DUNLOP
9	94210–19222	TUBE (100/90-19 M/C TR4)	1			1		BRIDGESTONE
	*	TUBE (110/90-19)		1				LM PIRELLI
	*	TUBE (100/90-19 M/C TR4 BTL)			1			LM DUNLOP
10	94316–19156	BAND, RIM (1.85-19)	1			1		BRIDGESTONE
	*	BAND, RIM (3.50-18)		1				LM METZELER
	*	BAND, RIM (22-19)			1			LM DUNLOP
11	4XM–25394–00	SPACER, BEAD	1	1	1	1		
12	4XM–25364–00	DAMPER	1	1	1	1		
13	1C3–25449–00	SPROCKET, DRIVEN (49T)	1					STD
	1C3–25451–00	SPROCKET, DRIVEN (51T)		1	1	1		STD
	1C3–25447–00	SPROCKET, DRIVEN (47T)	1	1	1	1		AP
	1C3–25448–00	SPROCKET, DRIVEN (48T)	1	1	1	1		AP
	1C3–25450–00	SPROCKET, DRIVEN (50T)	1	1	1	1		AP
	1C3–25452–00	SPROCKET, DRIVEN (52T)	1	1	1	1		AP
14	90109–08078	BOLT	6	6	6	6		
15	90185–08008	NUT, SELF-LOCKING	6	6	6	6		

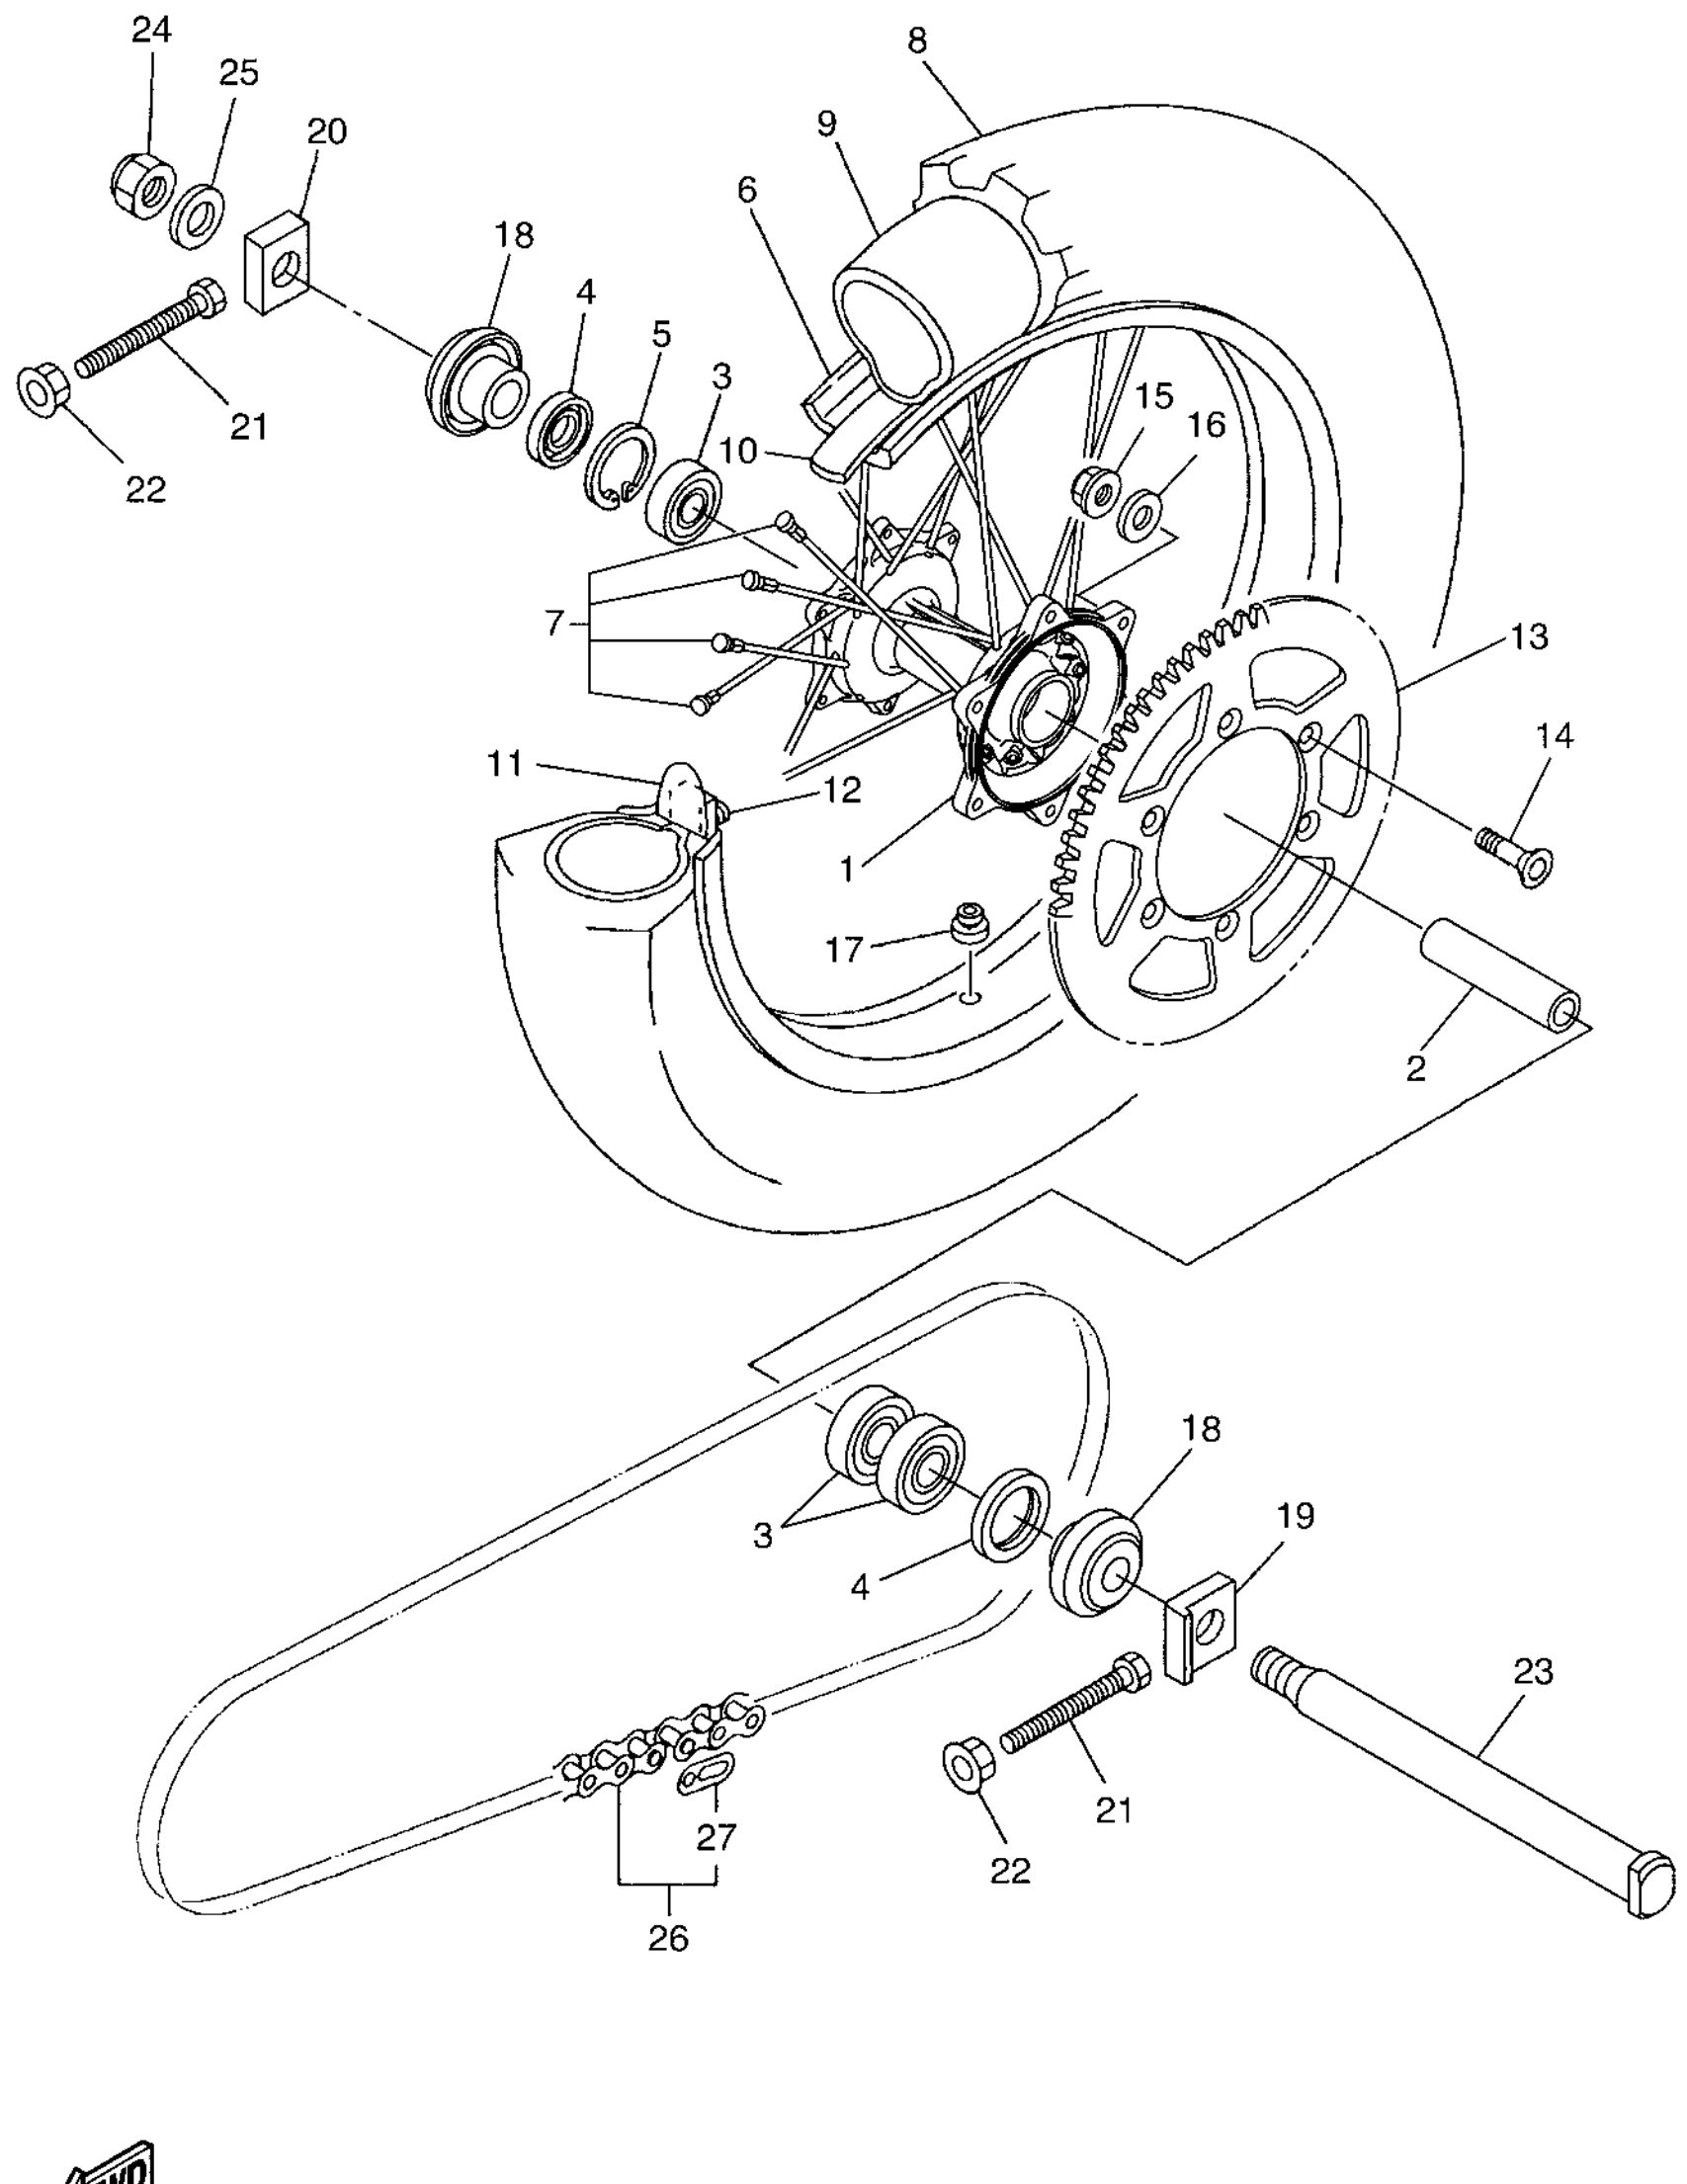

FWD

34P1100-H310

FIG. 31 REAR WHEEL

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
16	90201–08048	WASHER, PLATE	6	6	6	6		
17	90480–08608	GROMMET	1	1	1	1		
18	17D–2530S–00	COLLAR ASSY	2	2	2	2		
19	17D–25388–00	PULLER, CHAIN 1	1	1	1	1		
20	17D–25389–00	PULLER, CHAIN 2	1	1	1	1		
21	90101–08006	BOLT	2	2	2	2		
22	90179–08019	NUT	2	2	2	2		
23	17D–25381–00	AXLE, WHEEL	1	1	1	1		
24	90185–22009	NUT, SELF-LOCKING	1	1	1	1		
25	90201–22021	WASHER, PLATE	1	1	1	1		
26	9Y582–28111	CHAIN (DID520DMA2-114LL)	1					
	9Y582–28113	CHAIN (DID520DMA2-114LL)		1	1	1		
27	94682–28001	.JOINT, CHAIN (DID520DM G&B-RJ)	1	1	1	1		


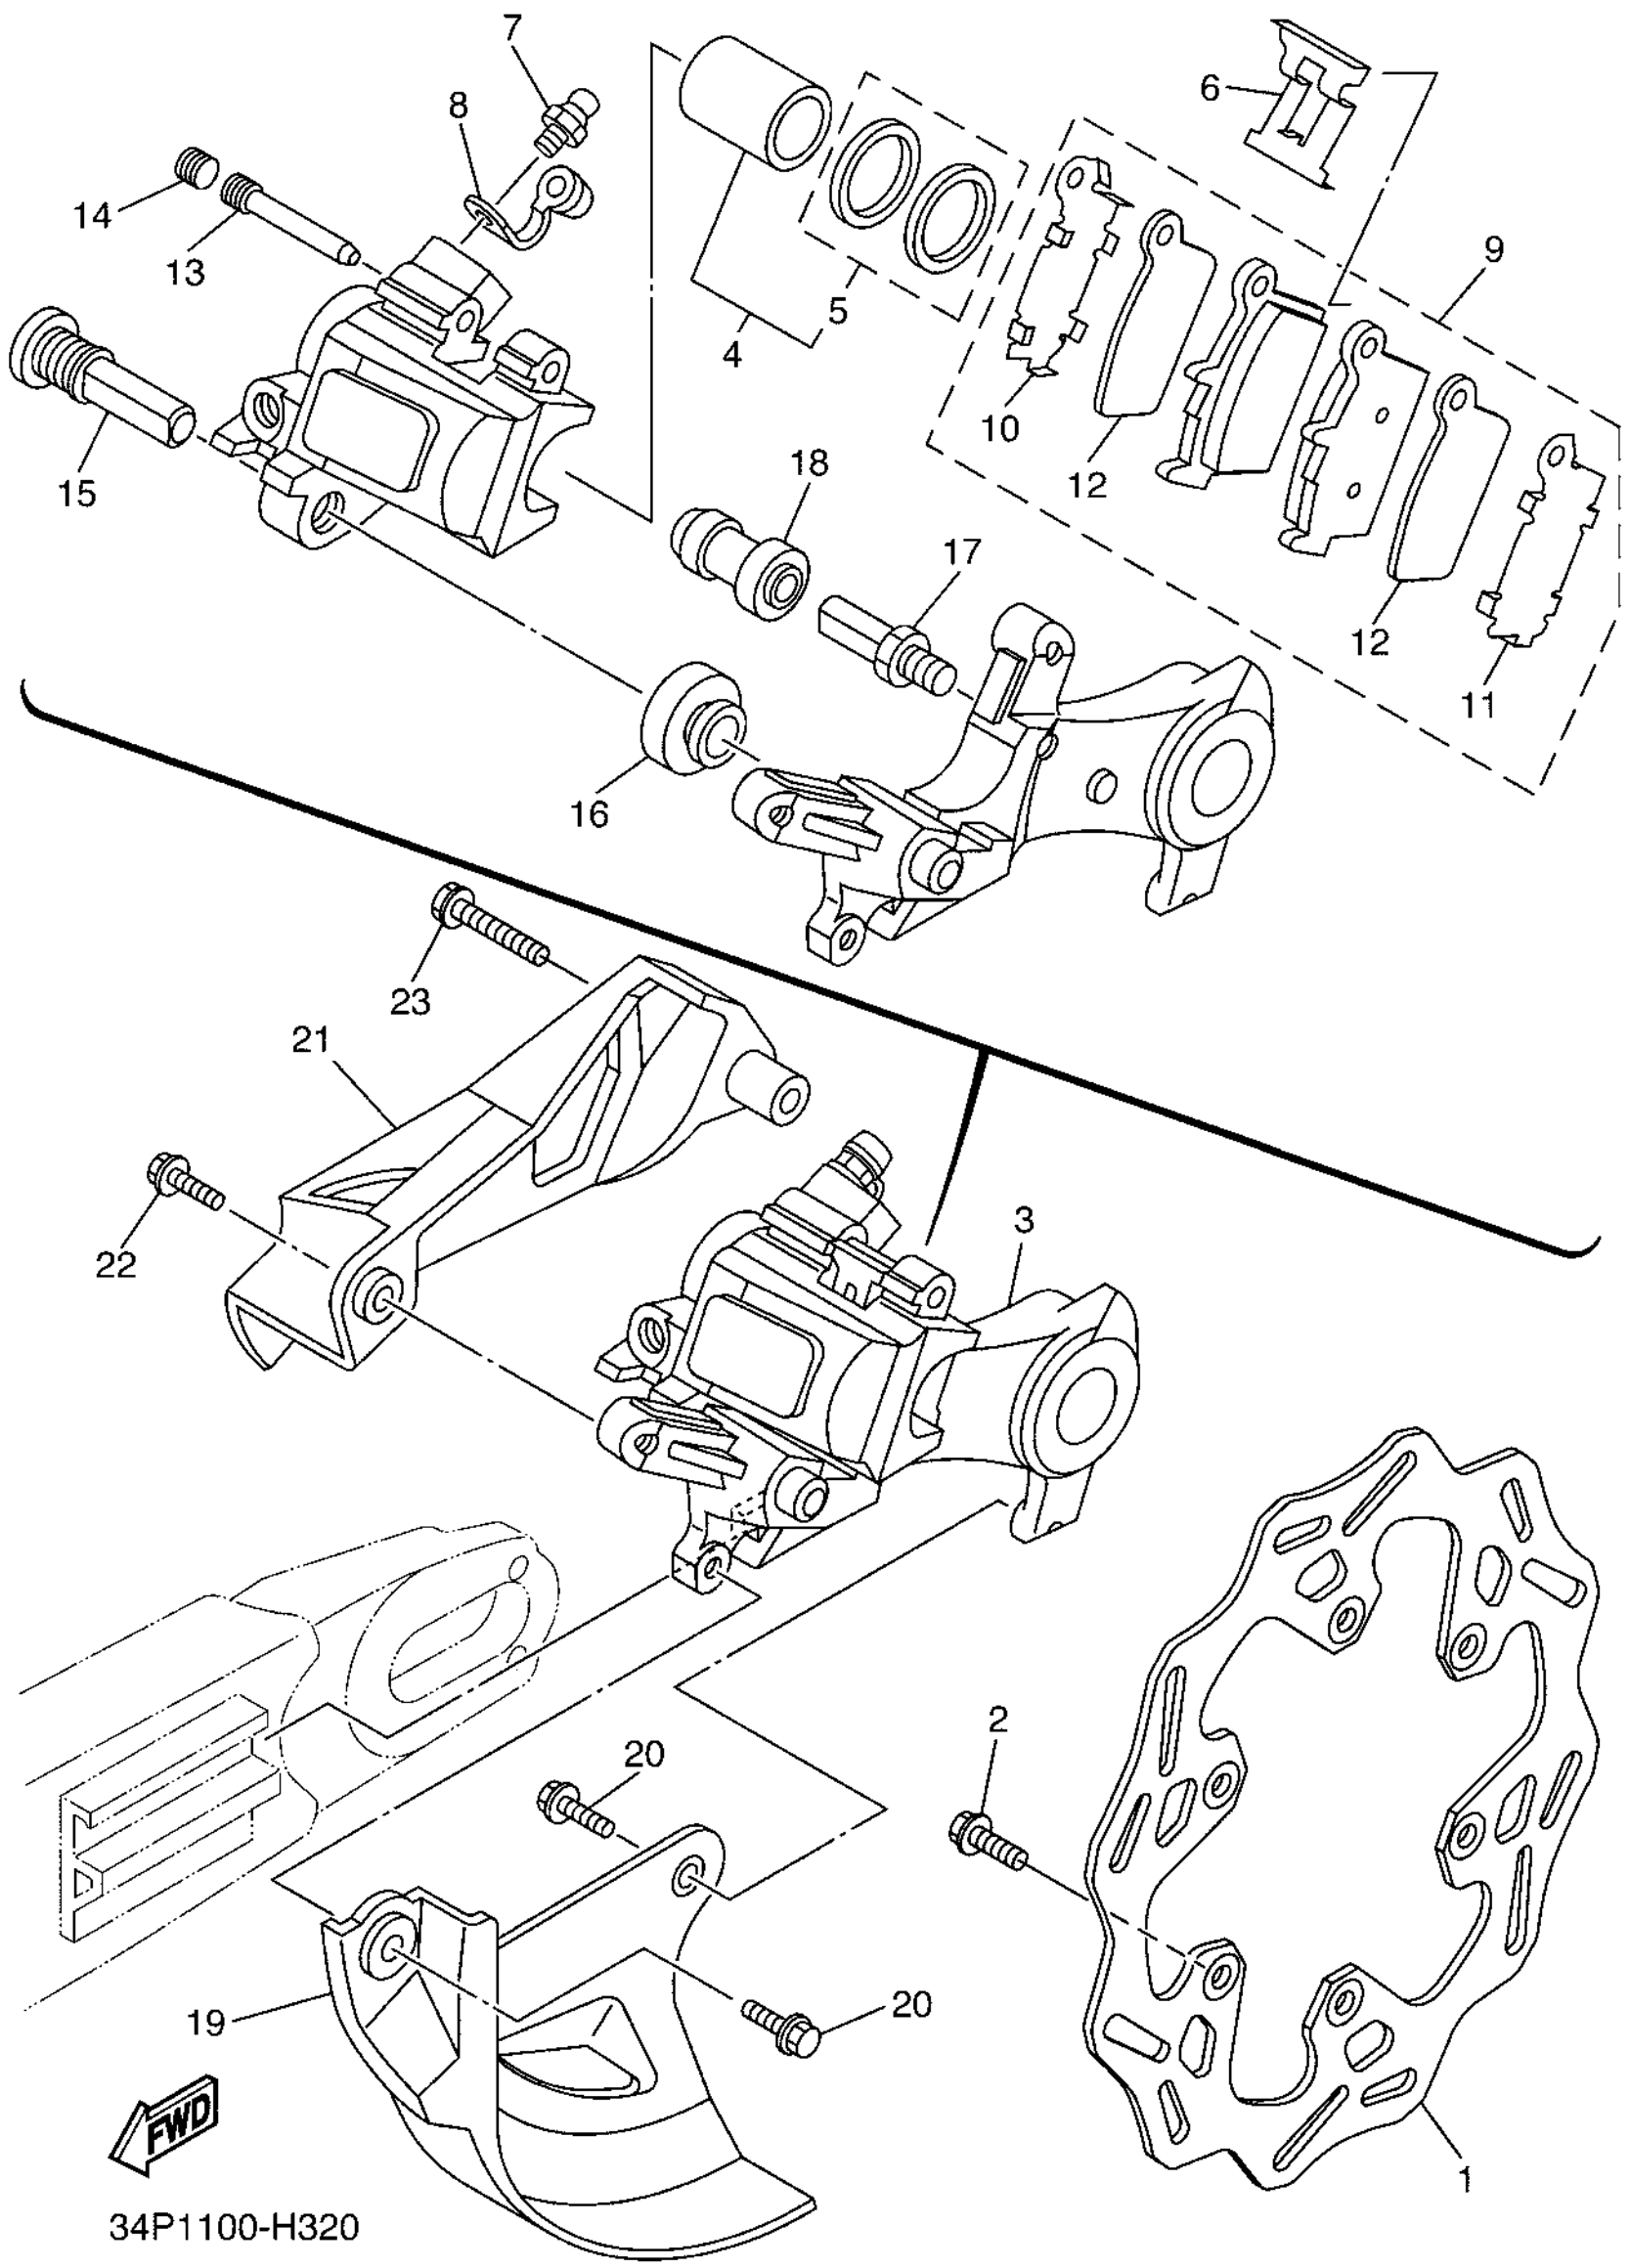


FIG. 32 REAR BRAKE CALIPER

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	2S2–2582W–70	DISK, REAR BRAKE 2	1	1	1	1		
2	90105–06156	BOLT, FLANGE	6	6	6	6		
3	17D–2580W–01	CALIPER ASSY, REAR 2	1		1	1		
	17D–2580W–11	CALIPER ASSY, REAR 2		1				
4	5UN–W0057–50	.PISTON ASSY, CALIPER	1	1	1	1		
5	5UN–W0047–50	..CALIPER SEAL KIT	1	1	1	1		
6	5DH–25919–50	.SUPPORT, PAD	1	1	1	1		
7	1UY–25824–51	.SCREW, BLEED	1	1	1	1		
8	1UY–25825–51	.CAP	1	1	1	1		
9	1C3–W0046–50	.BRAKE PAD KIT 2	1		1	1		
	1C3–W0046–B0	.BRAKE PAD KIT 2		1				
10	5UN–25828–60	..SHIM, CALIPER	1	1	1	1		
11	5UN–25827–60	..SHIM, CALIPER	1	1	1	1		
12	5UN–22898–60	..INSULATOR, HEAT	2	2	2	2		
13	8CR–25924–00	.PIN, PAD	1	1	1	1		
14	5DH–25916–00	.PLUG	1	1	1	1		
15	5DH–25914–50	.PIN, SLIDE	1	1	1	1		
16	3JD–25917–00	.BOOT, CALIPER	1	1	1	1		
17	5UN–25914–00	.PIN, SLIDE	1	1	1	1		
18	1UY–25937–51	.BOOT 2	1	1	1	1		
19	1C3–25718–50	PROTECTOR, DISK BRAKE	1	1	1	1		
20	90105–06110	BOLT, FLANGE	2	2	2	2		
21	1C3–27491–50	PROTECTOR	1	1	1	1		
22	90105–06107	BOLT, FLANGE	1	1	1	1		
23	90105–06111	BOLT, FLANGE	1	1	1	1		

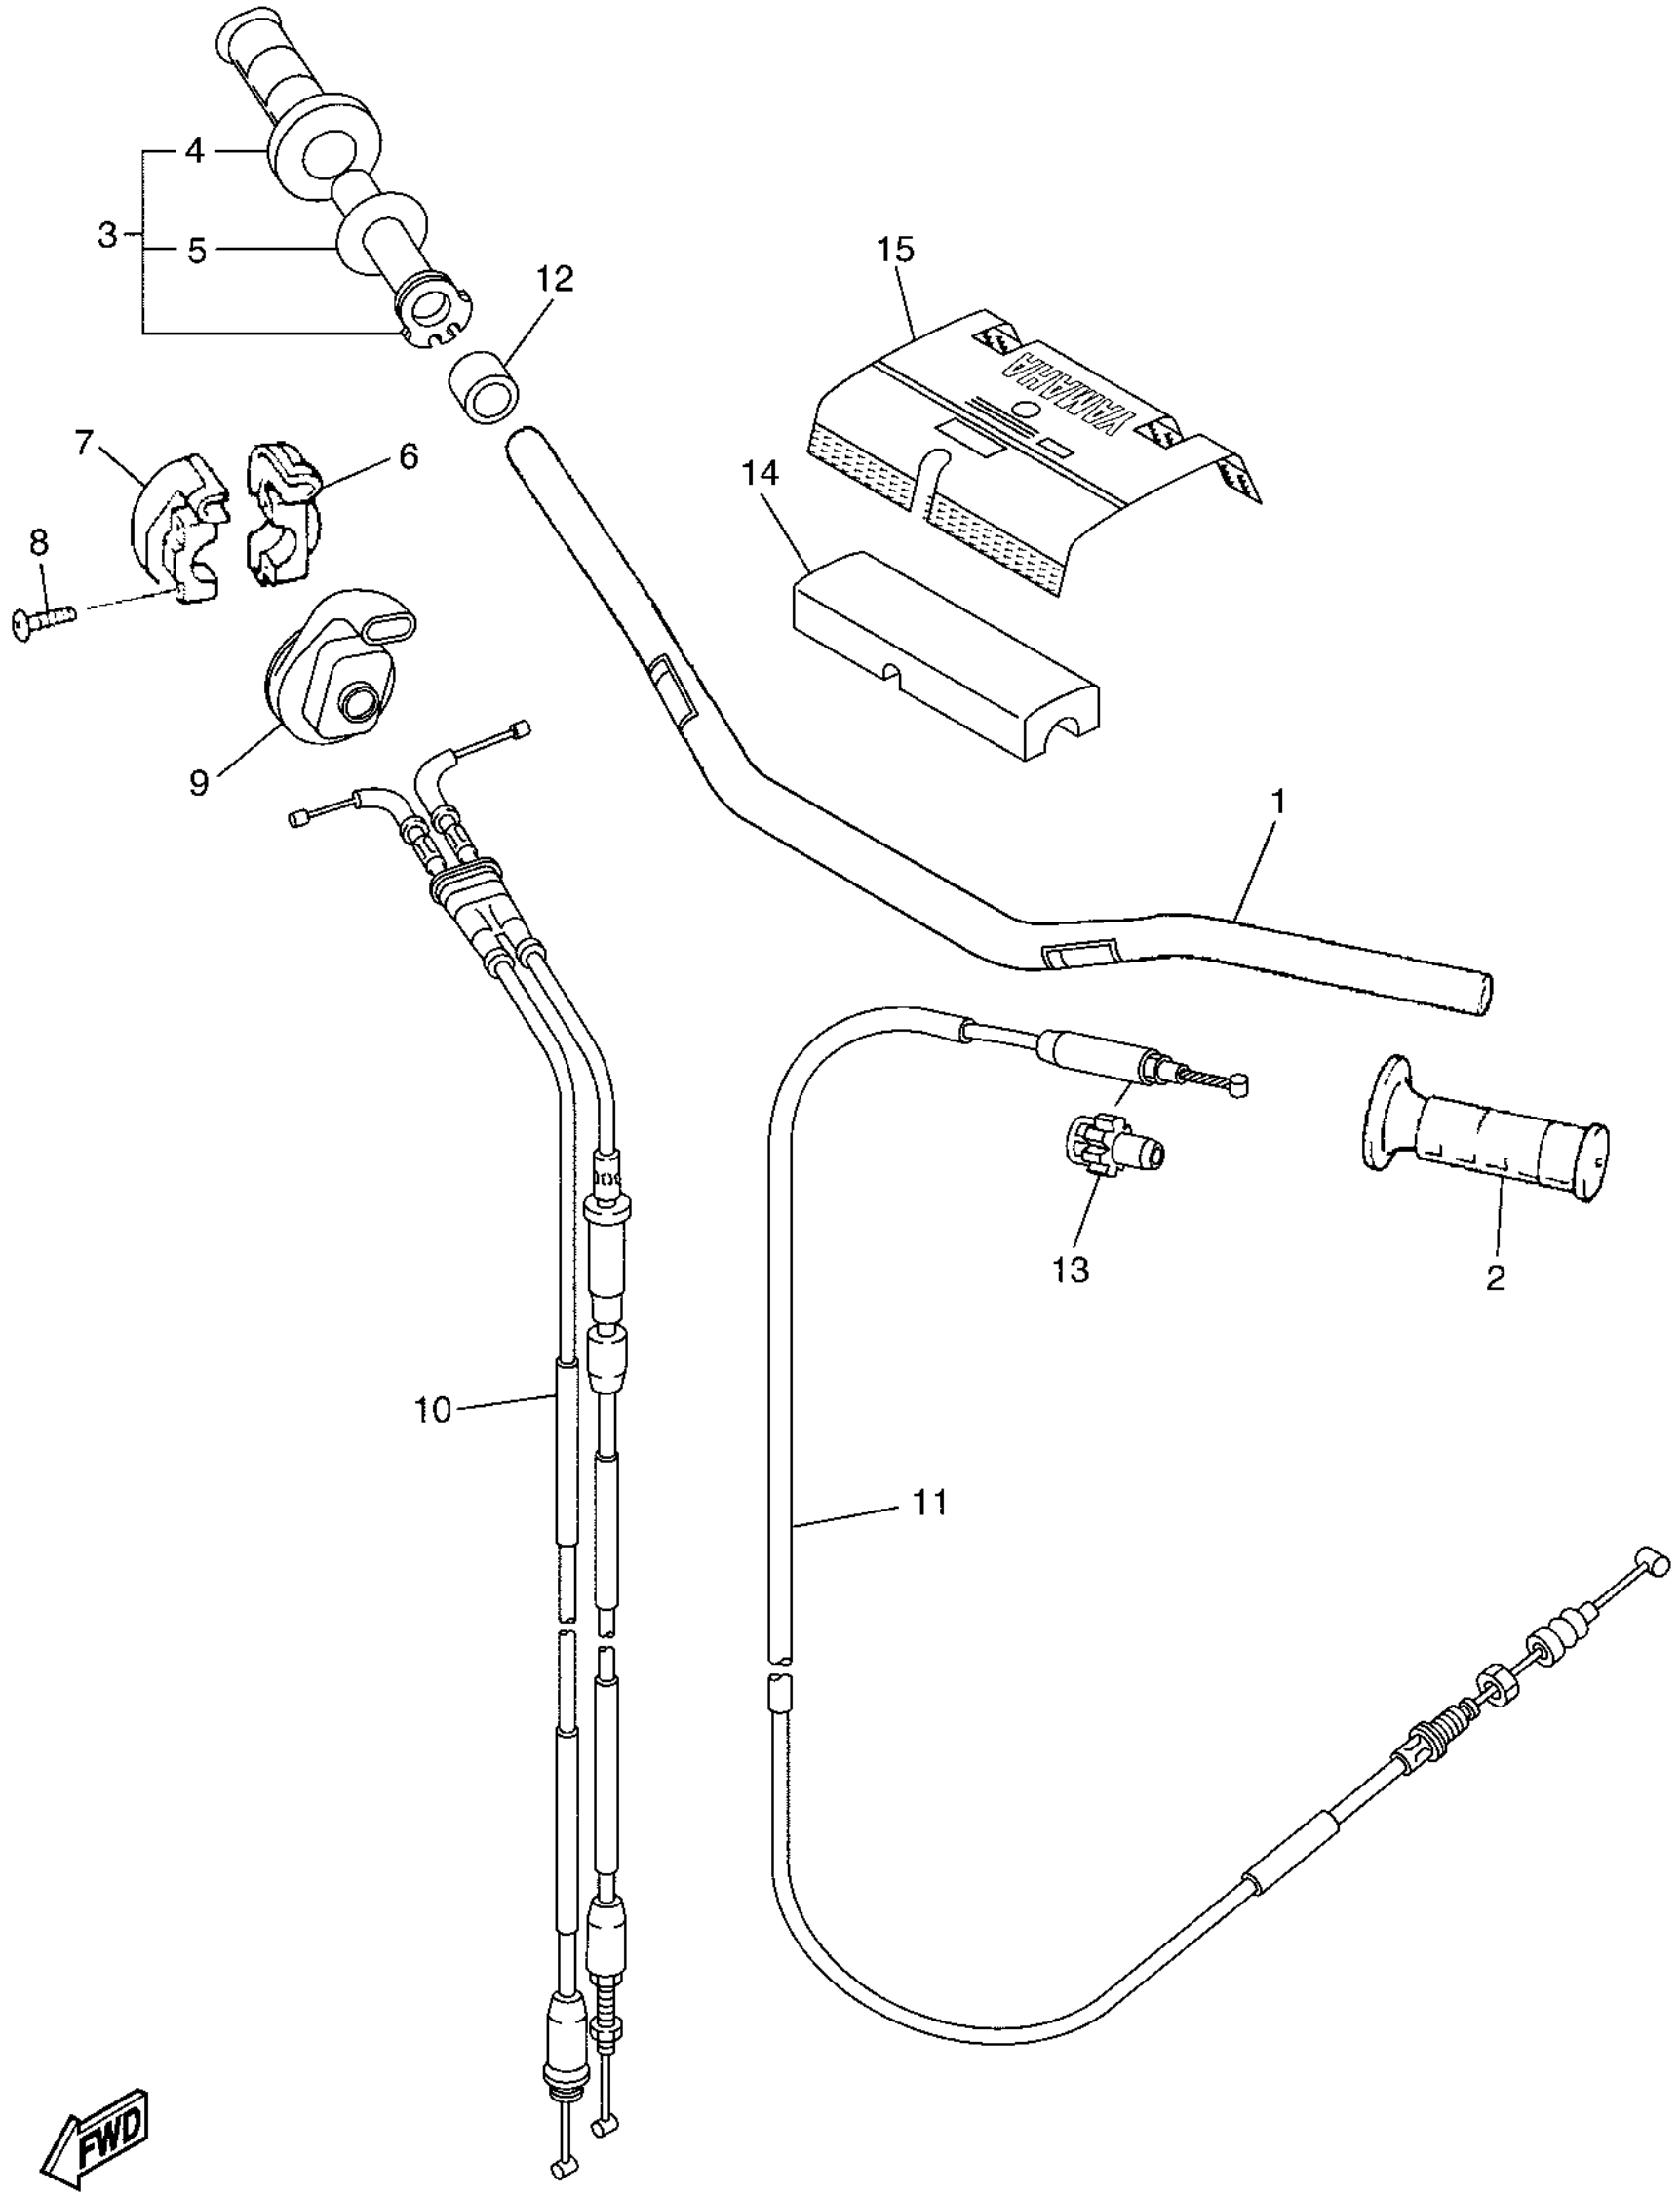

34P1100-H330

FIG. 33 STEERING HANDLE & CABLE

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5XC–26111–L0	HANDLEBAR	1	1	1	1		
2	4GY–26241–00	GRIP	1	1	1	1		
3	5TJ–26240–C0	GRIP ASSY	1	1	1	1		
4	4GY–26242–00	.GRIP (RIGHT)	1	1	1	1		
5	3Y1–26249–00	.RING, LEAF	1	1	1	1		
6	5BE–26281–00	CAP, GRIP UPPER	1	1	1	1		
7	5BE–26282–00	CAP, GRIP UNDER	1	1	1	1		
8	98502–05020	SCREW, PAN HEAD	2	2	2	2		
9	5SF–26287–10	COVER, CAP GRIP	1	1	1	1		
10	5XC–26302–R0	THROTTLE CABLE ASSY	1	1	1	1		
11	5XC–26335–R0	CABLE, CLUTCH	1	1	1	1		
12	90387–225N2	COLLAR	1	1	1	1		
13	34P–26342–00	BOOT, CABLE	1	1	1	1		
14	17D–26124–00	PROTECTOR, HANDLEBAR	1	1	1	1		
15	5XC–26143–L0	COVER, HANDLEBAR UPPER 1	1	1	1	1		UR FOR DPBSE
	5XC–26143–M0	COVER, HANDLEBAR UPPER 1	1	1	1	1		UR FOR PWS1

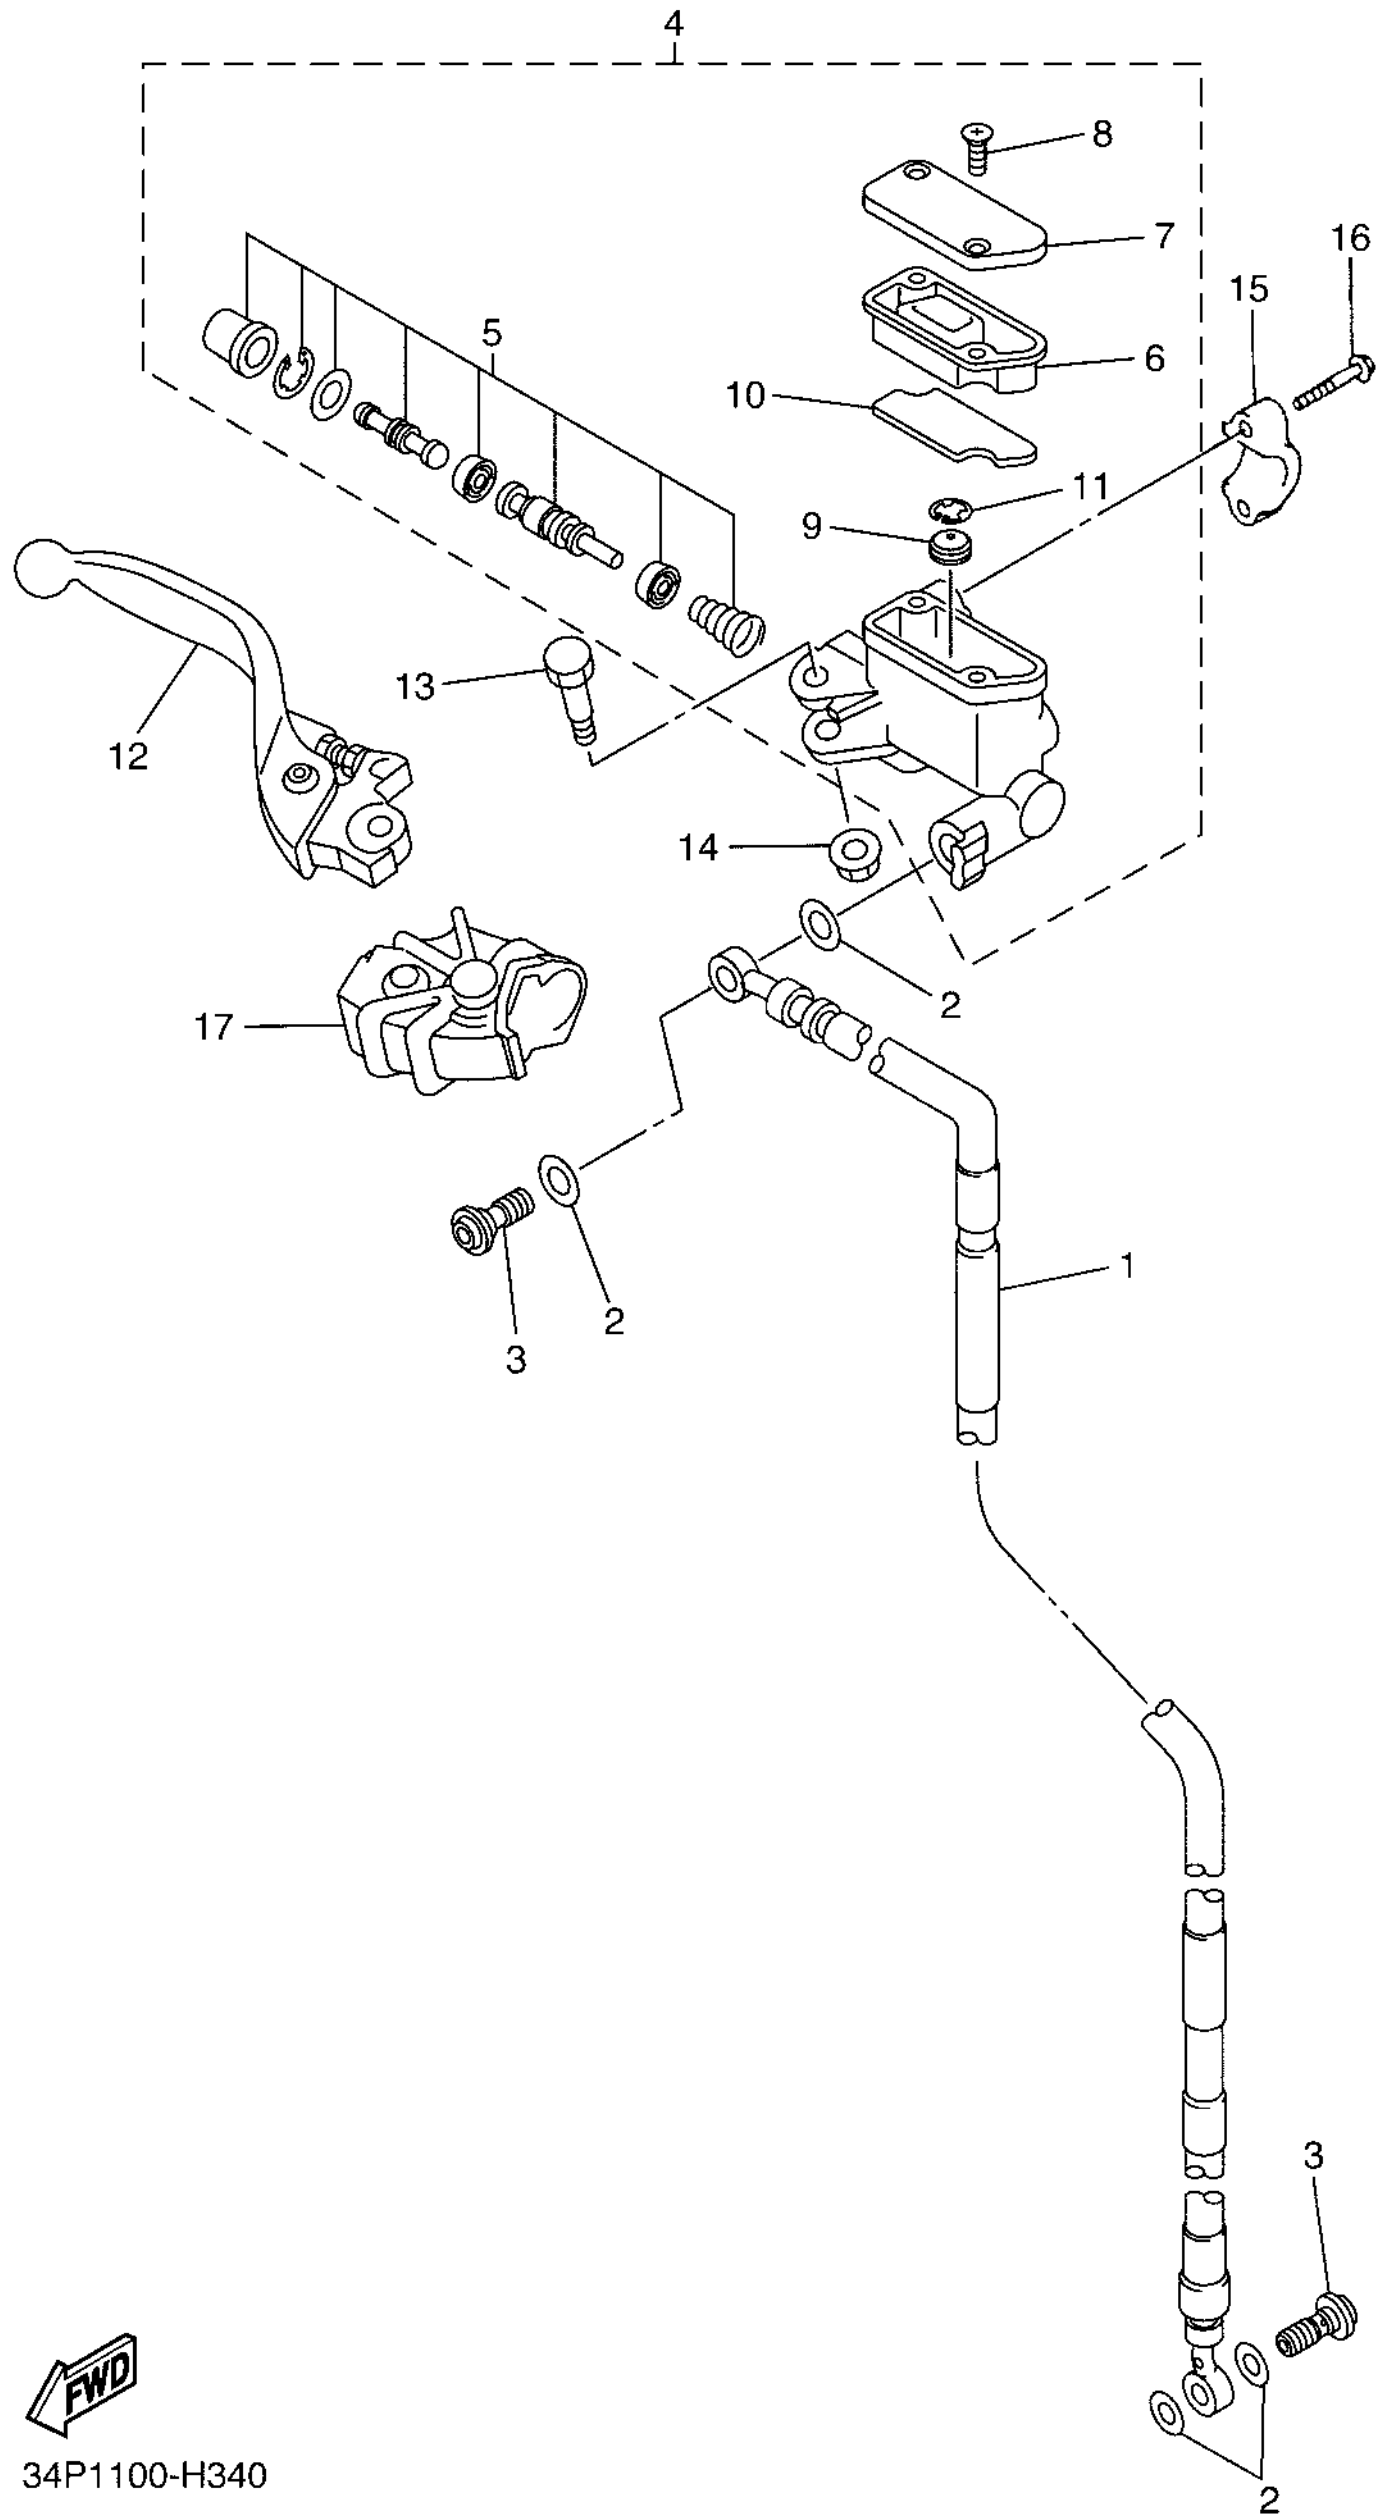


FIG. 34 FRONT MASTER CYLINDER

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5XC–25872–L0	HOSE, BRAKE 1	1	1	1	1		
2	90430–10005	GASKET	4	4	4	4		
3	90401–10172	BOLT, UNION	2	2	2	2		
4	5XC–W2587–00	MASTER CYLINDER SUB ASSY	1	1	1	1		
5	5XC–W0041–00	.CYLINDER KIT, MASTER	1	1	1	1		
6	5XC–25854–G0	.GASKET, DIAPHRAGM	1	1	1	1		
7	5XC–25852–G0	.CAP, RESERVOIR	1	1	1	1		
8	98706–04012	.SCREW, FLAT HEAD	2	2	2	2		
9	5CG–25715–00	.SEPARATOR ASSY	1	1	1	1		
10	5XC–25853–G0	.FLOAT, RESERVOIR	1	1	1	1		
11	5CG–2585G–00	.CIRCLIP	1	1	1	1		
12	5XC–83922–L0	LEVER 2	1	1	1	1		
13	5MV–2589F–00	BOLT, LEVER	1	1	1	1		
14	95701–06500	NUT, WITH WASHER	1	1	1	1		
15	5MV–25867–00	BRACKET, MASTER CYLINDER	1	1	1	1		
16	5MV–25833–00	BOLT, FITTING	2	2	2	2		
17	5XC–26372–G0	COVER, HANDLE LEVER 1	1	1	1	1		


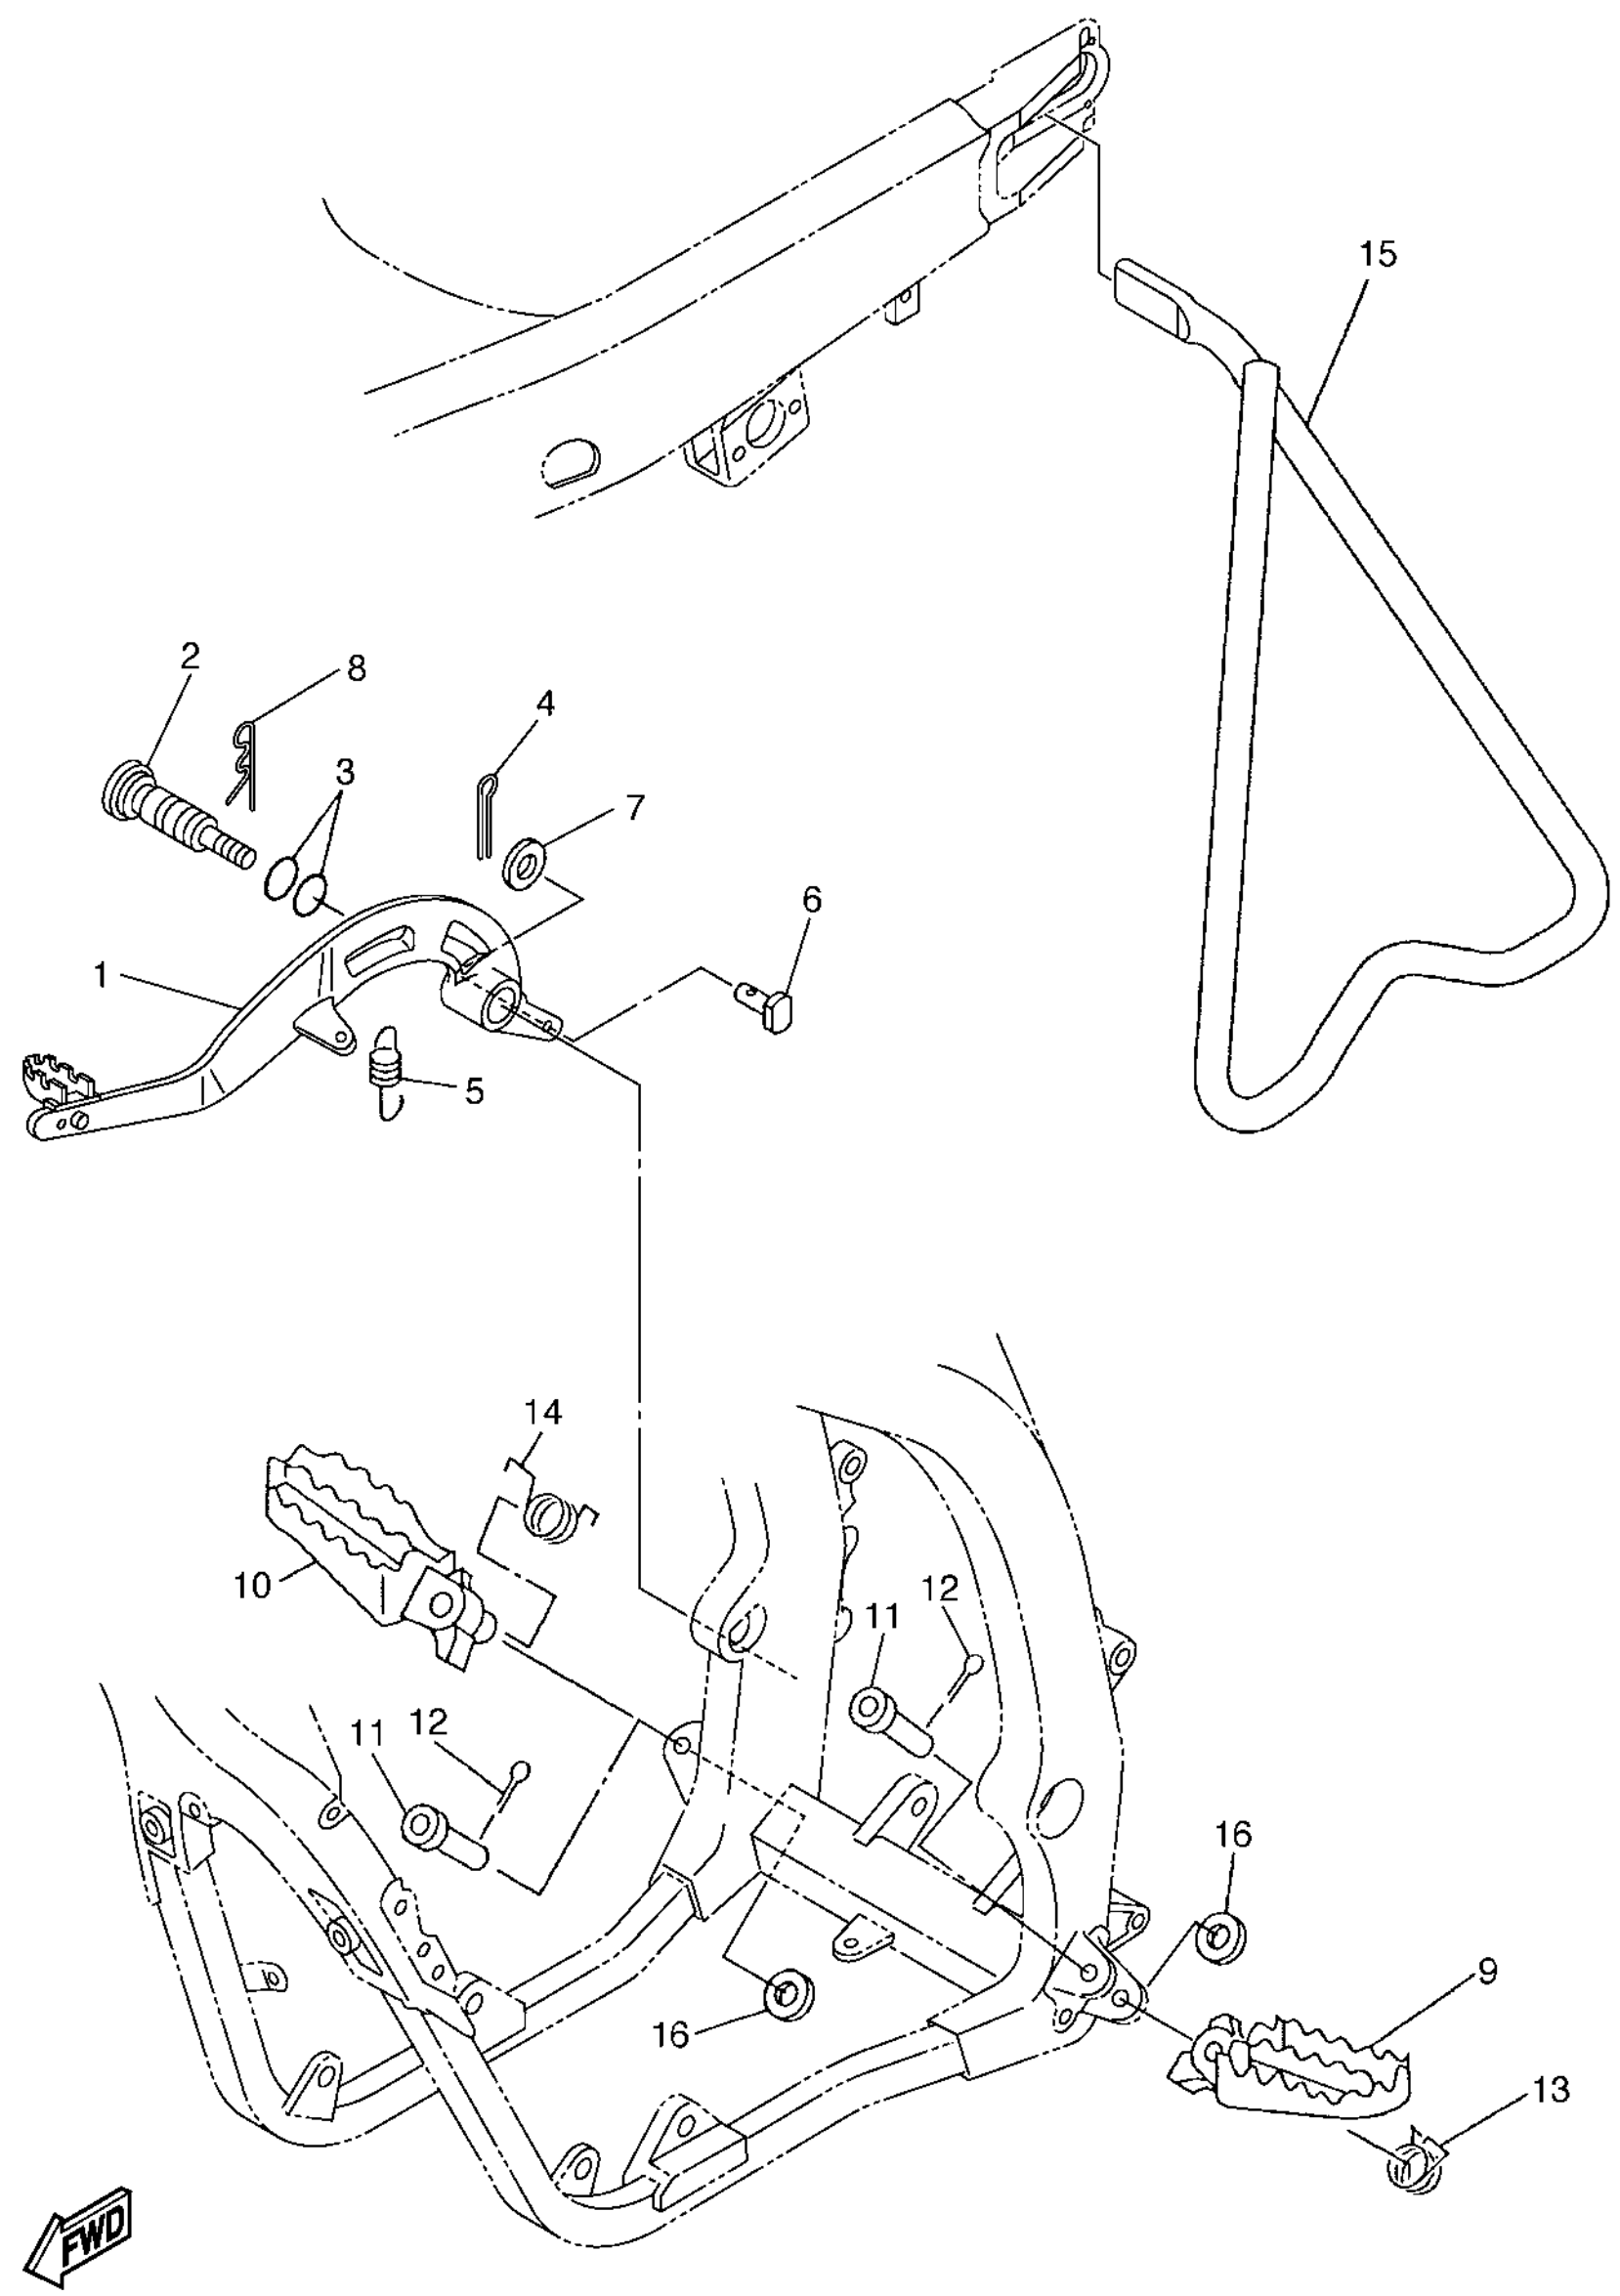


FIG. 35 STAND & FOOTREST


REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5XC–27200–A0	PEDAL, BRAKE	1	1	1	1		
2	5XC–27217–90	BOLT	1	1	1	1		
3	93210–11073	O-RING	2	2	2	2		
4	91402–20012	PIN, COTTER	1	1	1	1		
5	90506–16007	SPRING, TENSION	1	1	1	1		
6	90240–08120	PIN, CLEVIS	1	1	1	1		
7	90201–08044	WASHER, PLATE	1	1	1	1		
8	90468–16001	CLIP	1	1	1	1		
9	5XC–27411–M1	FOOTREST 1	1	1	1	1		
10	5XC–27421–M1	FOOTREST 2	1	1	1	1		
11	90240–10004	PIN, CLEVIS	2	2	2	2		
12	91402–25015	PIN, COTTER	2	2	2	2		
13	90508–28015	SPRING, TORSION	1	1	1	1		
14	90508–28018	SPRING, TORSION	1	1	1	1		
15	34P–27311–00	STAND, SIDE	1	1	1	1		
16	90201–10032	WASHER, PLATE	2	2	2	2		

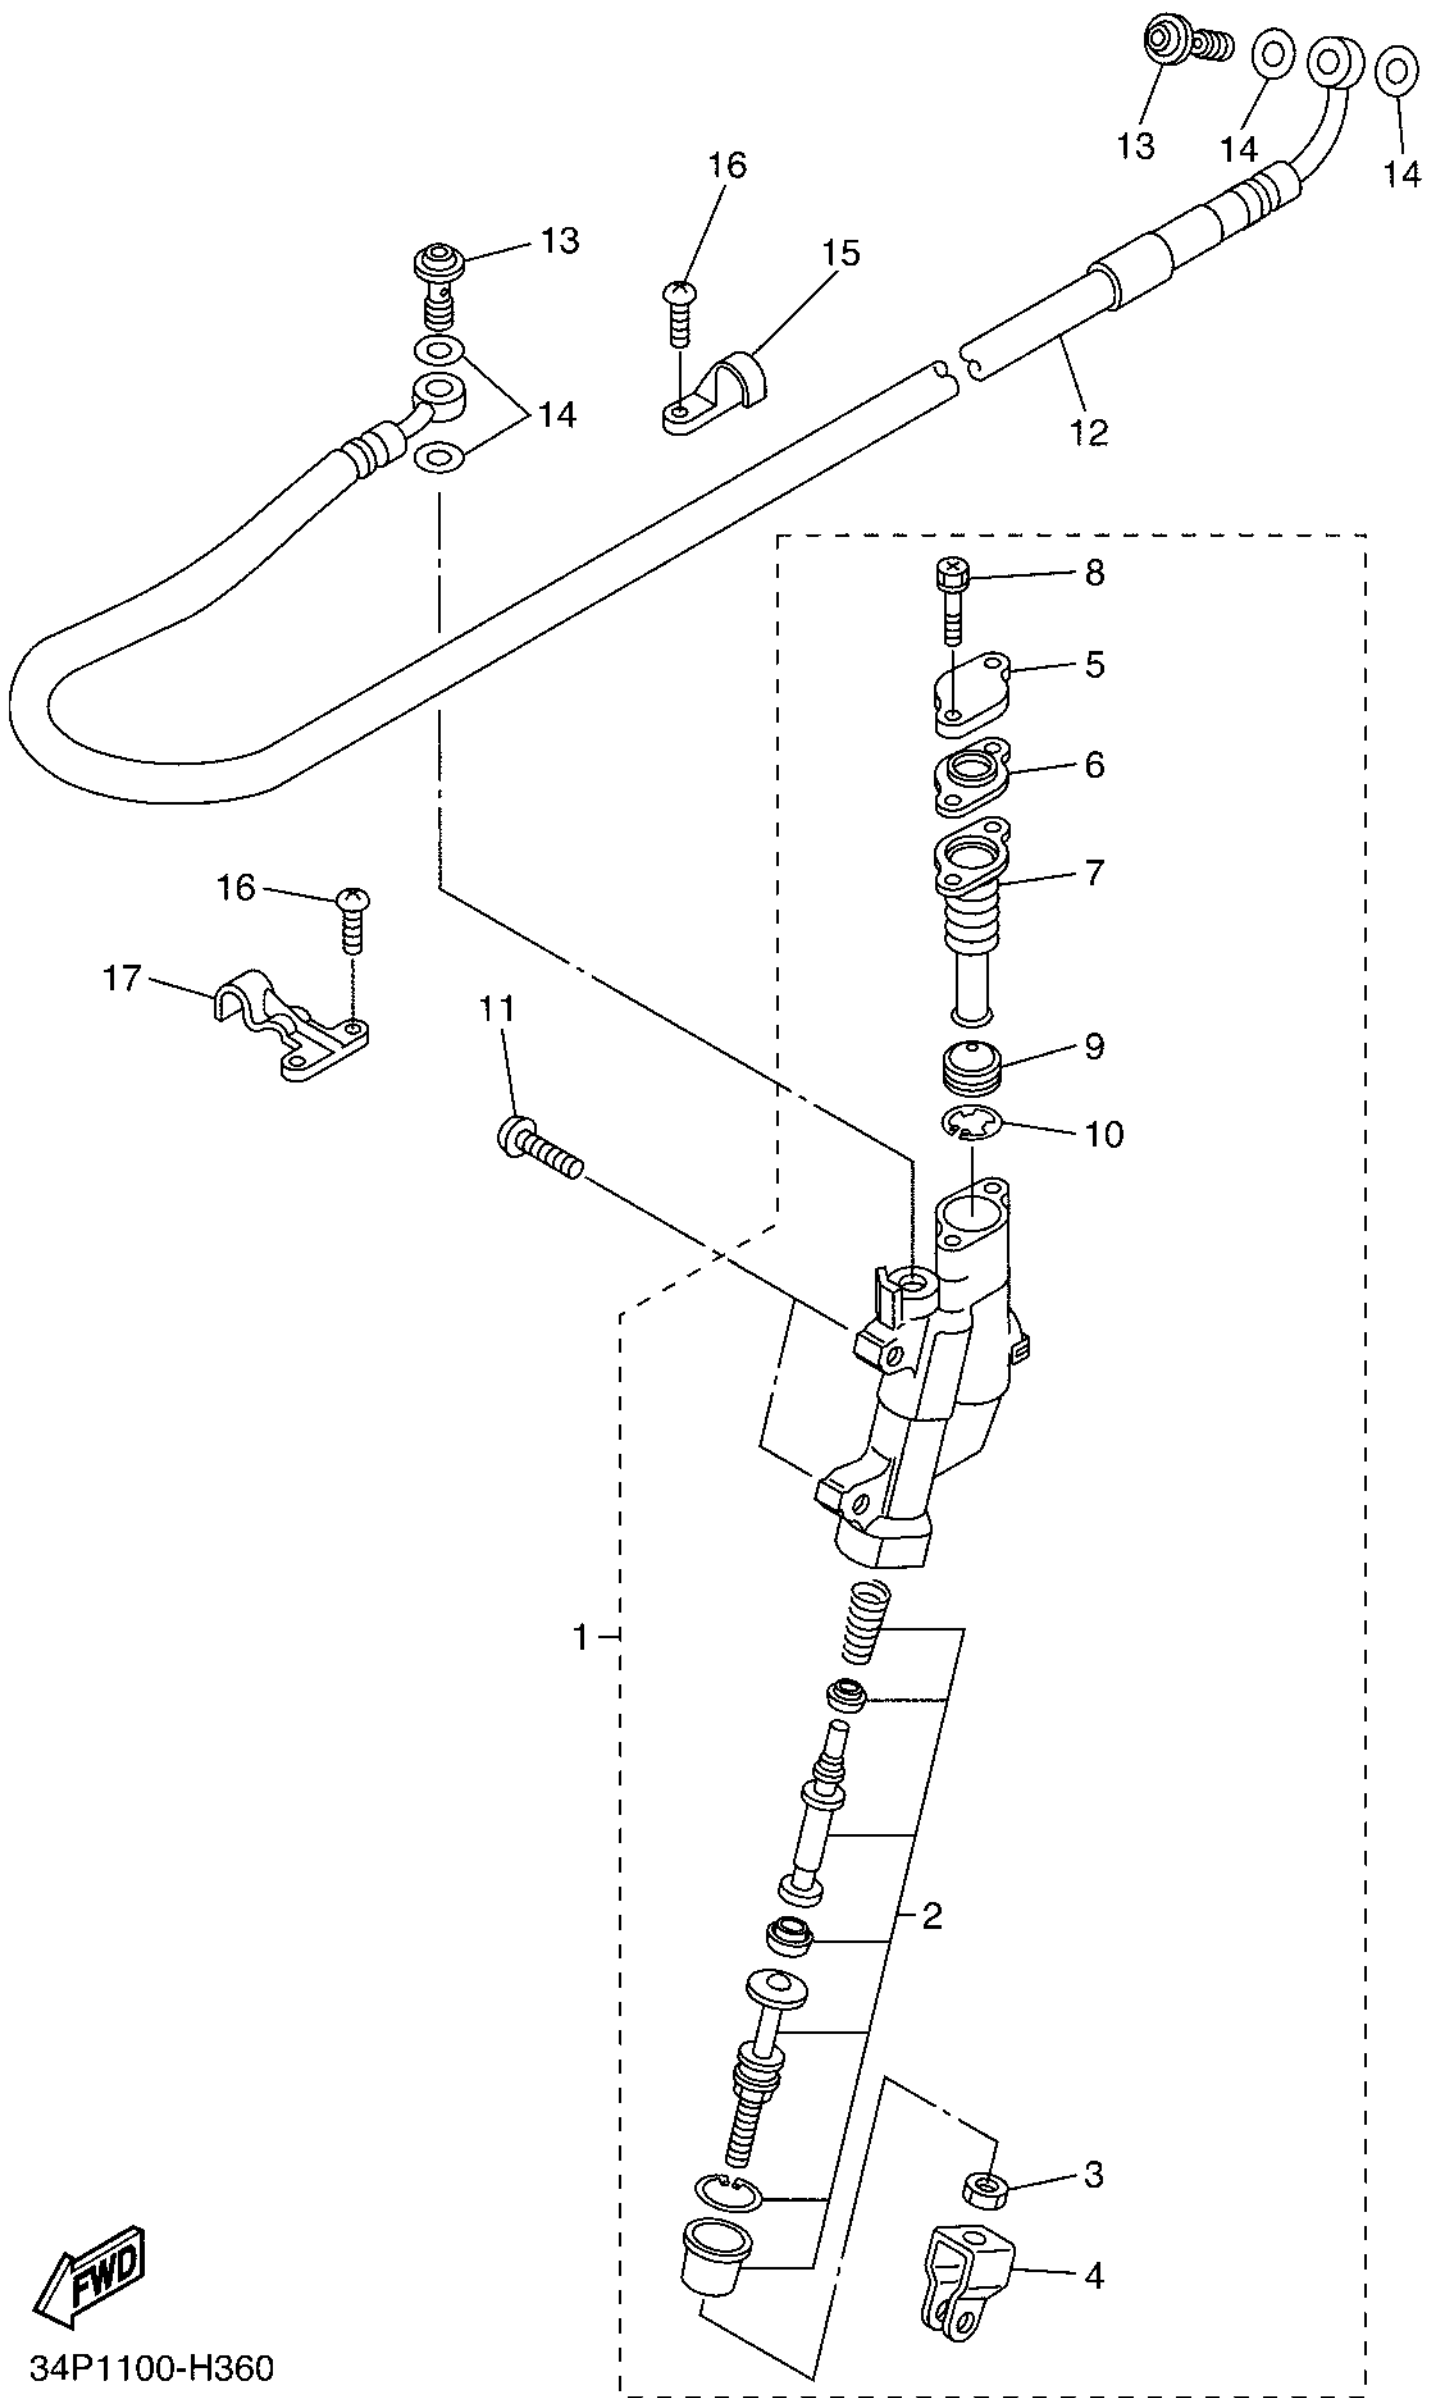

34P1100-H360

FIG. 36 REAR MASTER CYLINDER


REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	17D–2583V–00	RR. MASTER CYLINDER ASSY.	1	1	1	1		
2	5UN–W0042–50	.CYLINDER KIT, MASTER	1	1	1	1		
3	5UN–27218–00	.NUT	1	1	1	1		
4	5UN–27222–00	.JOINT	1	1	1	1		
5	5UN–25852–50	.CAP, RESERVOIR	1	1	1	1		
6	5UN–2585B–00	.PLATE, DIAPHRAGM	1	1	1	1		
7	5UN–25854–00	.GASKET, DIAPHRAGM	1	1	1	1		
8	5UN–27217–00	.BOLT	2	2	2	2		
9	5CG–25715–00	.SEPARATOR ASSY	1	1	1	1		
10	5CG–2585G–00	.CIRCLIP	1	1	1	1		
11	90111–06116	BOLT,HEX. SOCKET BUTTON	2	2	2	2		
12	5XC–25873–L0	HOSE, BRAKE 2	1	1	1	1		
13	90401–10172	BOLT, UNION	2	2	2	2		
14	90430–10005	GASKET	4	4	4	4		
15	1C3–25886–50	HOLDER, BRAKE HOSE	1	1	1	1		
16	98502–05010	SCREW, PAN HEAD	4	4	4	4		
17	1C3–25876–50	HOLDER, BRAKE HOSE 2	1	1	1	1		

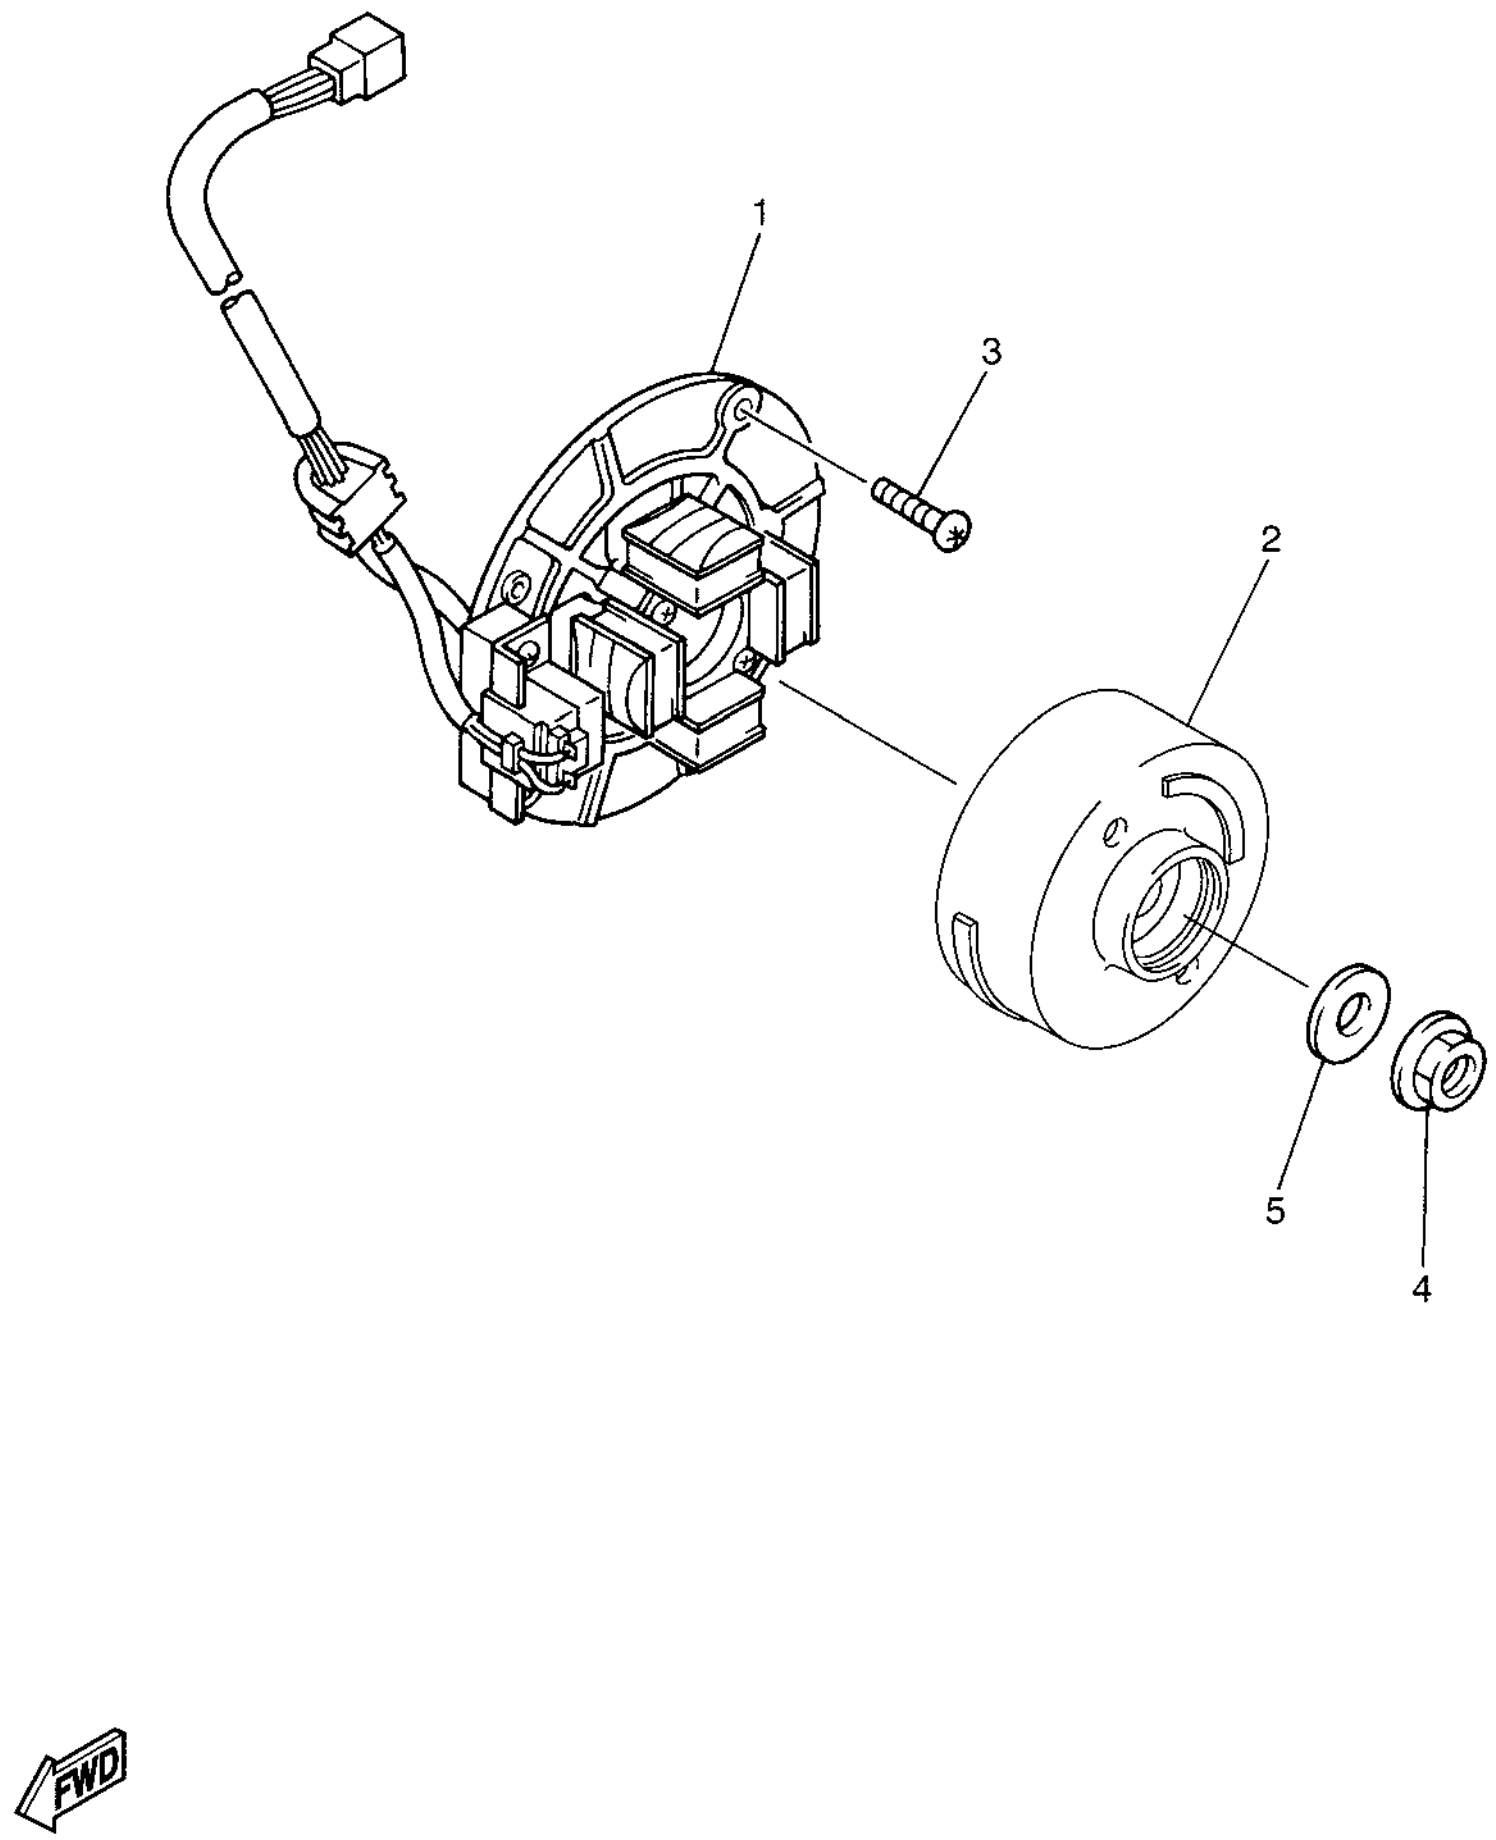

5TA1100-B360

FIG. 37 GENERATOR


REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5XC–85560–10	BASE ASSY	1	1	1	1		
2	5TA–85550–00	ROTOR ASSY	1	1	1	1		
3	90149–06121	SCREW	3	3	3	3		
4	90179–12657	NUT	1	1	1	1		
5	90201–127E1	WASHER, PLATE	1	1	1	1		

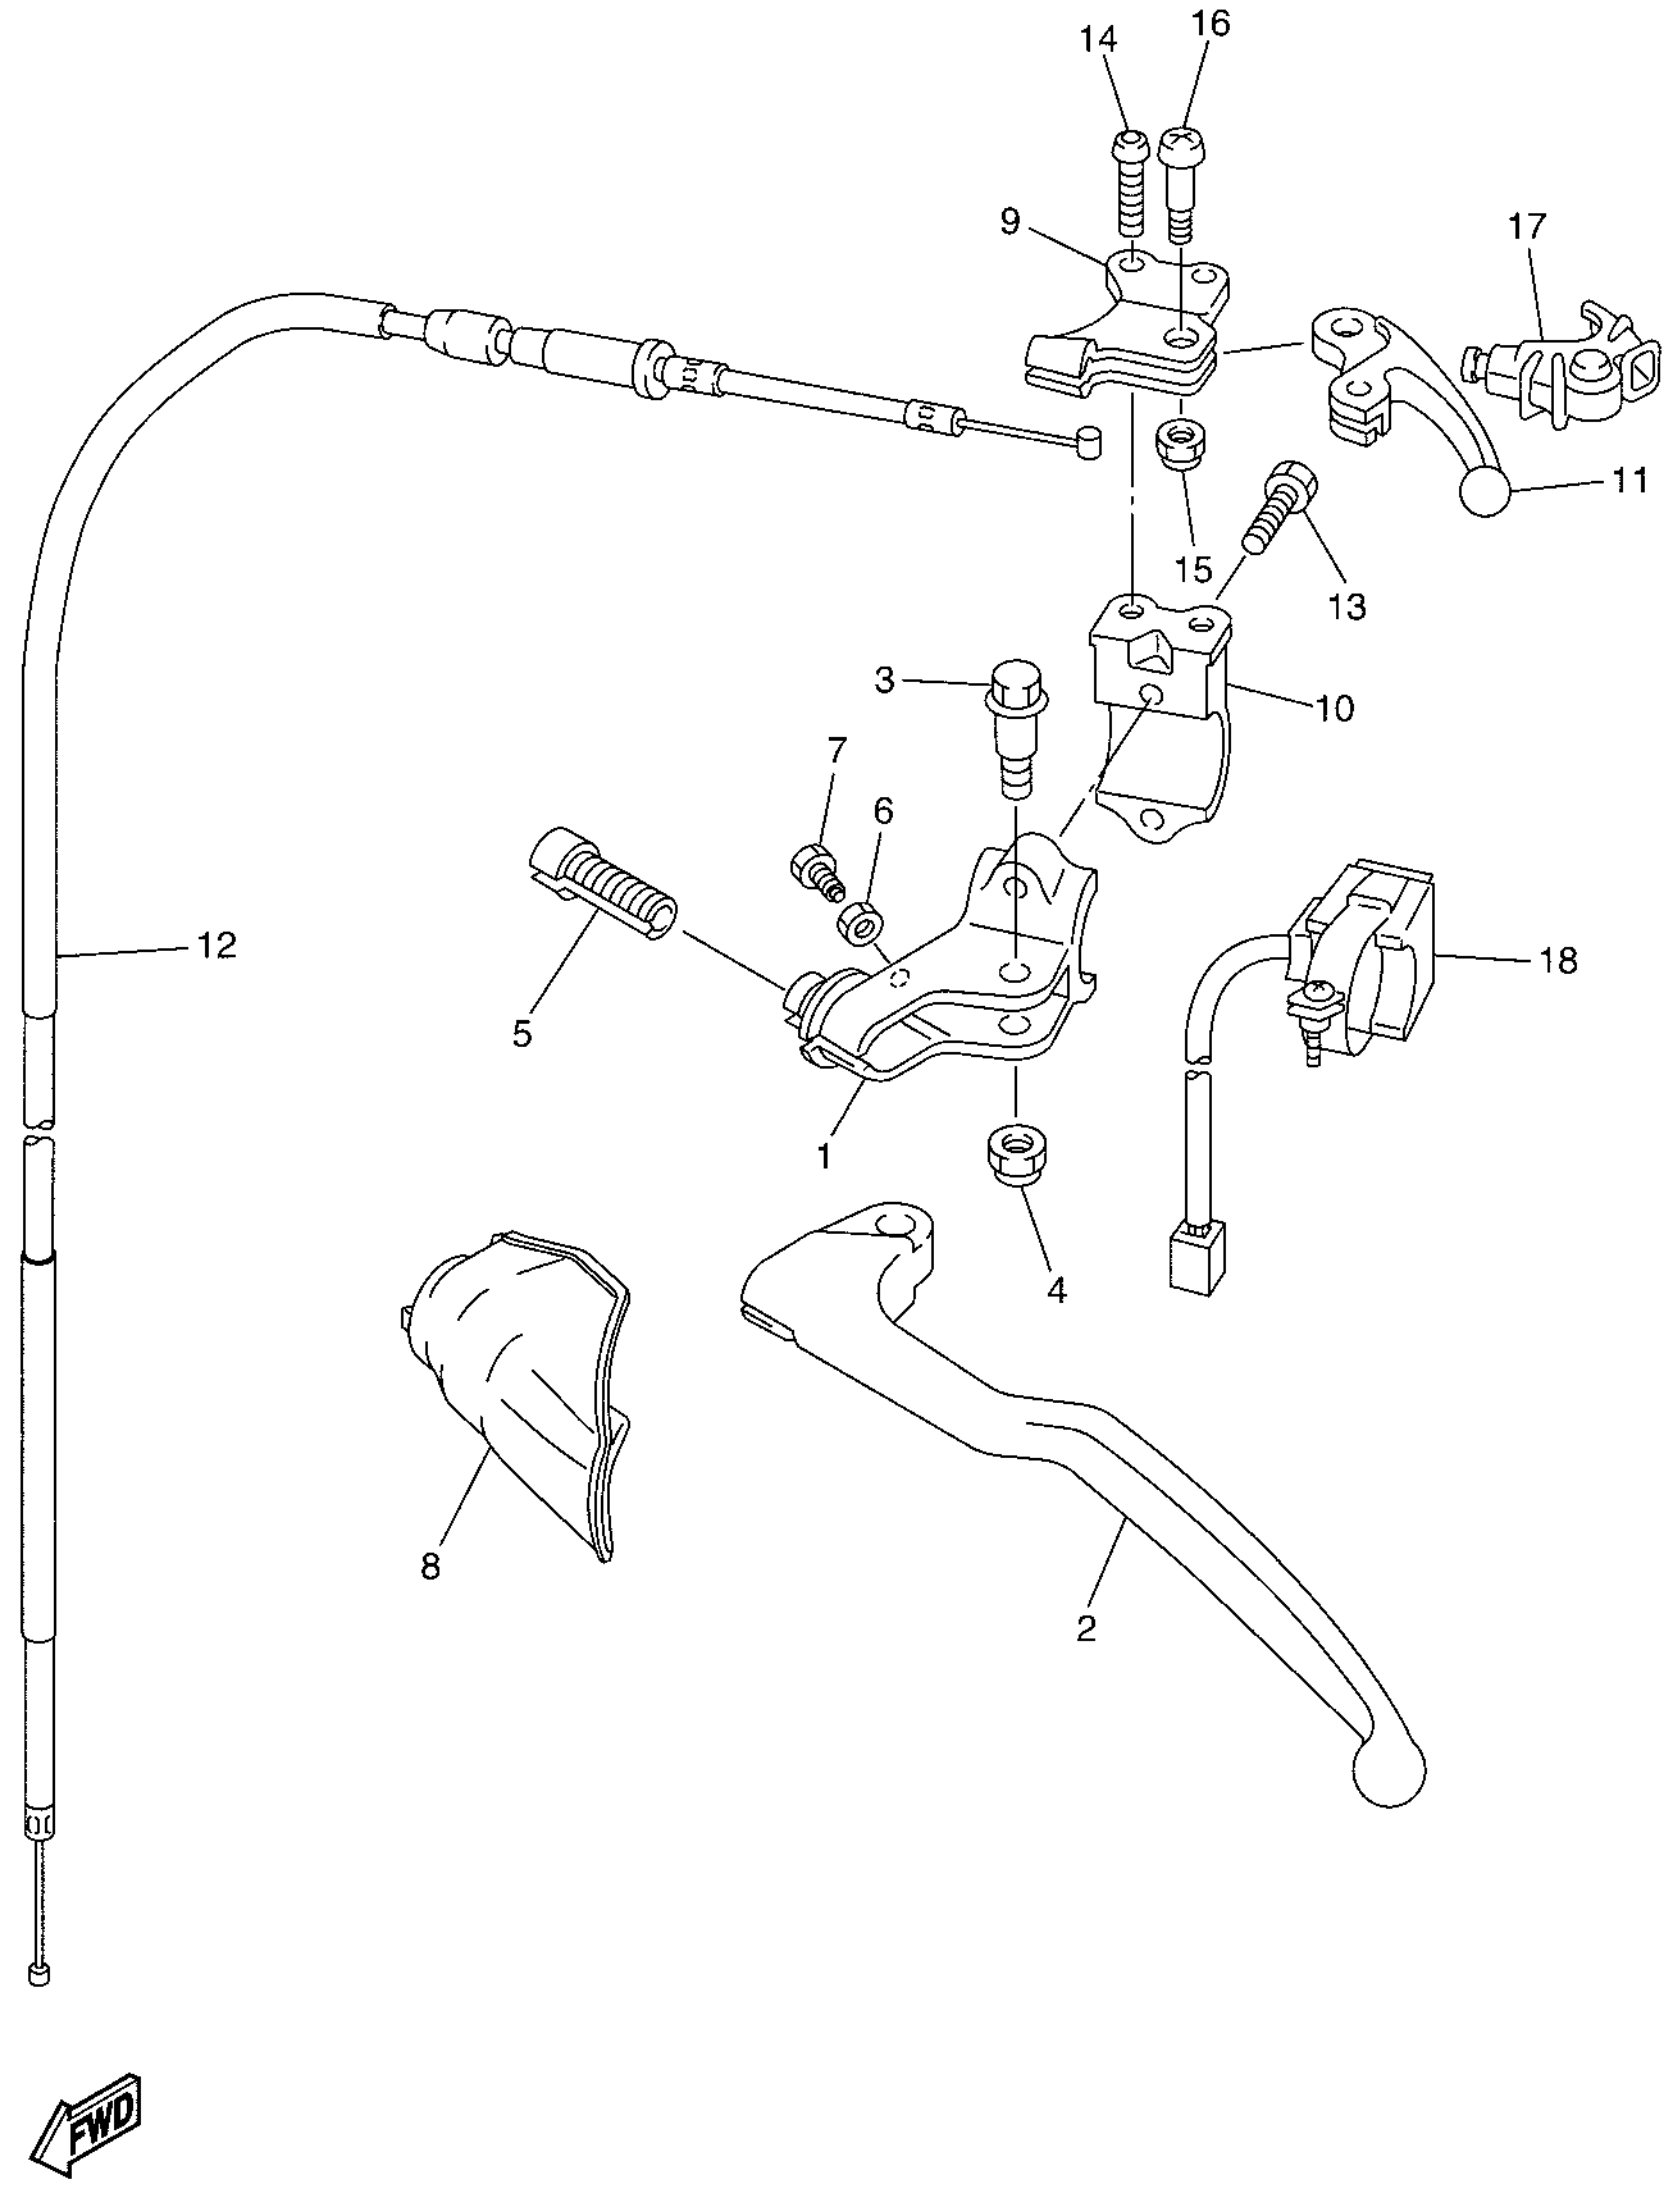

34P1100-H380

FIG. 38 HANDLE SWITCH & LEVER


REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	17D–82911–00	HOLDER, LEVER 1	1	1	1	1		
2	17D–83912–00	LEVER 1	1	1	1	1		
3	90109–06034	BOLT	1	1	1	1		
4	5LP–84126–10	NUT, LENS FITTING	1	1	1	1		
5	17D–26337–00	BOLT, ADJUSTING	1	1	1	1		
6	95302–05700	NUT	1	1	1	1		
7	90101–05005	BOLT	1	1	1	1		
8	34P–26372–00	COVER, HANDLE LEVER 1	1	1	1	1		
9	5XD–82946–00	HOLDER, STARTER LEVER	1	1	1	1		
10	17D–82913–00	HOLDER, LEVER LOWER 1	1	1	1	1		
11	5TA–83941–00	LEVER, STARTER	1	1	1	1		
12	5XC–26334–R0	CABLE, STARTER 2	1	1	1	1		
13	95022–06020	BOLT, FLANGE	2	2	2	2		
14	92012–05012	BOLT, BUTTON HEAD	2	2	2	2		
15	95602–05100	NUT, U	1	1	1	1		
16	90149–05162	SCREW	1	1	1	1		
17	5TA–26339–00	BOOT	1	1	1	1		
18	1C3–83976–00	SWITCH, HANDLE 1	1	1	1	1		

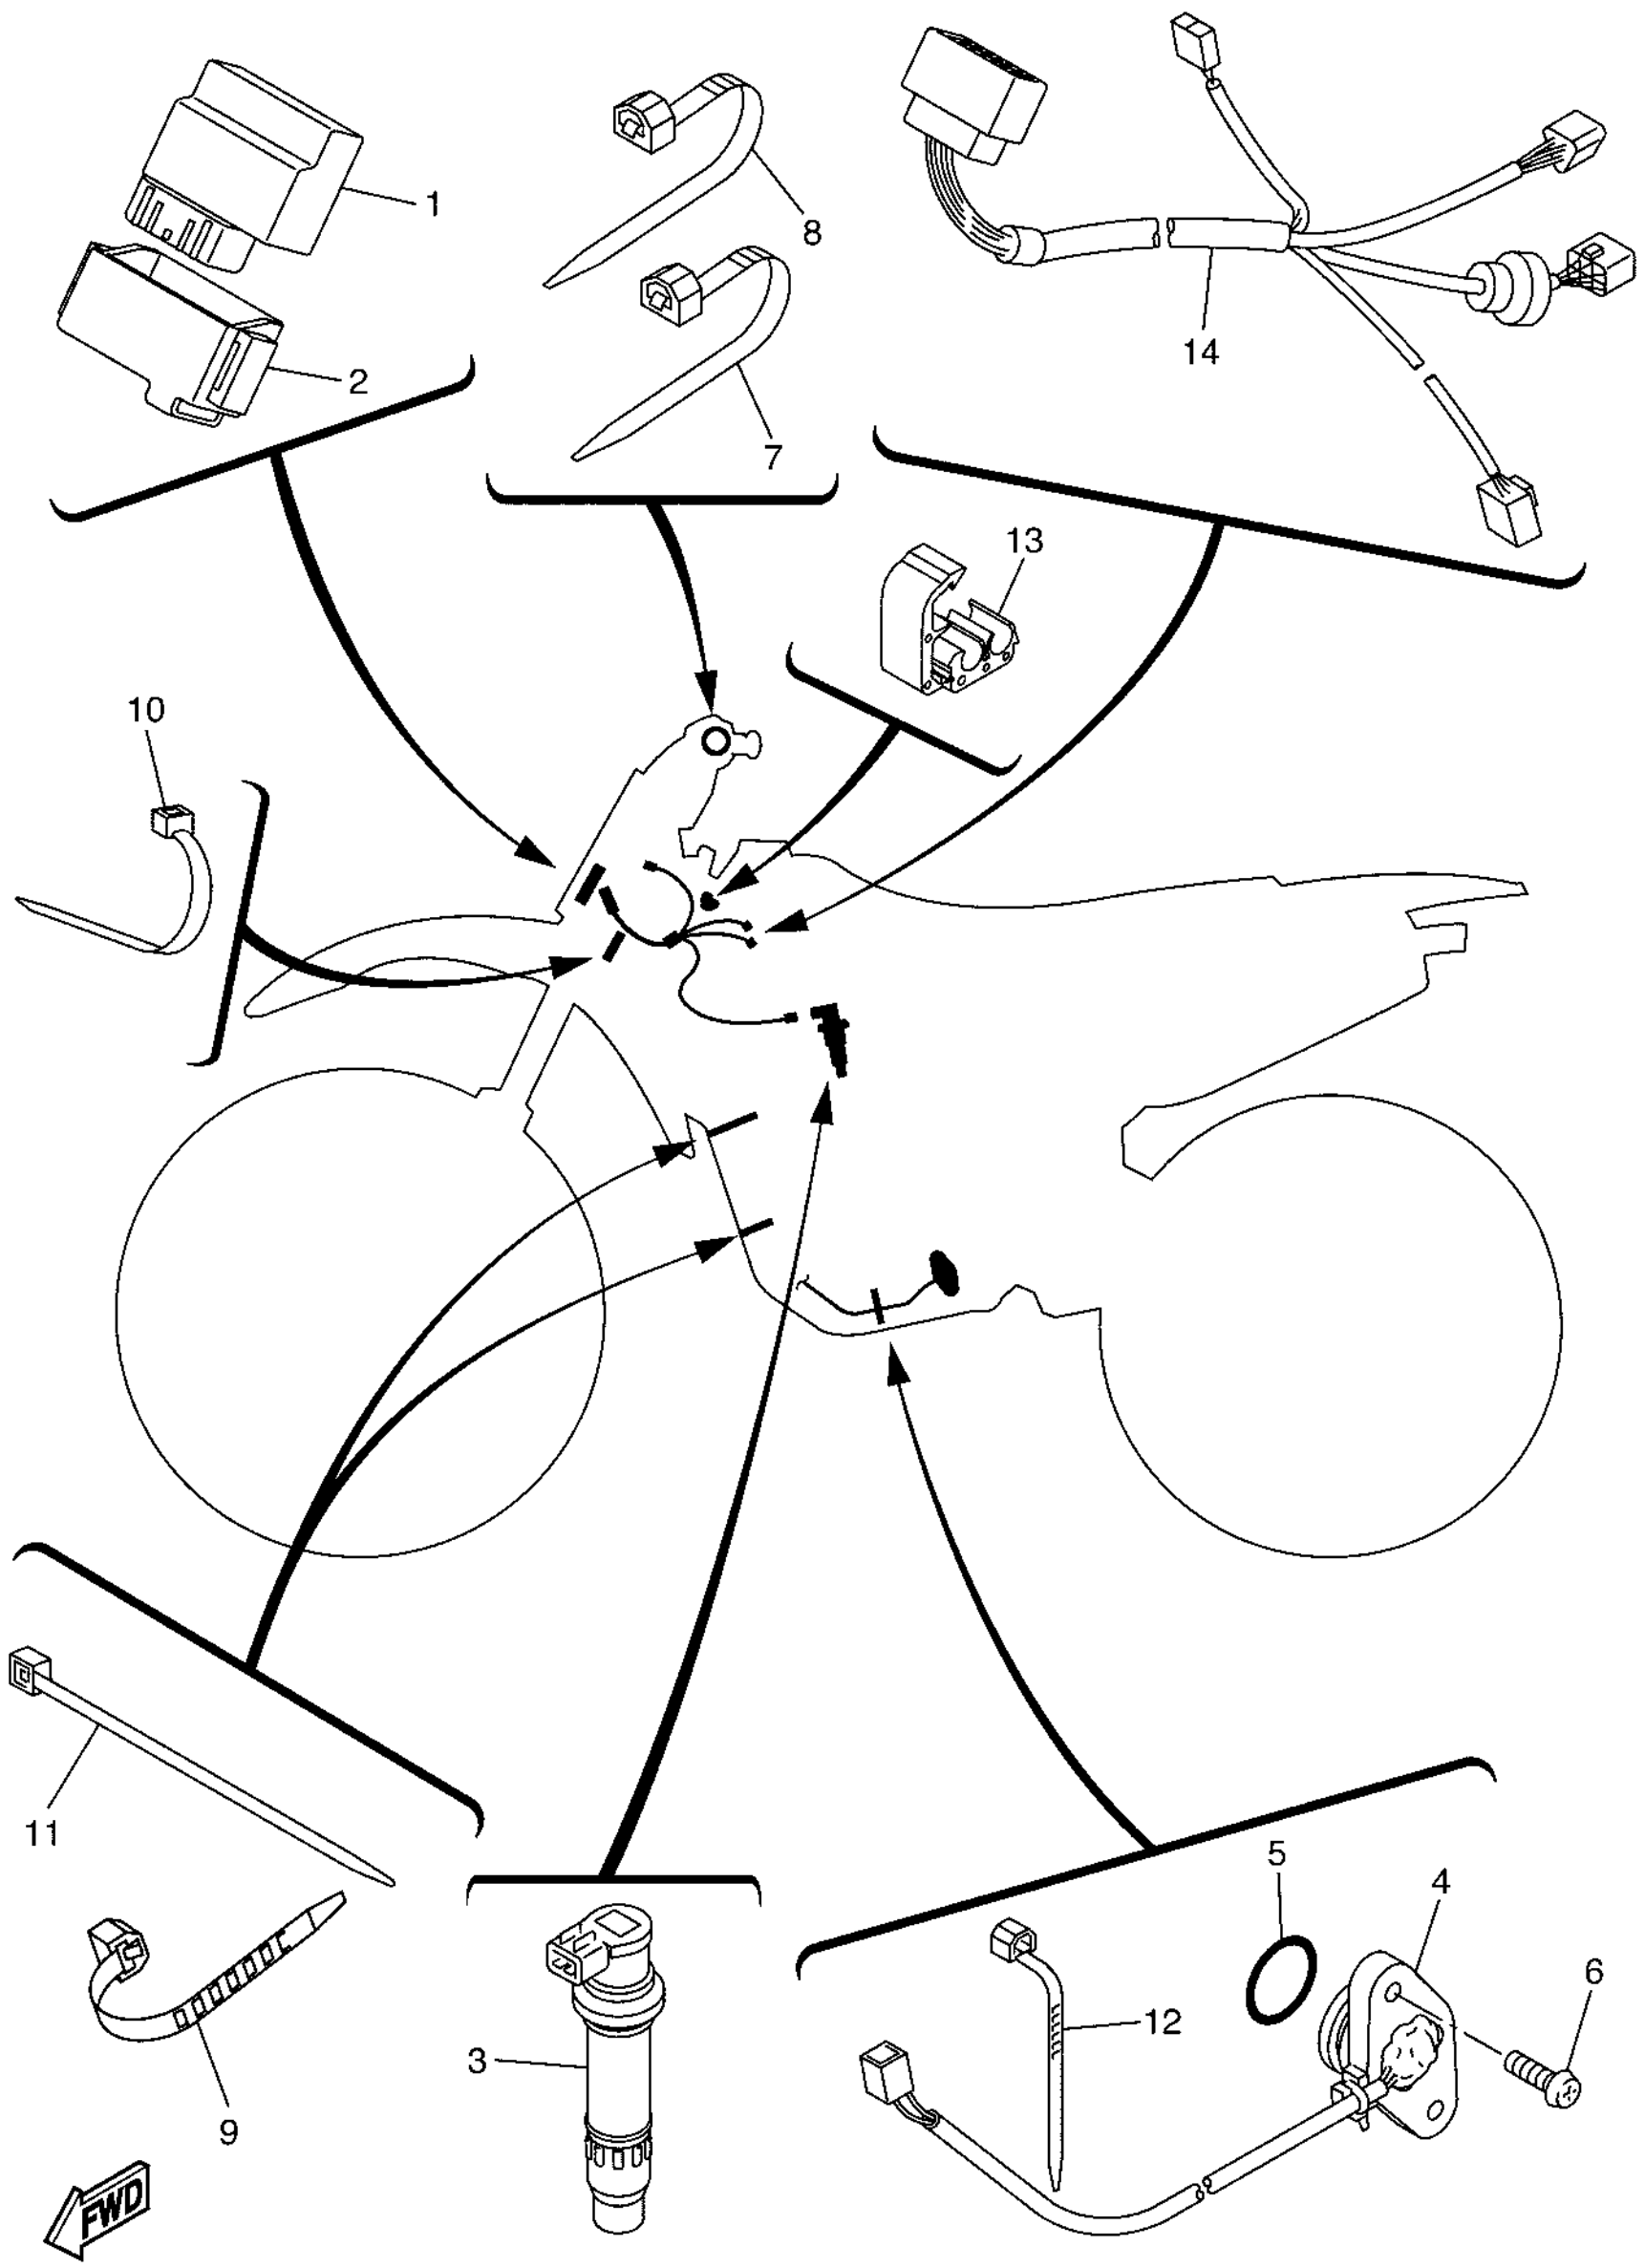

5XCR100-H390

FIG. 39 ELECTRICAL 1


REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5XC–85540–R0	C.D.I. UNIT ASSY	1					
	5XC–85540–S0	C.D.I. UNIT ASSY		1	1	1		
2	1C3–85546–00	BAND	1	1	1	1		
3	5UL–82310–10	IGNITION COIL ASSY	1	1	1	1		
4	5XC–82540–00	NEUTRAL SWITCH ASSY	1	1	1	1		
5	93210–21001	O-RING	1	1	1	1		
6	90154–05022	SCREW, BINDING	2	2	2	2		
7	90464–13077	CLAMP	1	1	1	1		
8	90464–13073	CLAMP	1	1	1	1		
9	90464–15195	CLAMP	1	1	1	1		
10	5Y9–12491–00	CLAMP 1	1	1	1	1		
11	90465–13275	CLAMP	4	4	4	4		
12	5Y9–12491–00	CLAMP 1	2	2	2	2		
13	90464–06004	CLAMP	1	1	1	1		
14	5XC–82509–00	WIRE, SUB LEAD	1	1	1	1		

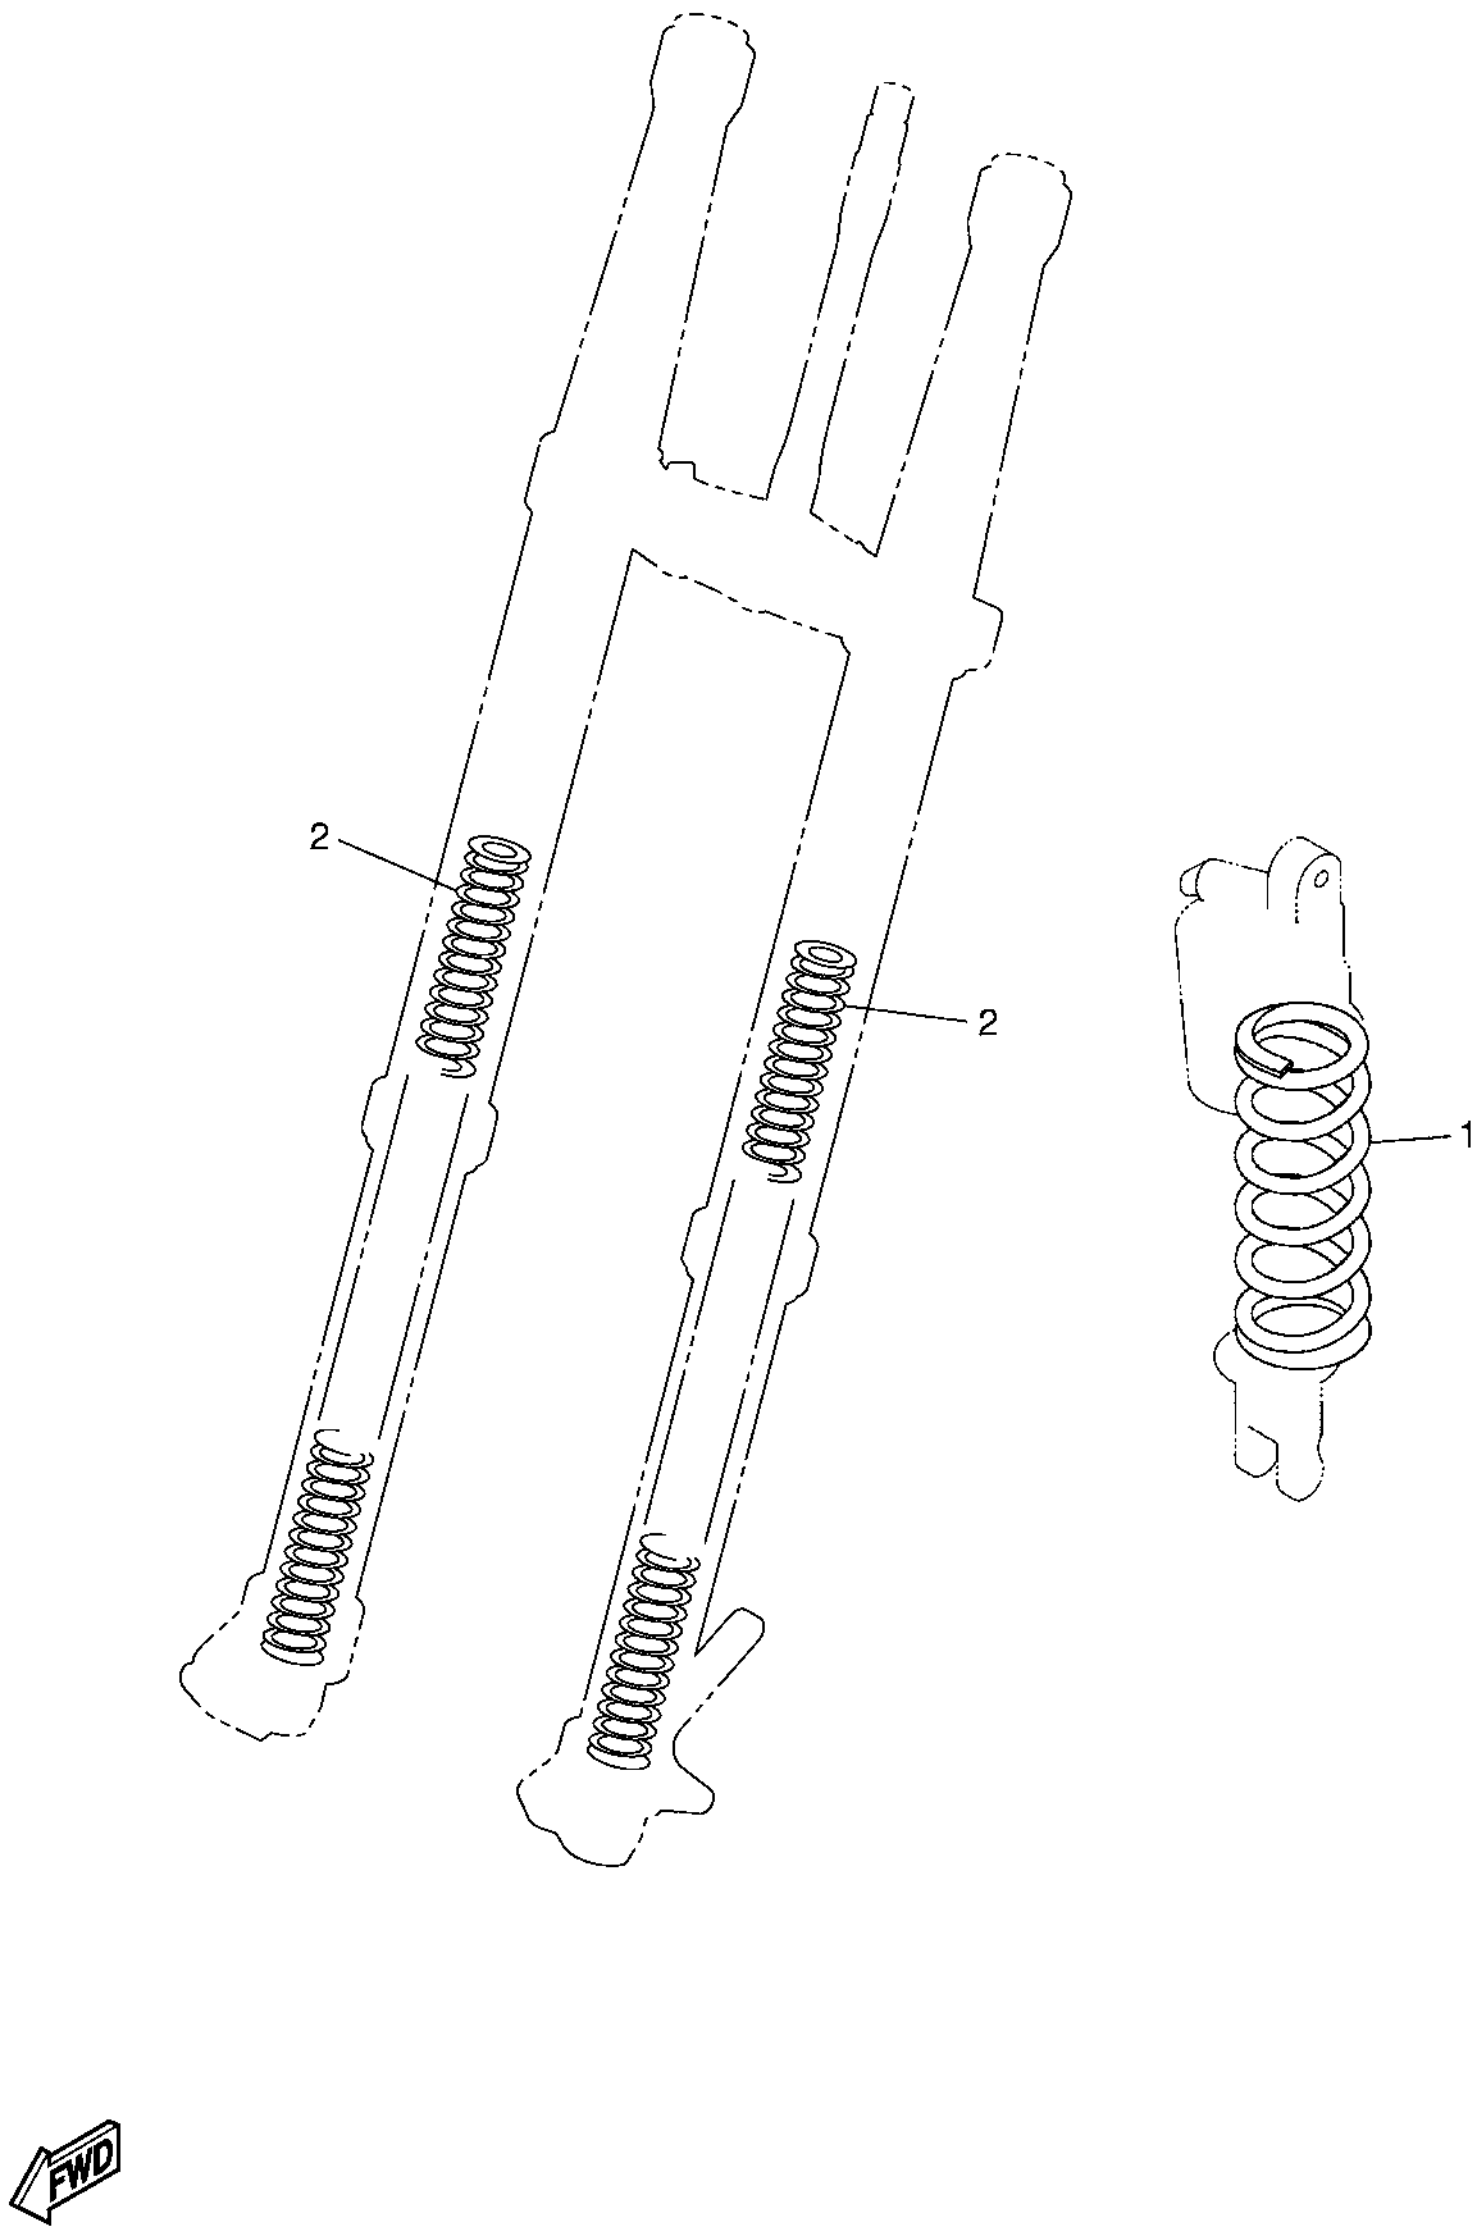

5XC9100-E390

FIG. 40 ALTERNATE FOR CHASSIS

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
1	5UN–22212–00	SPRING (K=42N/MM)	1	1	1	1		AP
	5UN–22212–10	SPRING (K=44N/MM)	1	1	1	1		AP
	5UN–22212–20	SPRING (K=46N/MM)	1	1	1	1		AP
	5UN–22212–30	SPRING (K=48N/MM)	1	1	1	1		AP
	5UN–22212–40	SPRING (K=50N/MM)	1	1	1	1		AP
	5UN–22212–60	SPRING (K=54N/MM)	1	1	1	1		AP
	5UN–22212–70	SPRING (K=56N/MM)	1	1	1	1		AP
	1C3–22212–00	SPRING (K=44N/MM)	1	1	1	1		AP
	1C3–22212–10	SPRING (K=46N/MM)	1	1	1	1		AP
	1C3–22212–20	SPRING (K=48N/MM)	1	1	1	1		AP
	1C3–22212–30	SPRING (K=50N/MM)	1	1	1	1		AP
	1C3–22212–40	SPRING (K=52N/MM)	1	1	1	1		AP
	1C3–22212–50	SPRING (K=54N/MM)	1	1	1	1		AP
	1C3–22212–60	SPRING (K=55.8N/MM)	1	1	1	1		AP
	5UN–22212–A0	SPRING (K=APPROX.44N/MM)	1	1	1	1		AP
	5UN–22212–B0	SPRING (K=APPROX.46N/MM)	1	1	1	1		AP
	5UN–22212–C0	SPRING (K=APPROX.48N/MM)	1	1	1	1		AP
	5UN–22212–D0	SPRING (K=APPROX.50N/MM)	1	1	1	1		AP
	5UN–22212–E0	SPRING (K=APPROX.52N/MM)	1	1	1	1		AP
	5UN–22212–F0	SPRING (K=APPROX.54N/MM)	1	1	1	1		AP
	5UN–22212–G0	SPRING (K=APPROX.56N/MM)	1	1	1	1		AP
2	1C3–23141–A1	SPRING, FRONT FORK(K=3.9N/MM)	2	2	2	2		AP
	1C3–23141–B1	SPRING, FRONT FORK(K=4.0N/MM)	2	2	2	2		AP
	1C3–23141–C1	SPRING, FRONT FORK(K=4.1N/MM)	2	2	2	2		AP
	1C3–23141–D1	SPRING, FRONT FORK(K=4.2N/MM)	2	2	2	2		AP
	1C3–23141–E1	SPRING, FRONT FORK(K=4.3N/MM)	2	2	2	2		AP
	1C3–23141–H1	SPRING, FRONT FORK(K=4.6N/MM)	2	2	2	2		AP

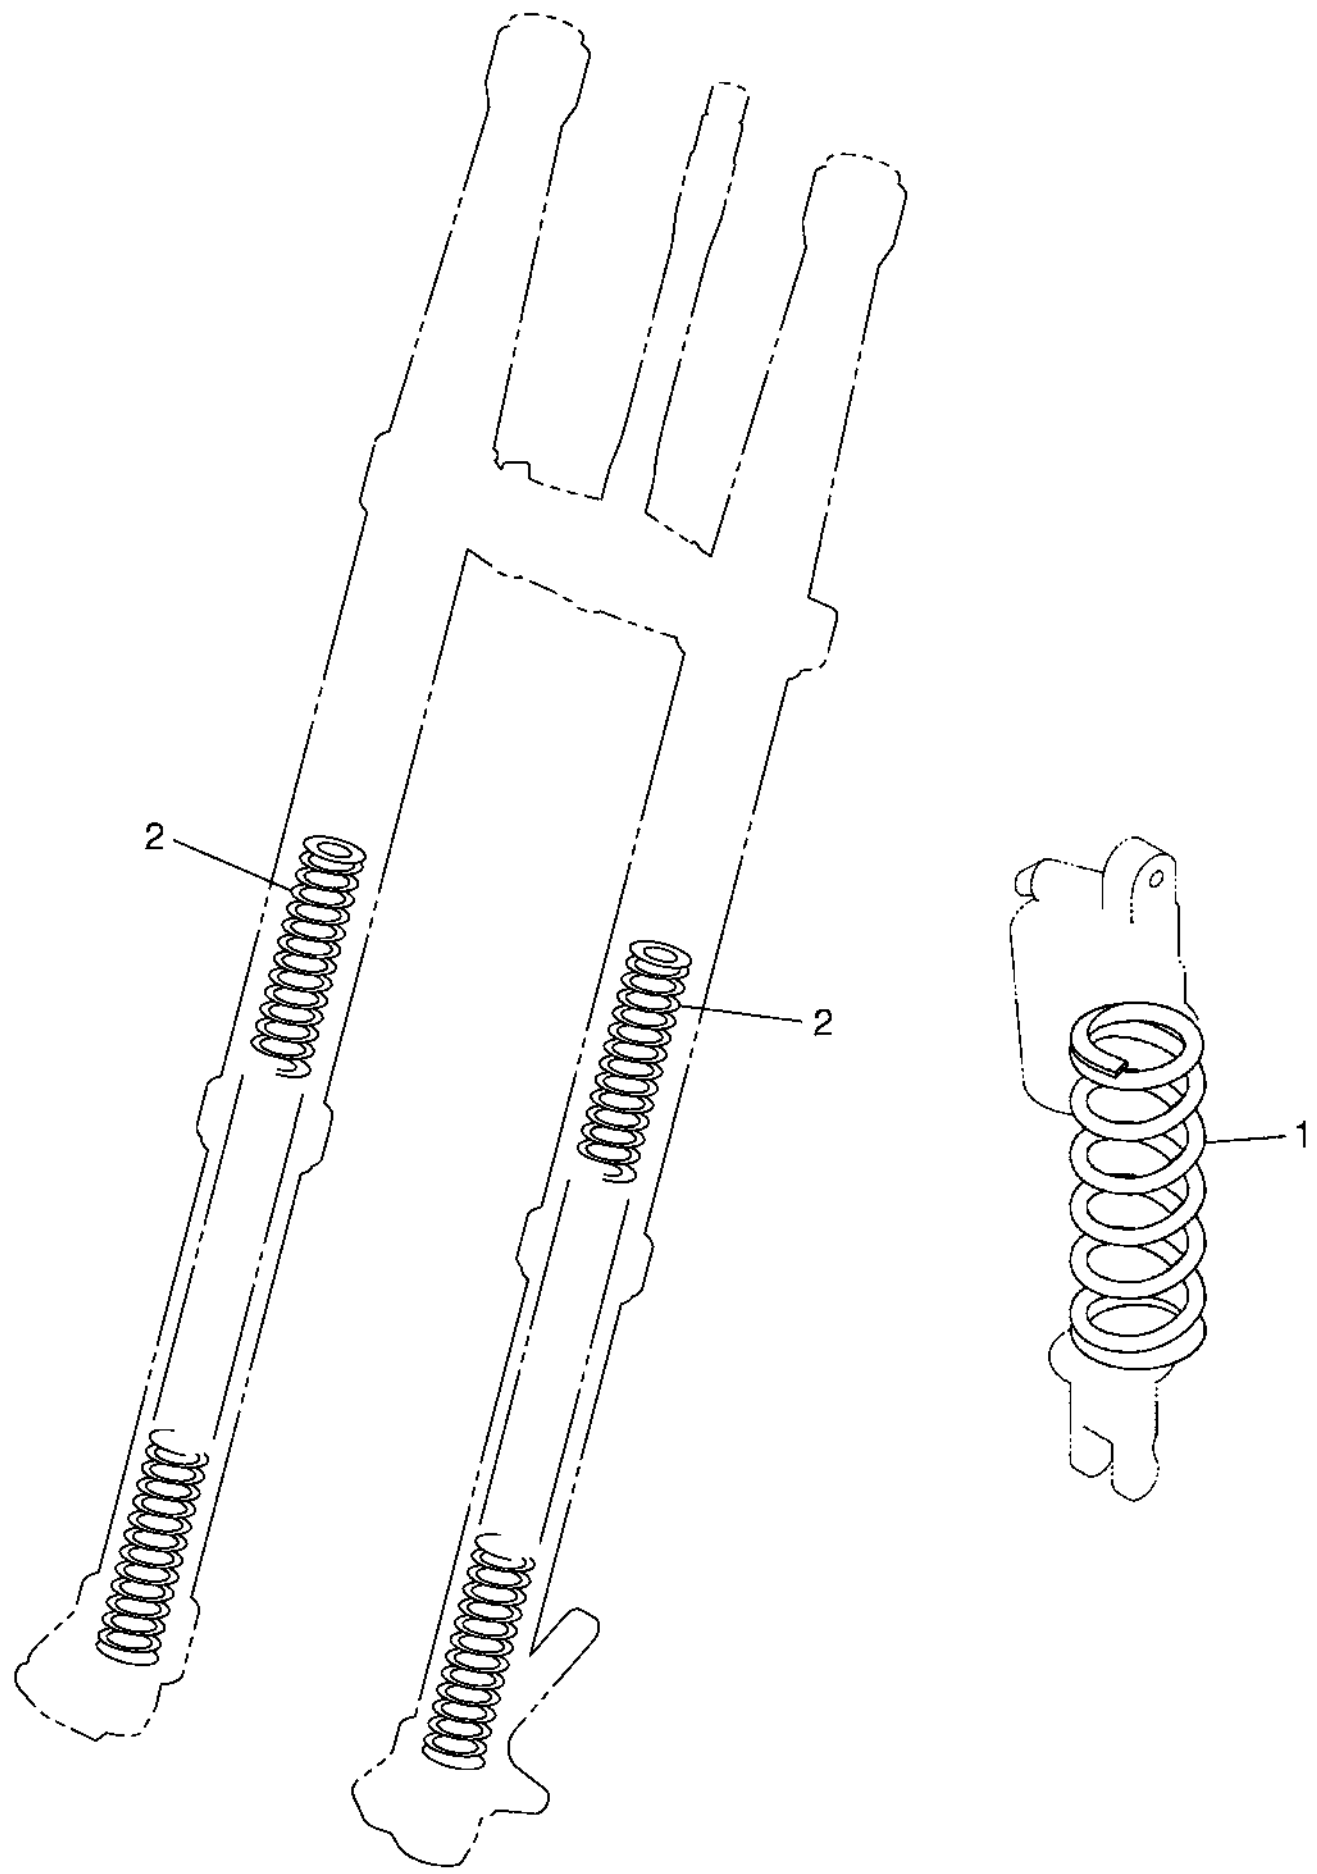



5XC9100-E390

FIG. 40 ALTERNATE FOR CHASSIS

REF. NO.	PART NO.	DESCRIPTION	5XCR	5XCS	5XCT	5XCU		REMARKS
2	1C3–23141–J1	SPRING, FRONT FORK(K=4.7N/MM)	2	2	2	2		AP

NUMERICAL INDEX

PART NO.	REF. NO.
5NL–17466–00	13 – 11
5NL–17471–10	17 – 29
5UL–18101–10	19 – 10
5XC–18110–10	19 – 15
5LP–18122–01	19 – 5
3XK–18140–00	18 – 8
5BE–18172–00	19 – 3
3XJ–18173–10	19 – 2
3XJ–18178–00	19 – 9
3XJ–18182–00	19 – 8
3XJ–18184–00	19 – 7
2S2–18185–00	19 – 1
5NL–18501–00	18 – 5
5NL–18502–00	18 – 6
5NL–18503–00	18 – 7
5NL–18541–00	18 – 1
4UN–18542–00	18 – 4
5DH–18562–00	13 – 18
5XC–21101–R1	20 – 1
5XC–21163–90	20 – 45
5XC–21164–90	20 – 46
5PA–2118K–00	21 – 18
5PA–2118K–10	21 – 19
5PA–2118K–20	21 – 18
5XC–21190–L0	20 – 5
1C3–21244–10	20 – 32
5XC–21274–90	20 – 43
5XC–21288–90	20 – 48
5XC–21417–G0	20 – 33
5XC–21418–G0	20 – 34
5XC–21425–G0	20 – 23
5XC–21426–G0	20 – 24
1C3–21447–10	20 – 2
1C3–21448–10	20 – 3
5XC–21456–90	20 – 37
5XC–21471–90	20 – 38
5XC–2147E–G0	20 – 40
5XC–21486–90	20 – 42
1C3–21511–51	21 – 1
2S2–21511–70	21 – 1
4LB–2151H–02	21 – 20
3XJ–2151H–A1	21 – 20
3XJ–2151H–B1	21 – 21
4XL–2153A–10	26 – 53
	26 – 55
4ES–2153E–01	21 – 4
3WF–2153E–10	21 – 17
4ES–2153E–20	21 – 4

PART NO.	REF. NO.
3WF–2153E–40	21 – 17
5RU–21568–01	21 – 22
2S2–21610–70	21 – 8
5XC–21610–90	21 – 8
5XE–21635–10	21 – 9
5TA–21642–00	21 – 15
3RV–21668–A0	23 – 32
3RV–21668–B0	23 – 33
34P–2167A–00	22 – 2
34P–2167A–10	22 – 2
34P–2167B–00	22 – 6
34P–2167B–10	22 – 6
5XC–21710–90	22 – 1
5XC–21720–90	22 – 5
2S2–2172A–70	22 – 12
2S2–2172A–80	22 – 16
2S2–21730–70	22 – 9
5XC–21730–90	22 – 9
34P–2173L–10	22 – 10
5XC–2173L–40	22 – 10
2S2–21740–70	22 – 13
5XC–21740–90	22 – 13
34P–2174L–10	22 – 14
5XC–2174L–40	22 – 14
5XC–21751–G0	22 – 17
17D–22110–00	23 – 1
5XC–22121–91	23 – 28
34P–22122–00	23 – 29
2S2–22128–70	23 – 11
1C3–22141–10	23 – 15
34P–22151–00	23 – 8
5UN–22176–00	24 – 13
30X–22178–00	20 – 8
3JD–22178–20	20 – 13
17D–2217A–00	23 – 18
17D–2217F–00	23 – 24
4V4–22184–00	20 – 9
5MV–22184–00	24 – 14
2S2–22199–70	23 – 10
5XC–22200–30	24 – 1
5XC–22200–40	24 – 1
5XC–22200–60	24 – 1
5XC–22200–80	24 – 1
5XC–22200–90	24 – 1
5XC–22200–Y0	24 – 1
5XC–22201–30	24 – 2
5XC–22201–40	24 – 2
5XC–22201–60	24 – 2

PART NO.	REF. NO.
5XC–22201–80	24 – 2
5XC–22201–90	24 – 2
5XC–22201–Y0	24 – 2
1C3–22212–00	40 – 1
5UN–22212–00	40 – 1
1C3–22212–10	40 – 1
5UN–22212–10	40 – 1
1C3–22212–20	40 – 1
5UN–22212–20	40 – 1
1C3–22212–30	40 – 1
5UN–22212–30	40 – 1
1C3–22212–40	40 – 1
5UN–22212–40	40 – 1
1C3–22212–50	40 – 1
5UN–22212–50	24 – 17
1C3–22212–60	40 – 1
5UN–22212–60	40 – 1
5UN–22212–70	40 – 1
5UN–22212–A0	40 – 1
5UN–22212–B0	40 – 1
5UN–22212–C0	40 – 1
5UN–22212–D0	40 – 1
5UN–22212–E0	40 – 1
5UN–22212–F0	40 – 1
5UN–22212–G0	40 – 1
5UN–22212–K0	24 – 17
1C3–22213–L0	24 – 4
1C3–22214–50	24 – 18
5MV–22224–00	24 – 9
4JX–22226–00	24 – 6
3SP–22234–00	24 – 3
5NY–22241–00	24 – 22
5XE–22242–00	24 – 19
1C3–22253–50	24 – 10
1C3–22253–L0	24 – 15
4AA–22259–40	24 – 8
4AA–22259–50	24 – 8
4AA–22259–60	24 – 8
4EW–22474–00	24 – 12
3JE–22475–00	24 – 11
5NY–22475–00	24 – 16
5UN–22898–60	32 – 12
1C3–22969–90	23 – 9
5XC–23102–R0	26 – 1
5XC–23102–S0	26 – 1
5XC–23103–R0	26 – 25
5XC–23103–S0	26 – 25
5XC–23110–N0	26 – 27

PART NO.	REF. NO.
5XC–23111–00	26 – 21
	26 – 45
276–23114–00	26 – 23
	26 – 47
5XC–23120–N0	26 – 3
5XE–23125–L0	26 – 5
	26 – 29
5XC–23136–00	26 – 2
	26 – 26
1C3–23141–A1	40 – 2
1C3–23141–B1	40 – 2
1C3–23141–C1	40 – 2
1C3–23141–D1	40 – 2
1C3–23141–E1	40 – 2
1C3–23141–H1	40 – 2
1C3–23141–J1	40 – 2
2S2–23141–M1	26 – 20
	26 – 44
5XC–23141–N0	26 – 20
	26 – 44
1C3–23142–L0	26 – 19
	26 – 43
5XE–23144–L0	26 – 9
	26 – 33
1C3–23145–M0	26 – 7
	26 – 31
5XC–23146–10	26 – 6
	26 – 30
1AE–23147–00	26 – 17
	26 – 41
1C3–23147–L0	26 – 11
	26 – 35
5XC–2314F–00	26 – 24
	26 – 48
5XE–23153–L0	26 – 8
	26 – 32
2HH–23158–L0	26 – 22
	26 – 46
5XC–2315H–00	26 – 52
5XC–2315J–00	26 – 54
5XC–2316A–V0	26 – 12
	26 – 36
5XC–2316A–W0	26 – 12
	26 – 36
5XC–23170–R0	26 – 10
	26 – 34
5XC–23170–S0	26 – 10
	26 – 34

PART NO.	REF. NO.
5XE–23171–L0	26 – 4
	26 – 28
5DH–23183–00	24 – 7
509–23184–L0	24 – 5
1C3–23188–L0	26 – 13
	26 – 37
1C3–23188–N0	26 – 14
	26 – 38
1C3–23188–P0	26 – 15
	26 – 39
1C3–23188–R0	26 – 16
	26 – 40
1C3–23190–L0	26 – 18
	26 – 42
5XC–23340–P0	26 – 49
5XE–23389–00	25 – 15
4EW–23416–00	25 – 2
17D–23435–00	25 – 5
5XC–23441–90	25 – 8
5UM–23442–E0	25 – 9
17D–23466–00	26 – 57
17D–23467–00	26 – 58
1C3–23485–61	25 – 13
2S2–24110–70	27 – 1
4EW–2412F–00	27 – 19
5XE–24144–00	27 – 6
3ME–2415E–01	21 – 23
3FB–2415E–02	21 – 5
3FB–2415E–12	21 – 6
3FB–2415E–C1	21 – 5
4SR–2416E–00	21 – 7
5XC–24181–90	27 – 21
5XC–24182–90	27 – 31
5XC–24183–90	27 – 32
3JD–24186–00	27 – 11
5UM–2419A–E0	27 – 12
5XC–24311–G0	27 – 27
5XC–24339–90	27 – 14
3XJ–24380–00	27 – 4
4JT–24500–10	27 – 22
4X8–24512–00	27 – 25
3AC–24523–00	27 – 26
3AJ–24534–01	27 – 23
5NY–24610–00	27 – 2
34P–2470F–00	28 – 2
34P–2470F–10	28 – 2
34P–2470F–20	28 – 2
34P–2470F–30	28 – 2

PART NO.	REF. NO.
34P–24710–00	28 – 1
34P–24710–10	28 – 1
34P–24710–20	28 – 1
34P–24710–30	28 – 1
5NY–25104–00	29 – 6
5NY–25111–00	29 – 1
5NY–25117–00	29 – 3
5XC–25181–G0	29 – 11
5XC–25183–G0	29 – 12
5XC–25186–G0	29 – 13
34P–25304–00	31 – 7
17D–2530S–00	31 – 18
17D–25311–00	31 – 1
17D–25317–00	31 – 2
4XM–25364–00	31 – 12
17D–25381–00	31 – 23
17D–25388–00	31 – 19
17D–25389–00	31 – 20
4XM–25394–00	31 – 11
5SF–25394–00	29 – 10
1C3–25447–00	31 – 13
1C3–25448–00	31 – 13
1C3–25449–00	31 – 13
1C3–25450–00	31 – 13
1C3–25451–00	31 – 13
1C3–25452–00	31 – 13
5CG–25715–00	34 – 9
	36 – 9
1C3–25718–50	32 – 19
5XC–2580T–G0	30 – 3
17D–2580W–01	32 – 3
17D–2580W–11	32 – 3
5XC–2581T–G0	30 – 1
1UY–25824–51	32 – 7
1UY–25825–51	32 – 8
5UN–25827–60	32 – 11
5UN–25828–60	32 – 10
2S2–2582W–70	32 – 1
5MV–25833–00	34 – 16
17D–2583V–00	36 – 1
5XC–25849–G0	30 – 15
5UN–25852–50	36 – 5
5XC–25852–G0	34 – 7
5XC–25853–G0	34 – 10
5UN–25854–00	36 – 7
5XC–25854–G0	34 – 6
5UN–2585B–00	36 – 6
5CG–2585G–00	34 – 11